

# UNCLASSIFIED

AD NUMBER
AD856377
NEW LIMITATION CHANGE
TO Approved for public release, distribution unlimited
FROM Distribution authorized to U.S. Gov't. agencies and their contractors; Administrative/Operational Use; Jun 1969. Other requests shall be referred to Deputy of Engineering, Directorate of Propulsion & Power Subsystem Engineering, ASNJD, Wright-Patterson AFB, OH 45433.
AUTHORITY
Aeronautical Systems Division ltr, 15 Sep 1971

THIS PAGE IS UNCLASSIFIED

SEG-TR-67-44

AD856377


## TURBOJET ENGINE ANALYZER SYSTEM

W. J. HARRIS

*The Garrett Corporation, Aircraft Research Manufacturing Company*

TECHNICAL REPORT SEG-TR-67-44

JUNE 1969

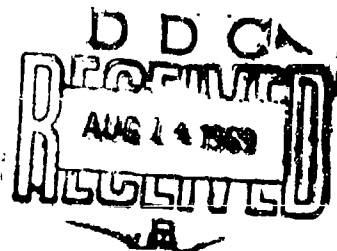

This document is subject to special export controls and each transmittal to foreign governments or foreign nationals may be made only with prior approval of Deputy of Engineering, Directorate of Propulsion & Power Subsystem Engineering, ASNJD, Wright-Patterson Air Force Base, Ohio 45433.

DEPUTY FOR ENGINEERING  
AERONAUTICAL SYSTEMS DIVISION  
AIR FORCE SYSTEMS COMMAND  
WRIGHT-PATTERSON AIR FORCE BASE, OHIO

# NOTICE

When Government drawings, specifications, or other data are used for any purpose other than in connection with a definitely related Government procurement operation, the United States Government thereby incurs no responsibility nor any obligation whatsoever; and the fact that the Government may have formulated, furnished, or in any way supplied the said drawings, specifications, or other data, is not to be regarded by implication or otherwise as in any manner licensing the holder or any other person or corporation, or conveying any rights or permission to manufacture, use, or sell any patented invention that may in any way be related thereto.

This document is subject to special export controls, and each transmittal to foreign governments or foreign nationals may be made only with prior approval of Deputy of Engineering, Directorate of Propulsion & Power Subsystem Engineering ASNJD, Wright-Patterson Air Force Base, Ohio.

The distribution of this report is limited because it includes information of test and evaluation requirements for equipment to assess service life and reliability of turbojet engines.

Restrictive legends on drawings included in this report do not apply.

ACCESSION NO.	
COPIES	SUITE SECTION
NO.	SUITE SECTION
/ UNCLASSIFIED	
CLASSIFICATION	
BY	
DISTRIBUTION/AVAILABILITY STATE	
DET.	AVAIL. AND/OR SPECIAL
2	

Copies of this report should not be returned unless return is required by security considerations, contractual obligations, or notice on a specific document.

SEG-TR-67-44

## **TURBOJET ENGINE ANALYZER SYSTEM**

*W. J. HARRIS*


This document is subject to special export controls and each transmittal to foreign governments or foreign nationals may be made only with prior approval of Deputy of Engineering, Directorate of Propulsion & Power Subsystem Engineering, ASNJ-D, Wright-Patterson Air Force Base, Ohio 45433.

## FOREWORD

The hardware covered in this report was developed under USAF Project 3147, Task 314701, by AIResearch Manufacturing Company, a Division of The Garrett Corporation, 2525 West 190th Street, Torrance, California, in response to Purchase Request 120143, initiated by Aeronautical Systems Division, Air Force Systems Command, United States Air Force. This research and development program, for a Turbojet Engine Analyzer System, was conducted in compliance with Contract AF 33(657)11503 covering a time period of May 1963-July 1965.

The project was administered for Aeronautical Systems Division, Directorate of Propulsion and Power Subsystems Engineering, Deputy for Engineering by Hollis G. Zerkle, (ASNJD), who served as Air Force Project Engineer

This technical report has been reviewed and is approved.

  
Richard M. Ellis, Chief  
Air Breathing Engine Branch  
Engine Development Division  
Directorate of Propulsion and  
Power Subsystems Engineering

## ABSTRACT

This report describes Turbojet Engine Analyzer Systems as developed for application to J75-19W and J79-15 engines. Included are descriptions and design details of each major system component. The theory of operation, the modular breakdown, the self-test provisions, and the adjustments of the components are presented. Similar material is included on the System Ground Calibrator, a piece of ground support equipment.

The system is designed to monitor, analyze, and assess complete turbojet engine performance during ground and flight operations for the purpose of detecting required maintenance and diagnosing incipient or actual failures.

This abstract is subject to special export controls, and each transmittal to foreign governments or foreign nationals may be made only with prior approval of Deputy of Engineering, Directorate of Propulsion & Power Subsystem Engineering, ASNJD, Wright-Patterson Air Force Base, Ohio.

## CONTENTS

<u>Paragraph</u>		<u>Page</u>
1.0	INTRODUCTION	1
2.0	DISCUSSION	3
2.1	General	3
2.2	Description of the F-105D System	3
2.2.1	Transducers	3
2.2.2	Computer/Display	14
2.2.3	Signal Data Translator	32
2.2.4	Recorder	52
2.3	Description of F-4C System	57
2.3.1	Transducers	57
2.3.2	Computer/Display	63
2.3.3	Signal Data Translator	67
2.3.4	Recorder	70
2.4	Ground Calibrator	70
2.4.1	Calibrator Sub-Units	75
2.4.2	Simulator Characteristics and Accuracy	80
<u>Appendix</u>		<u>Page</u>
I	Circuit Schematics for F-105D	85
II	Circuit Schematics for F-4C	115
III	Circuit Schematics for F-105D and F-4C System Ground Calibrator	149

## ILLUSTRATIONS

<u>Figure</u>		<u>Page</u>
1	Turbojet Engine Analyzer System Functional Block Diagram (J75-19W Engine)	4
2	Turbojet Engine Analyzer System Functional Block Diagram (J79-15 Engine)	5
3	Data Acquisition and Processing Block Diagram	6
4	Engine Analyzer System Computer/Display	15
5	Computer/Display Face	16
6	Computer/Display Signal Flow Diagram	19
7	Block Diagram and Exploded View of Computer/Display	29
8	Computer/Display Self-Test Circuitry	31
9	Computer/Display Showing Calibration Adjustments	33
10	Signal Data Translator	34
10a	Front View Photograph of Signal Data Translator	35
11	System Timing Diagram Recording System Signal Data Translator and Recorder	39
12	Block Diagram of Signal Data Translator	41
13	Analog-to-Digital Converter	48
14	Signal Data Translator Exploded View	51
15	Signal Data Translator Self-Test Circuitry	53
16	Engine Analyzer System Data Recorder, Isometric View	54
17	Recorder Functional Diagram	56
18	Computer/Display Self-Test Circuitry	68
19	Engine Analyzer Ground Calibrator	72
20	Engine Analyzer Ground Calibrator Block Diagram	74
21	Ground Calibrator Face	76



<u>Figure</u>		<u>Page</u>
22	Block Diagram of Ground Calibrator SDT Readout	76
23	Oil Breather Pressure (P/N 538947-2) and Compressor Discharge Pressure (P/N 538947-1) Transducer Circuit Schematic	87
24	Compressor Discharge Temperature Transducer (P/N 538952) Circuit Schematic	88
25	Compressor Inlet Pressure Transducer (P/N 538962-1-1) Circuit Schematic	89
26	Exhaust Gas Transducer (P/N 538380) Circuit Schematic	90
27	Oil Temperature Switch (P/N 538948) Circuit Schematic	91
28	Oil Temperature Transducer (P/N 538950) Circuit Schematic	92
29	Power Lever Angle Transducer (P/N 538444-1-1) Circuit Schematic	93
30	Compressor Discharge Pressure Transducer (P/N 538947-1) Circuit Schematic	117
31	Compressor Discharge Temperature Transducer (P/N 538952) Circuit Schematic	118
32	Compressor Inlet Pressure Transducer (P/N 538362-1-1) Circuit Schematic	119
33	Exhaust Gas Temperature Transducer (P/N 538382) Circuit Schematic	120
34	Exhaust Nozzle Area Transducer (P/N 538440-1-1) Circuit Schematic	121
35	Inlet Guide Vane Transducer (P/N 538422-1-1) Circuit Schematic	122
36	Oil Pressure Switch (P/N 538957) Circuit Schematic	123
37	Oil Sump Pressure Transducer (P/N 538947-3) Circuit Schematic	124
38	Oil Temperature Switch (P/N 538948) Circuit Schematic	125
39	Oil Temperature Transducer (P/N 802187) Circuit Schematic	126
40	Power Lever Angle Transducer (P/N 538444-1-1) Circuit Schematic	127

# TABLES

<u>Table</u>		<u>Page</u>
I	F-105D Engine Analyzer System Data	7
II	F-105D Engine Analyzer System Power Data	9
III	Computer/Display Flag Characteristics	18
VI	J75-P-19W/F-105D Referred Fuel Flow Computer/Display Inputs, Function Ranges, and Slew Rates	24
V	J75-P-19W/F-105D Engine Temperature Ratio Computer/Display Inputs, Function Ranges and Slew Rates	26
VI	Parameter Frequency of Signal Data Translator Output F-105D Engine Analyzer System	36
VII	Signal Data Translator Inputs	37
VIII	Time Sequence of Signal Data Translator Output	38
IX	Significant Recorder and Output Tape Features	52
X	F-4C Engine Analyzer System Data	58
XI	Computer/Display Flag Characteristics	64
XII	J79-GE-15/F-4C Referred Fuel Flow Computer/Display Inputs, Function Ranges and Slew Rates	65
XIII	J79-GE-15/F-4C Engine Temperature Ratio Computer/Display Inputs, Function Ranges and Slew Rates	66
XIV	F-4C Signal Data Translator Inputs	69
XV	Parameter Frequency of Signal Data Translator Output, F-4C Engine Analyzer System	70
XVI	Time Sequence of SDT Output	71
XVII	Front Panel Function	81
XVIII	Fixed SDT Functions (Internal to Calibrator)	82

## 1.0 INTRODUCTION

The Turbojet Engine Analyzer System Program was initiated by U. S. Air Force Operational Support Requirement (OSR) 322 in July 1958. That document established the requirement for an Engine Analyzer System which was to upgrade the task of maintaining aircraft turbojet engines. The desired functions were (1) assessment of current engine condition, (2) diagnosis of malfunctions, and (3) prediction of next mission confidence and time until maintenance. It was recognized that achievement of these goals of assessment, diagnosis, and prediction would logically lead to achievement of the overall objectives of reduced maintenance costs, increased operational effectiveness, and improved flight safety.

The program has been characterized by an orderly development progression under USAF control. For a short period following the establishment of the OSR, various attempts were made to implement the requirement by the most simple, straightforward, obvious approaches. While these were valuable efforts, the results were insufficient, and in 1961 competition was held to select a contractor for a basic study program. Separate and parallel studies were awarded to The Garrett Corporation and to General Electric Company to determine the feasibility of the requirement and to establish the basic theory behind its implementation. Both studies were completed in mid-1962 and both concluded that the system was, in fact, feasible.

A major objective of the study program was to determine what engine parameters to measure, how and where to collect these data, how to rapidly and automatically interpret them, and, finally, how to present the evaluated results to Air Force maintenance personnel in optimum fashion. At this point, a second competition was held, resulting in the selection of The Garrett Corporation as the Phase II contractor. Beginning in April 1963, the study recommendations were implemented in a program including final hardware design, hardware fabrication, installation on two F-105D and two F-4C aircraft, finalization of digital computer programs, and conductance of a one-year flight test program and processing of test data.

This report describes the hardware utilized in Phase II of the program. A companion report, SEG-TR-67-45, presents the results of the flight test, evaluation of the engine analyzer systems and describes the development and application of data processing programs for analysis of engine analyzer data.

## 2.0 DISCUSSION

### 2.1 General

The Turbojet Engine Analyzer System is functionally represented in Figures 1 and 2. The system measures indicative engine operating parameters by means of the network of transducers, sensors, and switches. The signals from these devices are used for two purposes. The Computer/Display monitors certain of the parameters; if any of these operating conditions exceed predetermined limits, red flags are presented on the face of the Computer/Display to indicate this over-limit occurrence. The Signal Data Translator converts input analog signals into digital signals and sequentially feeds them to the Recorder, along with certain parameters calculated by the Computer/Display, and with documentary identification data, such as engine serial number and date. This documentary data is manually entered into the Engine Analyzer System by means of digital thumbwheels on the face of the Signal Data Translator. The recorder then produces a record on magnetic tape of the measured engine operating conditions throughout the flight. This tape recording can be processed by a digital computer facility using the Turbojet Engine Analyzer Data Processing Program to yield analyses of the health of the engine, its performance, and its efficiency, to find trends in the degradation of the health and performance of the engine, and to extrapolate these trends to predict future engine efficiency, performance, health, and life expectancy. Figure 3 is a block diagram of the data acquisition and processing system. Shown are the data, equipment, and steps involved in making an engine health assessment and diagnosis.

As evident from Figures 1 and 2, two Engine Analyzer Systems have been developed: One for J75-19W engines (F-105D aircraft) and one for J79-15 engines (F-4C aircraft). They will be referred to hereafter as the F-105D System and the F-4C System.

### 2.2 Description of F-105D System

The F-105D Engine Analyzer System comprises one Computer/Display, one Signal Data Translator, one Recorder, one set of transducers, and interconnecting cables, pneumatic lines, and connectors. A complete list of the transducers is given in Table I; the table also presents salient characteristics of the Engine Analyzer System including the part numbers, form-factor, and weight of each of the major system components. Table II presents the power requirements of the system components. Appendix I presents complete electrical circuitry schematic for the system components.

#### 2.2.1 Transducers

The system includes a set of transducers which measure the temperatures, pressures, ON-OFF switch conditions, fuel flow, and speed (rpm) which indicate changes of the engine operating conditions. The transducers are of the following types:

1. Variable reluctance transducers
2. Position variable resistance transducers
3. Temperature variable resistance transducers
4. Pressure switches


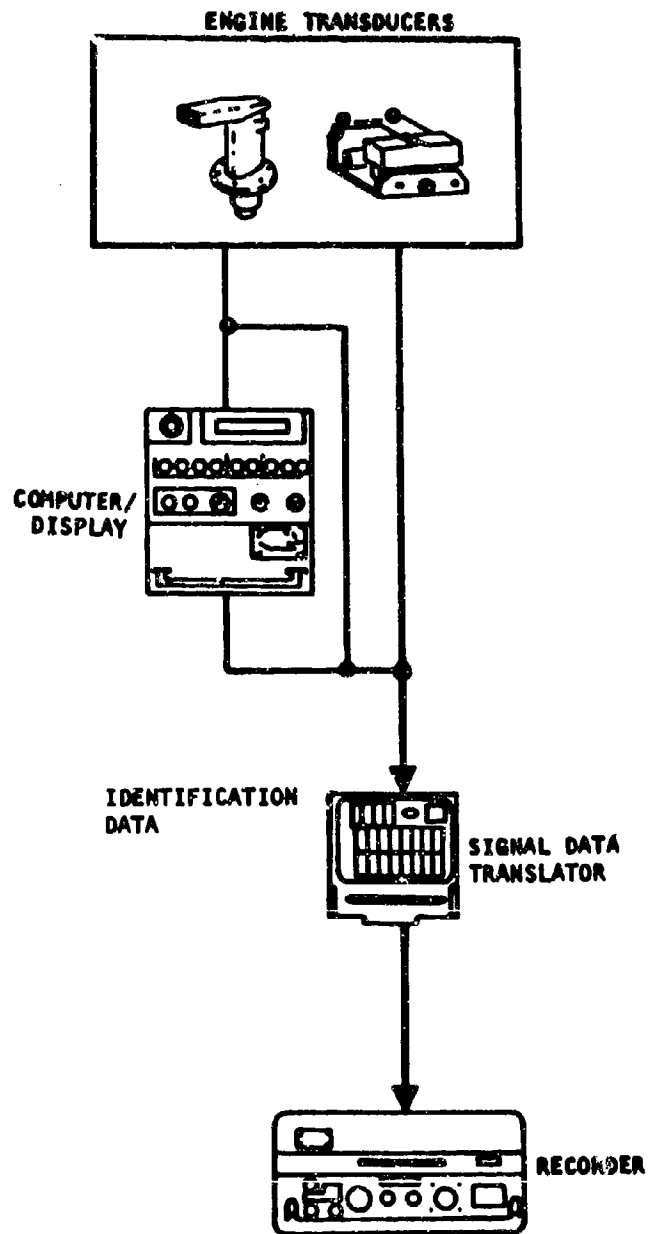


Figure 1. Engine Analyzer System Functional Block Diagram (J75-19W Engine)

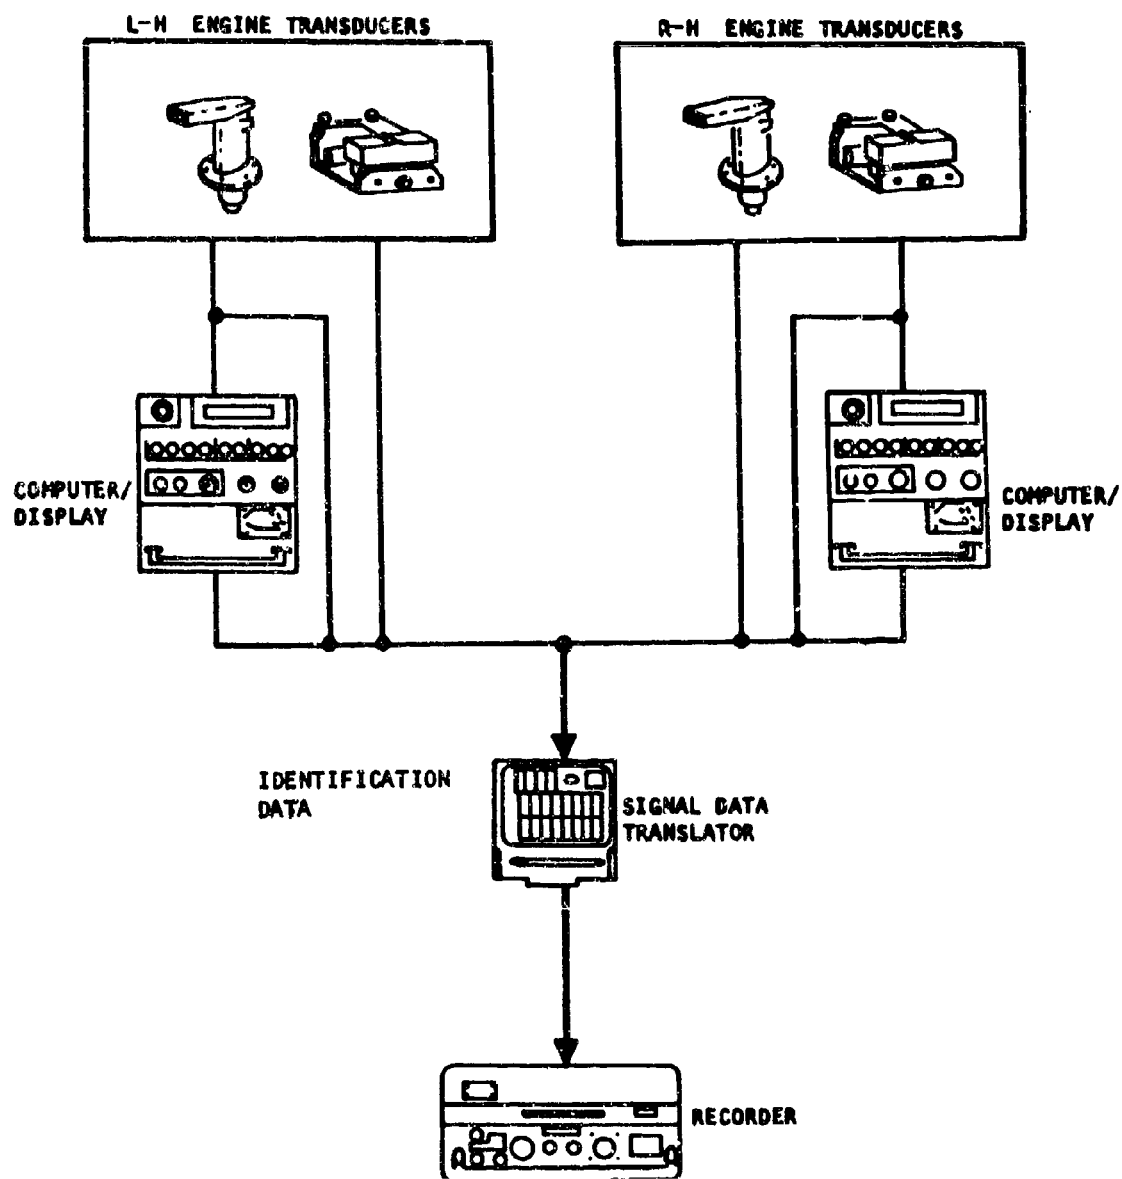

A-5490

Figure 2. Turbojet Engine Analyzer System  
Functional Block Diagram (J 79-15 Engine)

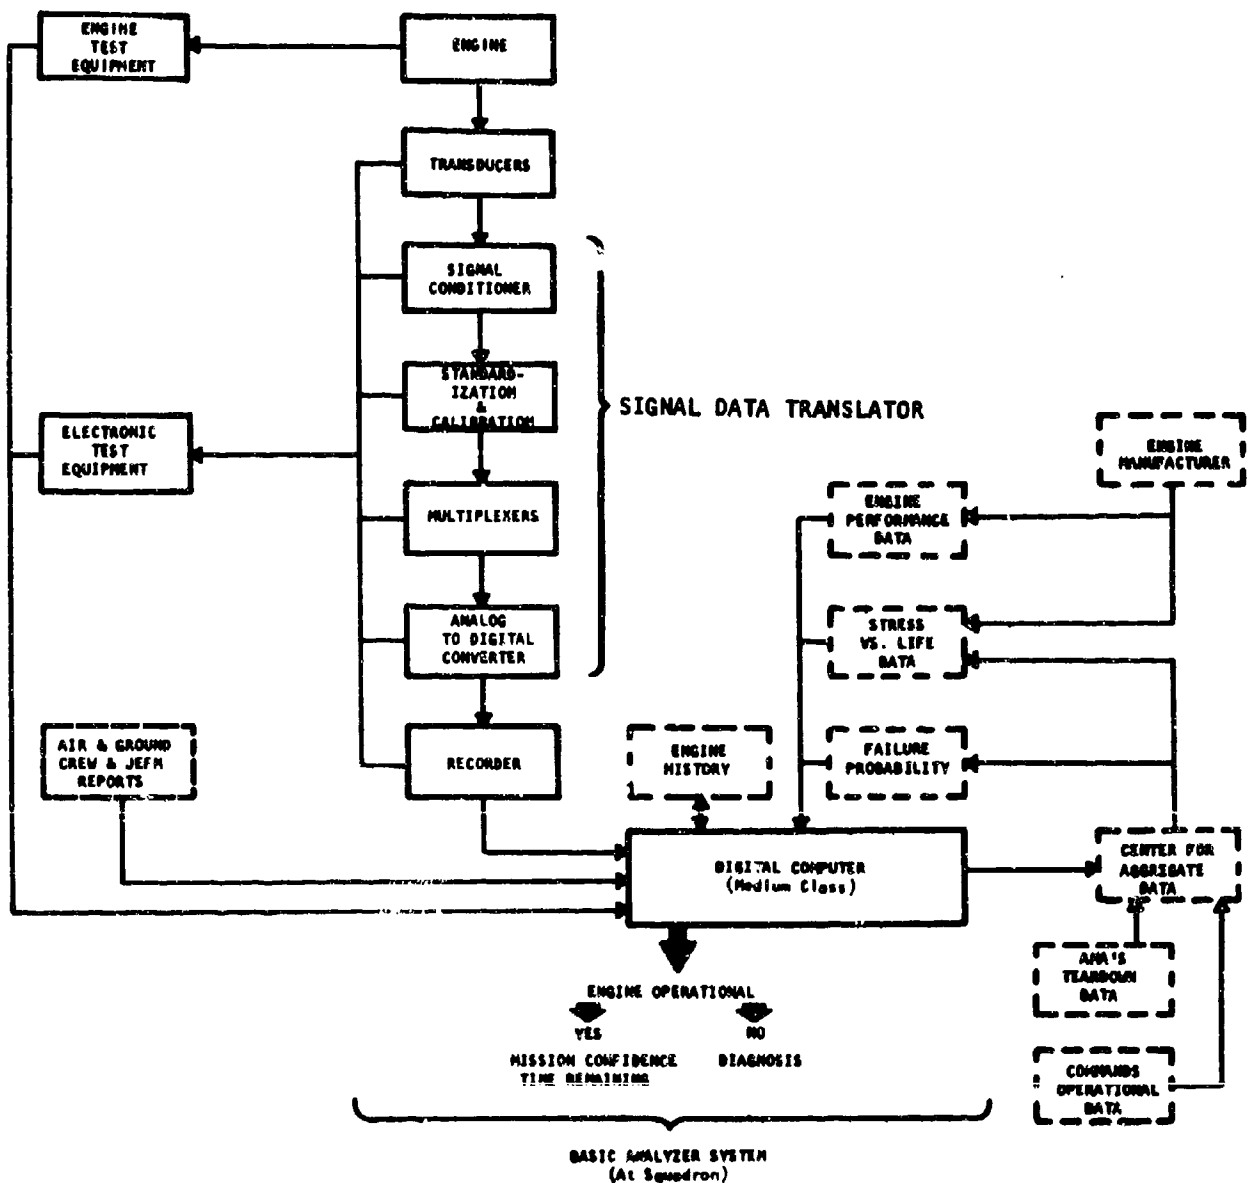


Figure 3. Data Acquisition and Processing Block Diagram

TABLE I

## F-105D ENGINE ANALYZER SYSTEM DATA

System Components	Part Number	Size (Inches) height x width x depth	Weight (lb)
Computer/Display	538254-1-1	7 by 6.5 by 9.88	18.5
Signal Data Translator	538250-1-1	5.5 by 5.25 by 12.5	17.7
Recorder	538956	5 by 11 by 11	22.7 <sup>Δ</sup>
TRANSDUCERS			
Afterburner Switch*			
Anti-Ice Switch*			
Oil Breather Pressure	538947-2		
Compressor Discharge Pressure	538947-1		
Compressor Discharge Temperature	538952		
Compressor Inlet Pressure	538362-1-1		
Engine Pressure Ratio*	61-2484**		
Exhaust Gas Temperature Indicator	538380		
Fuel Flow Transducer*	61-2456**		
Ignition Switch*			
Oil Pressure Switch*			
Oil Pressure Transducer*	61-2479**		

\*Engine analyzer system uses existing aircraft transducer or switch

\*\*Air Force Equipment Reference Numbers (AERNO)

Δ Includes tape and reels



TABLE I (Continued)

System Components	Part Number	Size (Inches) height x width x depth	Weight (lb)
Oil Temperature Switch	538948		
Oil Temperature Transducer	538950		
Power Lever Angle	538444-1-1		
Spool Speed ( $N_1$ and $N_2$ )*	61-8732**		
Inlet Total Temperature	60-1625**		
Water Injection Switch*			

\*Engine analyzer system uses existing aircraft transducer or switch

\*\*Air Force Equipment Reference Numbers (AERNO)

TABLE II

## F-105D ENGINE ANALYZER SYSTEM POWER DATA

Computer Display 538254-1-1, S/N 44-R2 (All measurements made with nominal inputs of 115 v, 400 cps, and 28 v dc)				
	Quiescent (VA) (PF)	Slow (VA) (PF)	Self Test (VA) (PF)	
ØA Sec	36.8 0.75	37.4 0.75	35.7 0.75	
ØB Sec	7.3 0.78	7.3 0.78	7.3 0.78	Sustained
ØC Sec	7.3 0.78	7.3 0.78	7.3 0.78	
ØA PRI	10.2 0.80	9.2 0.80	9.2 0.80	Start-Up and Shut-Down
D-C PRI	6.5 w	9.8 w	9.8 w	
D-C Sec	14.0 w	16.8 w	25.5 w	
Signal Data Translator 538250-1-1, S/N 34-R2 (All measurements made with nominal input of 115 v, 400 cps)				
ØA Sec	12.7 VA	PF .9		
ØB Sec	10.4 VA	PF .9		Sustained
ØC Sec	10.7 VA	PF .9		
Recorder 538956, S/N 104 (All measurements made with nominal inputs of 115 v, 400 cps, and 28 v dc)				
115 v	ØA Sec	1.0 w		
28 v dc Sec		32.0 w		
EGT Indicator 54812 (not measured value). Powered with 400-cps power				
10 VA	Start-Up, Shut-Down and Sustained			

5. Temperature switches
6. Indicators (EGT)
7. Tach-generators
8. Synchro output transducers (EPR, fuel flow)
9. Relay contacts and limit switches

A list of the transducers used in the F-105D Engine Analyzer System is included in Table I of this section. This table includes the weight and dimensions of major units, in addition to the applicable AIRsearch part number or Air Force Equipment Reference Number (ASRNO). The following paragraphs briefly describe the function of each transducer.

#### 2.2.1.1 Afterburner (A/B) Switch

The afterburner signal to the Computer/Display and Signal Data Translator indicates that the A/B switch on the throttle (cockpit) has been activated. A complete description of the A/B system is found in Air Force Flight Manual T.O. IF-105D-1, page 1-15, and is shown in Figure 1-9 of that manual. The analyzer system is isolated from the aircraft afterburner system by an isolation relay.

#### 2.2.1.2 Anti-Ice (A/I) Switch

The anti-ice signal indicates that the A/I switch in the cockpit has been activated. The Engine Analyzer System receives this signal from switch S-214 on the aircraft. The wiring diagram of the A/I system is found in Air Force technical manual T.O. IF-105D-2-12, page 1-84, Figure 1-21.

#### 2.2.1.3 Breather System Pressure ( $P_{oil\ b}$ ) Transducer

This transducer measures the absolute gas pressure in the oil tank, bearing sumps and  $M_2$  gearbox. The transducer is a variable reluctance type with a range from 0 to 25 psia. The transducer output voltage varies from 0 to 500 mv at 400 cps for an input pressure change from 0 to 25 psia with a load of 20,000 ohms across the output.

#### 2.2.1.4 Compressor Discharge Pressure ( $P_{cd}$ ) Transducer

This transducer measures absolute pressure at the discharge of the compressor. The transducer is a variable reluctance type with a range from 0 to 310 psia. The transducer output voltage varies from 0 to 500 mv at 400 cps for an input pressure change from 0 to 310 psia with a load of 20,000 ohms across the output. The output signal is then supplied to the Signal Data Translator.

#### 2.2.1.5 Compressor Discharge Temperature ( $T_{cd}$ ) Transducer

The compressor discharge temperature transducer is a variable resistance element made of platinum wire, and has a temperature range of  $-100^{\circ}\text{C}$  to  $+500^{\circ}\text{C}$  with a nominal resistance of 50 ohms at  $0^{\circ}\text{C}$ . The probe tip has an applied operating pressure of 0 to 500 psia.

#### 2.2.1.6 Compressor Inlet Pressure ( $P_{ci}$ ) Transducer

The compressor inlet pressure transducer utilizes a servoed force-balance sensor and provides output voltages proportional to the natural logarithm of absolute pressure, switching action occurring at certain time-rates-of-change of the logarithm of absolute pressure, and a voltage proportional to absolute pressure.

#### 2.2.1.7 Engine Pressure Ratio (EPR) Transducer

The EPR transducer is a pressure ratio synchro-style thrust transmitter type MK-2). Dual outputs are provided as follows from one synchro to:

- a. An Indicator with a range of 1.2 to 3.4 units (type MR-1) in the cockpit
- b. An Input to the SDT Scott "T" transformer

#### 2.2.1.8 Exhaust Gas Temperature (EGT) Transducer

The exhaust gas temperature system consists of existing Chromel-Alumel thermocouple probes in the engine that actuate a single-point null-balancing type indicator in the cockpit. The indicator in turn provides four output signals to the engine analyzer. The four outputs are two potentiometers (pots) and two switches: switch "A" closes at  $752^{\circ}\text{F}$  ( $400^{\circ}\text{C}$ ) for hot start and switch "B" closes at  $1300^{\circ}\text{F}$  ( $704^{\circ}\text{C}$ ) for in-flight overtemperature; pot "1" is a log function of EGT and pot "2" is exponential function of EGT.

#### 2.2.1.9 Fuel Flow ( $W_f$ ) Transducer

The fuel flow transducer is a remote indicating synchro-style rate of flow transmitter (type MA-1). The synchro outputs feed the following:

- a. An indicator with a range of 400 to 24,000 pph (type MA-2) in the cockpit
- b. A resolver in the C/D fuel flow servo

#### 2.2.1.10 Ignition Switch

The ignition switch signal is obtained from a slave relay on the aircraft (K-9) located in relay box A-5. The complete wiring diagram of the aircraft ignition system is found in Air Force T.O. 1F-105D-2-12, page 1-89, Figure 1-25A.

#### 2.2.1.11 Oil Pressure Switch

The oil pressure switch is a differential-pressure-actuated switch used as a warning device to indicate the loss of turbine engine lubricating oil pressure. The switch provides a ground signal to the Computer/Display upon loss of oil pressure.

The pressure switch has a pressure and vent port and is actuated by the pressure differential between ports. When oil pressure is above 38 (+0,-3) psid, a diaphragm in the switch housing maintains the switch contacts in the open position. When booster-pump pressure drops to 31 ( $\pm 1$ ) psi and below, the diaphragm closes the switch contacts, providing a ground circuit to the master caution control box. The pressure switch operates as follows: on increasing differential pressure, the switch will open the circuit at 38 (+0,-3) psid and on decreasing differential pressure the switch will close at 31 ( $\pm 1$ ) psid.

#### 2.2.1.12 Oil Pressure ( $P_{oil}$ ) Transducer

The oil pressure transducer is a variable reluctance pressure transmitter (TRU-20/A). The output signals are supplied to an Indicator (type MO-2) in the cockpit and to the Signal Data Translator.

The TRU-20/A is a variable reluctance type transmitter having only one moving part, the armature that moves axially through a pair of fixed hermetically sealed coils. Oil and breather pressure entering the transmitter through their respective ports act against diaphragms connected at each end of the armature shaft. When the oil pump is operating, the axial travel of the armature will be in the direction of the lesser pressure; thus, the values measured by the transmitter will actually be the differential pressure

between the oil pump output pressure and the breather pressure. As engine oil pressure enters the transmitter it deflects the diaphragm, thus changing the position of the armature relative to the flux air gaps. This action changes the relative inductance values in the two halves of the transmitter coil causing a change in voltage at the center tap of the indicator. The oil-pressure transmitter is mounted on the left side of the engine on the accessory gearbox and is accessible through Access Door FF-101.

In some aircraft, the MH-5 synchro output transmitters are used.

#### 2.2.1.13 Oil Temperature Switch

The oil temperature switch is a temperature actuated switch used for indicating excessive oil temperature on the aircraft engine in flight. The switch provides a ground signal to the Computer/Display upon excessive temperature conditions.

#### 2.2.1.14 Oil Temperature ( $T_{oil}$ ) Transducer

The oil temperature transducer is a clamp-on and adhesive bonded temperature transducer used for measuring the oil temperature of the aircraft engine in flight. The transducer output is a variable resistance signal supplied to the Signal Data Translator.

#### 2.2.1.15 Power Lever Angle (PLA) Transducer

The power lever angle transducer is a single turn precision linear variable resistor. The output goes to the signal data translator.

#### 2.2.1.16 Spool Speed ( $N_1$ ) Transducer

The spool speed transducer  $N_1$  is a miniature electric three-phase, two-pole a-c tachometer-generator (GEU-7/A).

NOTE: While provisions were made for measuring this parameter, the tachometer pads were deactivated on the J-75 engines.

#### 2.2.1.17 Spool Speed ( $N_2$ ) Transducer

The spool speed transducer  $N_2$  is a miniature electric two-pole, three phase a-c tachometer-generator (GEU-7/A). The output signal goes to Computer/Display and the cockpit indicator, type ERU-5/A.

#### 2.2.1.18 Total Temperature ( $T_2$ ) Transducer

The total temperature transducer is a dual element total temperature probe capable of operating during atmospheric icing conditions. The dual elements are platinum wire, temperature-variable resistors which have a nominal resistance of 50 ohms at 0°C. The standard F-1050 temperature probe (single element) is replaced with a dual element probe; the extra element is used for the engine analyzer system.

#### 2.2.1.19 Water Injection (WI) Switch

The water injection signal indicates that the water injection switch in the cockpit has been activated.

#### 2.2.2 Computer/Display

The Computer/Display is a major component of the Engine Analyzer System. This unit, shown in Figure 4, is located on the F-105D in the CIN compartment.


The Computer/Display presents red-flag indications when any of several engine parameters exceed predetermined limits. The flags, once tripped, hold the indication magnetically until they are manually reset by a ground crewman. The device also presents an accumulated total of the engine operating hours, and of the hot section growth factors (a function of engine time and temperature). In addition to this data presentation, the Computer/Display provides some of the data recorded in flight.

The front face of the Computer/Display is shown in Figure 5. The indicators are grouped according to parameter, as shown in the figure. The controls in the top row on the Computer/Display are the calibration adjustments and the self-test switch. The calibration adjustments, which are normally covered by a shield to prevent any accidental change in adjustment, are used to adjust the Computer/Display for engine-to-engine variations. The self-test provided is a two-level check of the flag displays. The calibration adjustments and self-test are covered in detail later in this section. The history card on the front of the Computer/Display shows the correction used for finding true engine operating time. Instructions for its use are given on the card.

##### 2.2.2.1 Computer/Display Theory of Operation

a. Summary - The Computer/Display mechanizes test cell and thermodynamic performance parameters to provide a go/no-go assessment at shutdown of gross engine health. The tests are:

1. Starting and stopping
  - a. Hot start
  - b. Slow start
  - c. Fast stop
2. Steady-state engine performance
  - a. Referred fuel flow
  - b. Engine temperature ratio
3. Maximum limit parameters
  - a. High EGT
  - b. Engine overspeed: High and maximum

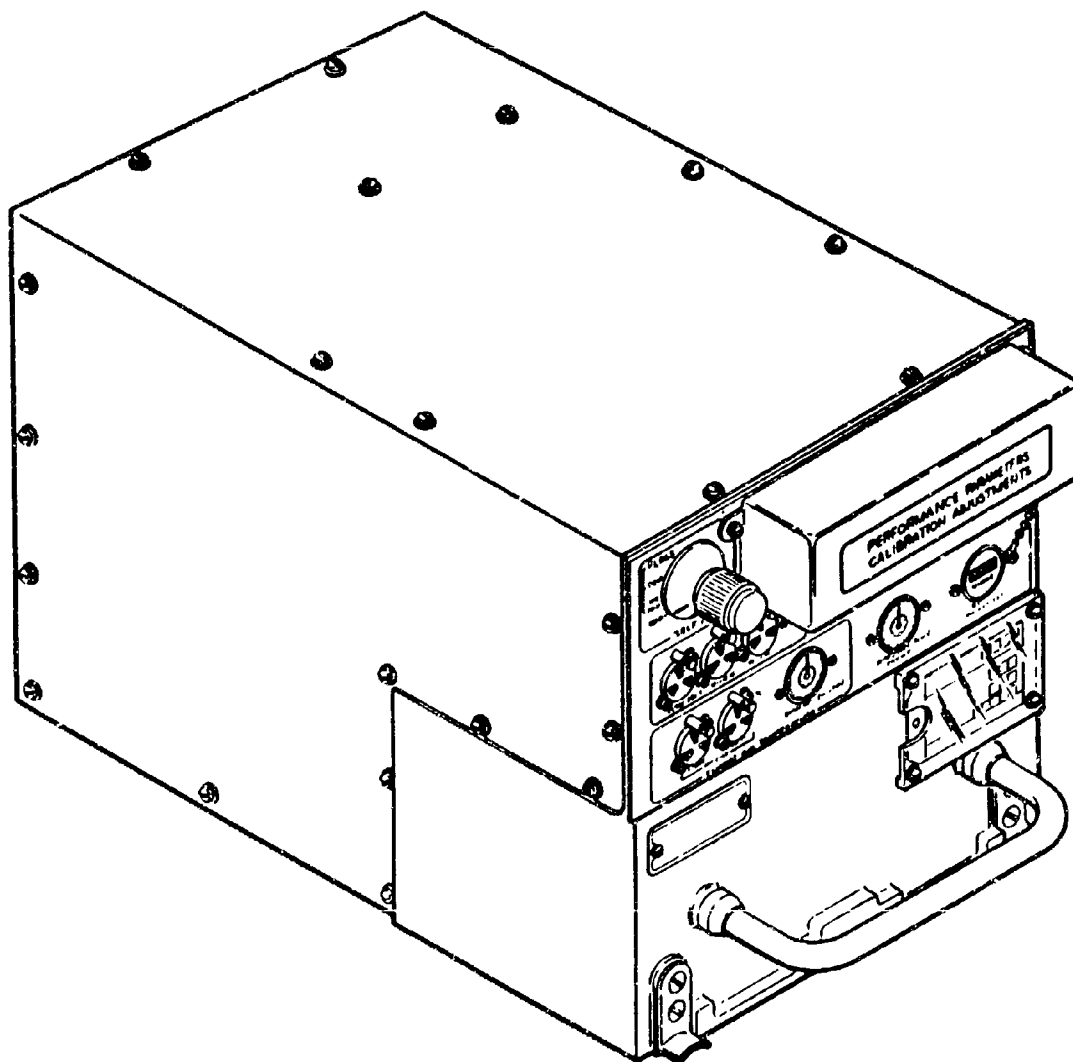

A-5105

Figure 4. Engine Analyzer System Computer/Display



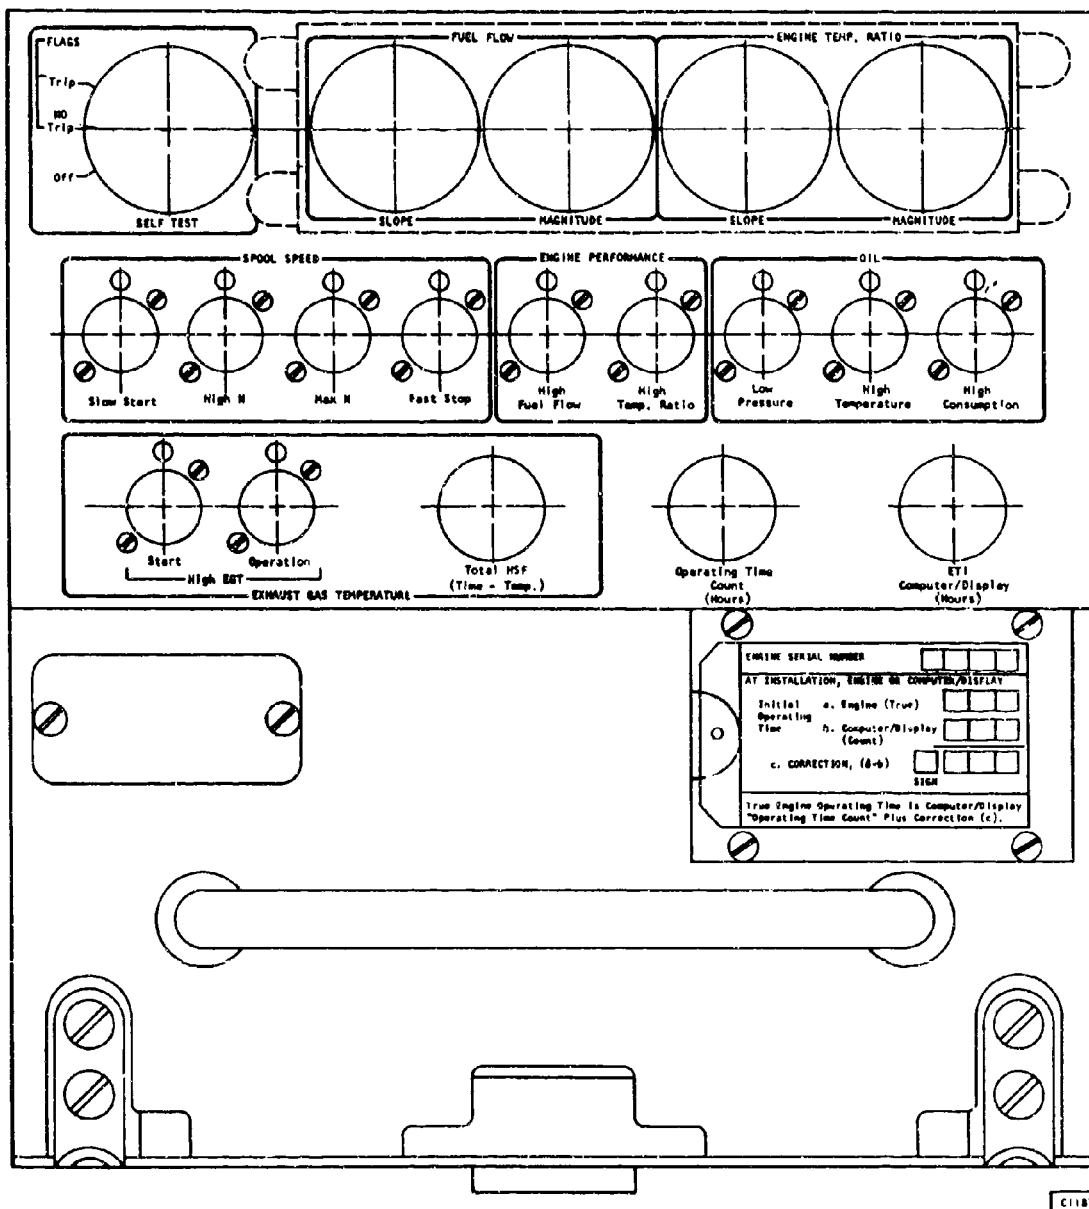


Figure 5. Computer/Display Face



- c. Low oil pressure
- d. High oil temperature
- 4. Expanded hot section factors
- 5. Time Data
  - a. Engine time since overhaul
  - b. Elapsed time indication

Since the object of the Computer/Display is to assess gross health rather than perform engine diagnosis, it considers the engine in its entirety rather than its component parts. Table III shows the performance, mechanical, and maximum-limit parameters assessed during flight and their test conditions and limits.

The Computer/Display contains all of the signal conditioning required to make it an autonomous unit from the Signal Data Translator and Recorder.

Performance Parameter Checks - The Computer/Display continually compares measured values of fuel flow and EGT ratio against specified performance to assess whether the engine is working within tolerances. The computations are standardized to sea-level conditions and corrected for Reynolds number effects.

Maximum Limit Checks - Maximum limits exist and are mechanized for exhaust gas temperature, spool speed, starting time, and coastdown time.

Mechanical Parameters - The mechanical parameters checked by the Computer/Display are oil pressure, and oil temperature. Provision for a mechanization of a check on oil consumption at a later date is also included in the Computer/Display.

Signal Flow Diagram - A signal flow diagram of the Computer/Display is presented as Figure 6. This chart graphically illustrates the operation of the unit. The inputs are shown with the ranges of the input devices, the scale factors, and applicable military specifications. The signal conditioning which is performed on each input and the uses of each input are also indicated on the chart. The signals required for each of the reference parameters are shown, as well as a tabulation of the equations, and the trip points of each of the flags.

Study of this signal flow diagram provides a working knowledge of the operation theory of the Computer/Display. The chart indicates which of the engine operating parameters affect which flags and the point at which each flag should trip.



**TABLE III**  
**COMPUTER/DISPLAY FLAG CHARACTERISTICS**

Test	Test Condition	Failure Trigger Level
1. Slow Start	Engine starting cycle from ignition or 10% rpm to 50% rpm. Locked out thereafter	Greater than 40 sec
2. Fast Stop	Engine shutdown 50% to 10% rpm	Less than 25 sec
3. Referred Fuel Flow	Steady-state engine operation, non-afterburning, non-water injection operation	$W_f^i \text{ meas} - W_f^i \text{ ref} > .10 W_f^i \text{ ref}$
4. Engine Temperature Ratio	Steady-state engine operation, non-afterburning, non-water injection operation	$ETR_{\text{meas}} - ETR_{\text{ref}} > .06 ETR_{\text{ref}}$
5. High EGT		
a. Hot Start	Engine starting cycle to 50% rpm. Locked out thereafter	Greater than 400°C (Thermocouple time constant prevailing)
b. Observation	Sustained engine operation	Greater than 704°C
6. Engine overspeed		
a. Maximum	Any condition	Greater than 108% N <sub>2</sub>
b. Normal	Any condition	Greater than 106.5% N <sub>2</sub>
7. Low Oil Pressure	N <sub>2</sub> greater than 90%	Less than 31 psid
8. High Oil Temperature	Any condition	Greater than 121°C
9. Expedited Hot Section Factors	EGT greater than 1572°R (600°C)	Accumulation





A

# COMPUTER/DISPLAY

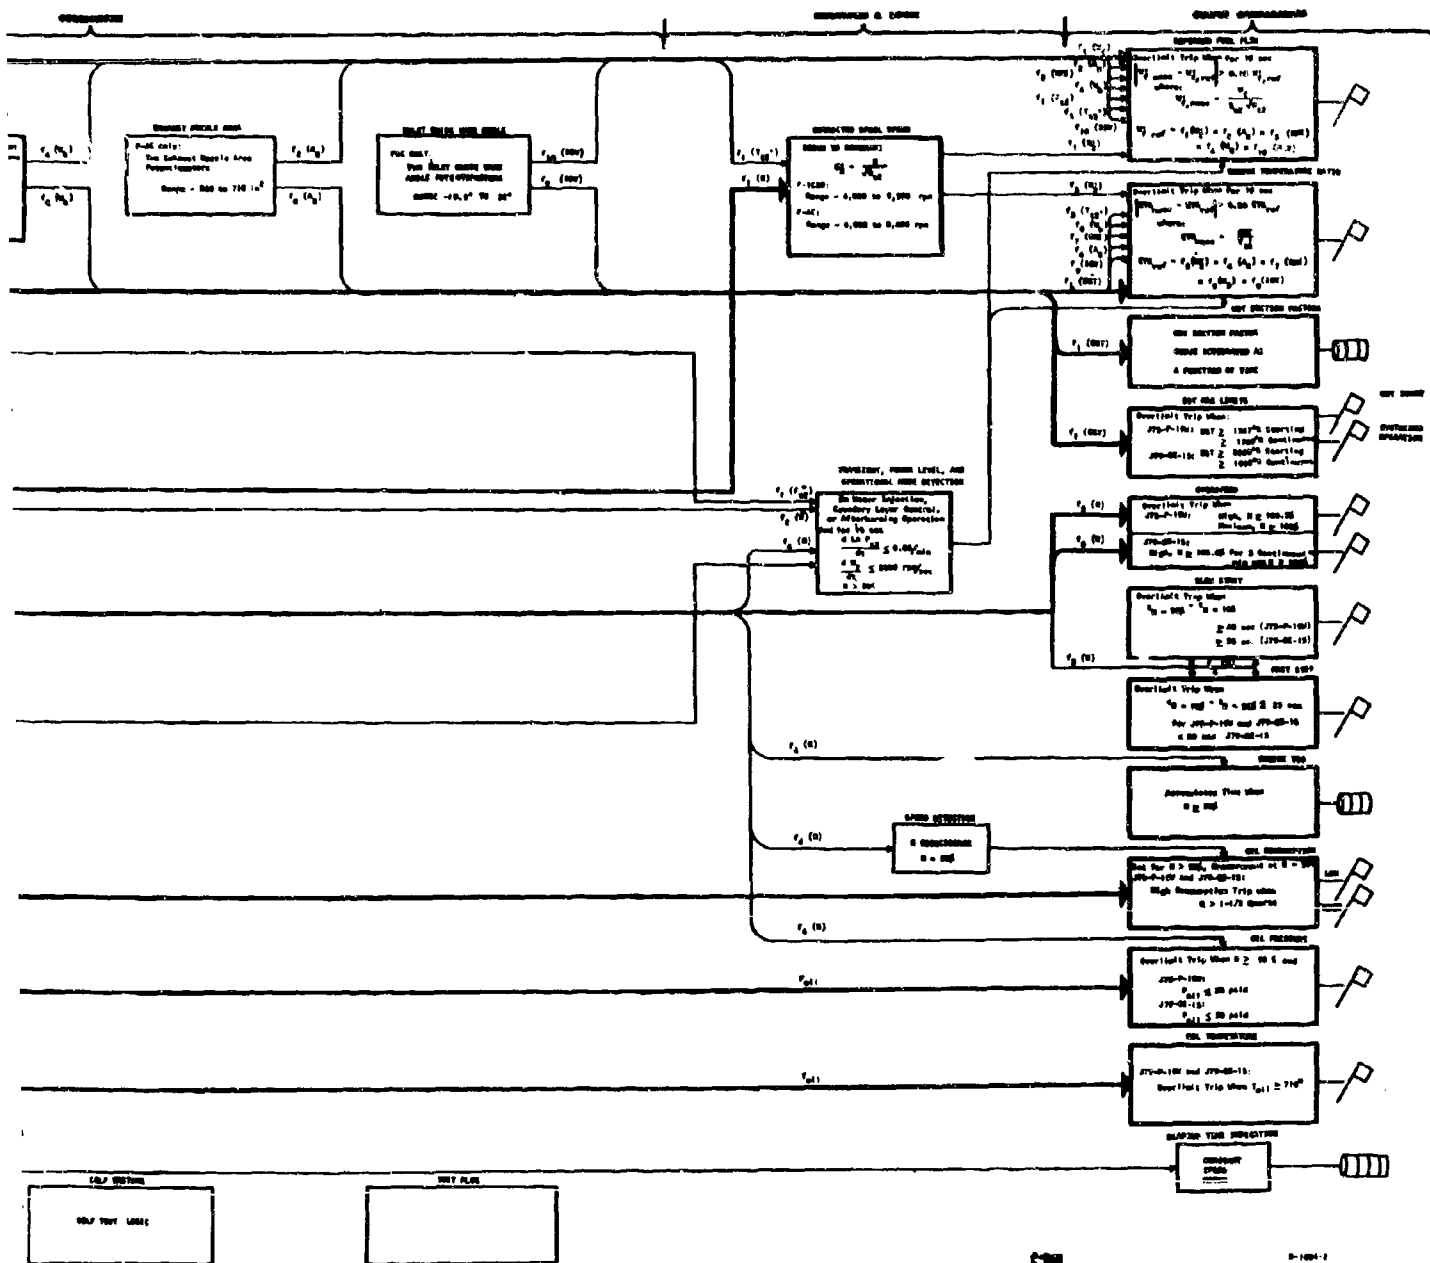


Figure 6. Computer/Display Signal Flow Diagram

B

b. Transient Engine Performance - Three tests are dependent on engine starting and stopping characteristics. They are:

1. Hot start
2. Slow start
3. Fast stop

These parameters are monitored under all starting conditions.

Hot Start - Hot start is monitored in the Computer/Display by replacing the standard EGT indicator in the F-105D with a modified MIL-I-2729A servoed indicator. The modification consists of addition of two switches and two potentiometers to the servo shaft. The switches are set at 400°C and 704°C, and adjustable  $\pm 111^\circ\text{C}$ .

The 400°C switch is used to signal high starting exhaust gas temperature. The 704°C switch signals high operating EGT. One of the potentiometers provides the hot section factors signal to the Computer/Display. This function is discussed later in this section. The other potentiometer supplies the log function of EFT to the Computer/Display.

The 400°C starting limit, which was obtained from the F-105D Flight Manual, T.O. 1F-105D-1 dated 15 July 1952, appears low at first glance; this, however, is due to the thermal lag associated with the thermocouples.

For spool speeds less than 50 percent, the hot start switch is connected directly to the high start EGT flag. Should this switch close under these conditions, this flag will drop.

Location of the switches in the EGT indicator assures that all hot starts are monitored under any condition.

Slow Start - Slow start is detected by monitoring the time it takes for the engine to accelerate from 10 percent (or ignition) to 50 percent rpm. The limit for the slow start measurement is 40 sec, which was obtained from Pratt and Whitney Engine Specification A-2637A dated 15 July 1952.

Fast Stop - Fast stop is monitored in the Computer/Display by clocking the time it requires for the engine to slow down from 50 percent to 10 percent rpm. A failure trip will occur whenever the time required for the engine to stop is less than 25 seconds. An interval adjustment provides for changes  $\pm 25$  percent. This adjustment is not accessible from the Computer/Display front face, which precludes ground maintenance personnel from inadvertently resetting them.

Cutting off the speed measurement at 10 percent is to eliminate the effects of windmilling, and engine reaction caused by local wind conditions.

c. Steady-State Engine Performance - Steady-state engine performance tests are made for the two referred engine parameters, fuel flow and engine temperature ratio. These tests are predicated upon the thermodynamic properties of the engine as it acts as a hot gas generator.

Steady-State Criteria - Limits for the steady-state engine performance detection have been set by reference to significant transient conditions such as engine start, engine acceleration, and aircraft climb at constant Mach number.

Aircraft climb less than 20,000 ft/min at sea level is a conservative estimate of engine steady-state performance. The simplest and most accurate method of detecting this condition is through monitoring of compressor inlet total pressure rate. The Computer/Display mechanizes  $\frac{d \ln P_{t_2}}{dt}$  rate, or  $\frac{d \ln P_{t_2}}{dt}$  and is set at 0.06 log units per minute. Whenever the absolute value of the rate exceeds this limit, the Computer/Display is locked out to assure that a false trip of the failure flags does not occur.

Engine acceleration is the rate of change of spool speed. In the Computer/Display, the spool speed rate is based on the amount of energy that is required to accelerate the spool. The threshold is set at a conservative 2000 rpm/min. When the  $N_2$  rate exceeds this value, the Computer/Display is locked out.

A 90-percent spool-speed lockout is also incorporated in the Computer/Display. The 90-percent and higher power settings are the areas where engine data is significant due to higher stressing and operational design for this area.

Standardization and Correction - The first Computer/Display operation is to reduce the parameter measurements at speed and altitude to standard sea level conditions. The necessary pressure and temperature corrections are computed from inlet pressure ( $P_{t_2}$ ) and temperature ( $T_{t_2}$ ).

Fuel flow and exhaust gas temperature are both influenced by Reynolds number effects that become significant when operating above 30,000 ft at low to moderate speeds. The necessary corrections are computed from  $P_{t_2}$  and  $T_{t_2}$ .

Water injection operation requires that the thermodynamic performance parameters of the Computer/Display be locked out. Although  $P_{t_2}$  transient detection at takeoff (water injection is used from takeoff to 8000 ft maximum) will lock the Computer/Display out in most cases, it may not lock it out at the beginning of takeoff roll where  $P_{t_2}$  rate is low. To assure optimum Computer/Display performance without false flag trips, a water injection lockout is provided. The signal comes directly from the water injection pressure switch on the water injection caution light circuit. The comparison is locked out until water injection ceases.

Engine fuel flow and exhaust gas temperature also depend upon the exhaust nozzle area. The J75-P-19W has a two-position nozzle that has a small area for normal operations and a large area for afterburner operations. The correlation between effective nozzle areas and measured nozzle area is extremely poor during afterburning operation. As a result it is impossible to adequately correct the fuel flow and engine temperature ratio computations during this mode. To preclude false trips of the fuel flow and ETR flags, the comparison is deactivated during afterburning.

Steady-State Performance Parameter Computations - For steady-state engine operations, the Computer/Display continuously compares measured values of engine temperature ratio and referred fuel flow with that scheduled as a function of referred engine spool speed when corrected for bleed losses and Reynolds number. The steady-state logic previously described deactivates the computations when transients are encountered. Steady-state conditions must be held for 10 seconds (nominal) for engine to stabilize before the computation is reactivated. Deactivation of the comparison test occurs in less than 4 seconds when transient conditions are encountered.

The measured fuel flow and engine temperature ratio must exceed their reference limits for a minimum of 10 seconds before a failure flag will trip.

Variations from engine to engine within a given class can cause the  $N_2$  reference curve to shift. To allow for variations in transducers and installed engine characteristics, two calibration adjustments are provided to allow offset of the curve in slope and in displacement by 10 percent. Independent adjustments are maintained for the two offsets.

Data for the reference computations was derived from AFSC F-105D Category II Performance and Stability Tests TDR 61-47, March 1962, Appendix 3.

The referred fuel flow over-limit flag triggers when

$$W_{f \text{ meas}}^i - W_{f \text{ ref}}^i \geq 0.10 W_{f \text{ ref}}^i$$

where  $W_{f \text{ ref}}^i$  is determined from the following computation

$$W_{f \text{ ref}}^i = f_1(N_2) \times f_3(RNI) \times f_4(W_b) \text{ and is computed by the Computer/}$$

Display.  $W_{f \text{ meas}}^i = \frac{W_f}{\delta_{t_2} \sqrt{\theta_{t_2}}}$  and is also computed by the Computer/Display.

Table IV gives inputs, function range, and slew rates of parameters for the referred fuel flow computation.

The engine temperature ratio over-limit flag triggers when

$$ETR_{\text{meas}} - ETR_{\text{ref}} \geq 0.06 ETR_{\text{ref}}$$



TABLE IV

J75-P-19W/F-105D REFERRED FUEL FLOW COMPUTER/DISPLAY  
INPUTS, FUNCTION RANGES AND SLEW RATES

Input Function	Source	Range	Slew Rate	Scale Factor
$W_f$ ---	Fuel flow transmitter, Type MA-1 per MIL-T-8275	400 to 24,000 pph	NA	Synchro-- 25 pph/deg to 6K pph 200 pph/deg above 6K pph
$T_{t_2}$ ---	Airframe total temperature probe, Rosemont MIL-P-27723A, MIL-S-27186-2	390°R (-57°C) to 1100°R (338°C)	NA	Platinum wire with 50 $\Omega$ resistance at 0°C
$N_2$ ---	Aircraft tachometer per MIL-G-26611 Type GEU-7A	0 to 120 percent of $N_2$	NA	
--- $W_f$	Computer/Display servo repeater	0 to 20,000 pph	2000 pph/sec	
--- $T_{t_2}$	Computer/Display isolation transformer	390°R (-57°C) to 1100°R (338°C)	3°R/sec	
$P_{t_2}$ ---	Force-balance pressure transducer	1.6 to 36 psia	Equivalent to $\ln P_{t_2}$ rate range in 1 minute	
--- $N_2$	Computer/Display servo repeater	0 to 120 percent $N_2$	25,000 rpm/min	
--- $N_2'$	Computer/Display $N_2$ servo repeater	6000 to 9500 rpm	Compatible to $N_2$ and $T_{t_2}$ rates	
--- RNI	Computer/Display RNI servo	0 to 0.6	Compatible to $P_{t_2}$ and $T_{t_2}$ rates	

where

$$ETR_{ref} = f_3(N_2) \times f_7(RNI) \times f_8(W_b)$$

and

$$ETR_{meas} = \frac{EGT}{T_{t_2}}$$

These calculations are performed by the computer/display.

Table V gives inputs, function range, and slew rates for parameters for engine temperature ratio computation.

d. Maximum Limit Parameters - The computer/display mechanizes maximum limit parameters of

EGT overtemperature

Engine overspeed

Low oil pressure (for  $N > 90$  percent)

High oil temperature

Limits for the parameters and conditions under which the tests are valid are shown in Table III.

High Operating EGT - The EGT operating overtemperature limit is set at the maximum limit with hot section inspection mandatory should the limit be exceeded. To preclude loading of the EGT thermocouple system, the limit switch is located directly on the servo shaft of the modified MIL-I-27209-A servoed EGT cockpit indicator. Closure of the switch will provide voltage to the failure flag in the computer/display, dropping and latching the over-limit flag. Provisions are made to internally adjust the trip level by  $\pm 111^\circ\text{C}$ . The adjustment is inside the EGT indicator case. Dynamic response of the system is limited by the thermocouples.

An interlock with a 50 percent spool speed switch on the N servo deactivates the detection circuit whenever the engine is below 50 percent rpm, which will be during start and shut-down. The limit is  $704.4^\circ\text{C}$  (see the hot start discussion).

Engine Overspeed - Two limits are monitored and displayed to test the engine for overspeed. The lower limit (High N) requires compressor and turbine inspection. The higher limit (Max N) requires removal and teardown of the engine. The limit switches are on the N servo repeater shaft in the computer/display.

The two limits, which were obtained from the F-105D Flight Manual, T.O 1F-105D-1, dated 15 July 1952, are 106.5 percent  $N_2$  and 108 percent  $N_2$ .

TABLE V

J75-P-19W/F-105D ENGINE TEMPERATURE RATIO COMPUTER/DISPLAY  
INPUTS, FUNCTION RANGES AND SLEW RATES

Input	Function	Source	Range	Slew Rate	Scale Factor
$P_{t_2}$	---	See Table IV	See Table IV		See Table IV
EGT	---	EGT Indicator Modified MIL-I-27209-A	700°R (116°C) to 2350°R (1032°C)		
$N_2$	---	Aircraft Tachometer per MIL-G-26611 Type GEU-7A	0 to 120 percent $N_2$	NA	
--	$T_{t_2}$	Computer/Display Isolation Transformer	390°R (-57°C) to 1100°R (338°C)	3°F (1.7°C) per sec	
--	$N_2$	Computer/Display Servo Repeater	0 to 120 percent $N_2$	25,000 rpm/min	
--	$N_2$	Computer/Display $N_2$ Servo Repeater	6000 to 9500 rpm	Compatible to $N_2$ and $T_{t_2}$ Rates	
--	RNI	Computer/Display RNI Servo	0 to 0.6	Compatible to $P_{t_2}$ and $T_{t_2}$ Rates	

Low Oil Pressure - Sub-normal oil pressure at cruise or higher power levels can be a serious problem in a jet engine since the oil functions as a coolant as well as a lubricant. The Computer/Display monitors the output of a pressure switch in the oil line (a pressure transducer is used for the Signal Data Translator Input).

The existing low oil pressure warning switch is utilized to trip the Computer/Display warning flag. Diode isolation precludes undesirable loading effects on the pilot's indication. Characteristics of the switch are:

Opens for  $P_{oil} > 39$  psid

Closes for  $P_{oil} < 23$  psid

The low-limit flag is interlocked with a 90-percent  $H_2$  switch to preclude nuisance trips due to low oil pressure under starting and shutdown conditions.

The appropriate limits were obtained from the F-105D Flight Manual mentioned previously.

High Oil Temperature - Due to the importance of the oil's bearing coolant function, high oil temperature is a cause for concern. Scavenge oil temperature is monitored as a limit function, with the limit set at  $710^{\circ}R$  ( $121^{\circ}C$ ), which was obtained from the F-105D Overhaul Instructions, T.O. 2J-75-3, dated 1 Nov 1961.

High Oil Consumption - Provisions for mechanizing at a later date a flag indication whenever the oil consumption exceeds a predetermined limit are incorporated in the Computer/Display.

e. Expended Hot Section Factors - Theoretical data exist relating "hot section growth factors" to the exhaust gas temperature. The theory is that operating at elevated temperatures accelerates the aging or deterioration of the engine's hot section. This rate of expenditure increases with temperature slowly at first but becomes very severe as temperature increases. The validity of this theory and the correlation of expended life values to engine condition are currently being evaluated by the Air Force. Because of the theory behind the concept and the keen current interest in the technique, the Computer/Display incorporated circuitry to monitor exhaust gas temperature with a non-linear drive and timer. The engine's accumulated expended life factors are displayed on the face of the Computer/Display. The display can be reset with the appropriate engine expended life in the event of replacing the engine of Computer/Display.

f. Engine Operating Time - Engine Operating Time is monitored by actuating a counter whenever spool speed exceeds 50 percent  $N_2$ . The power sequencing is accomplished through a relay drive from the 50-percent switch on the  $N_2$  servo.

g. Computer/Display Elapsed Time - The Computer/Display elapsed time will be accumulated by a counter driven directly from the input power line to the unit. Whenever power comes on, time will be accrued.

#### 2.2.2.2 Computer/Display Modules

The Computer/Display is physically composed of four modules and the chassis. Figure 7 shows the electrical and physical layout of these modules. The four modules are identified as the Servo Module, labeled S in the diagrams, the Self-Test Module, labeled T, the Network Module, W, and the Spool Speed Module, N. The chassis mounted parts are identified as C. The block diagram in Figure 7 indicates the electrical layout of the unit and the extent of each of the modules and the wiring mounted to the chassis. The exploded view shows the physical arrangement of the modules. The front and back panels and the supporting base compose the Computer/Display chassis and are inseparable in field maintenance. The four modules are easily removed for checkout and for replacement.

#### 2.2.2.3 Computer/Display Self-Test

Self-test for the Computer/Display is actuated by the switch in the upper left corner of the Computer/Display face, shown in Figure 7. The first position of the switch, marked NO TRIP, simulates a normal engine operating condition in the Computer/Display; none of the flags should drop during this phase of self-test. Position two of the self-test. Position two of the self-test switch, marked TRIP, simulates an abnormal operating condition in the Computer/Display, during which all the flags must drop.

A schematic wiring diagram of the self-test circuitry is shown in Figure 8. When the self-test switch is turned to position one, NO TRIP, a set of input signals corresponding to a typical engine operating condition is applied to the Computer/Display by resistive dividing networks and a synchro (for fuel flow). As mentioned above, none of the Computer/Display flags should drop. Position two of the self-test switch, TRIP, applies a set of signals corresponding to an abnormal operating condition. This is simulated by an improper spool speed signal for the other operating conditions. This abnormal condition will trip both the high consumption flag and the high engine temperature ratio flags. The remainder of the flags, which are switch operated, are tripped by the position "2" self-test circuitry. All the flags should, therefore, trip when the self-test switch is in position "2."



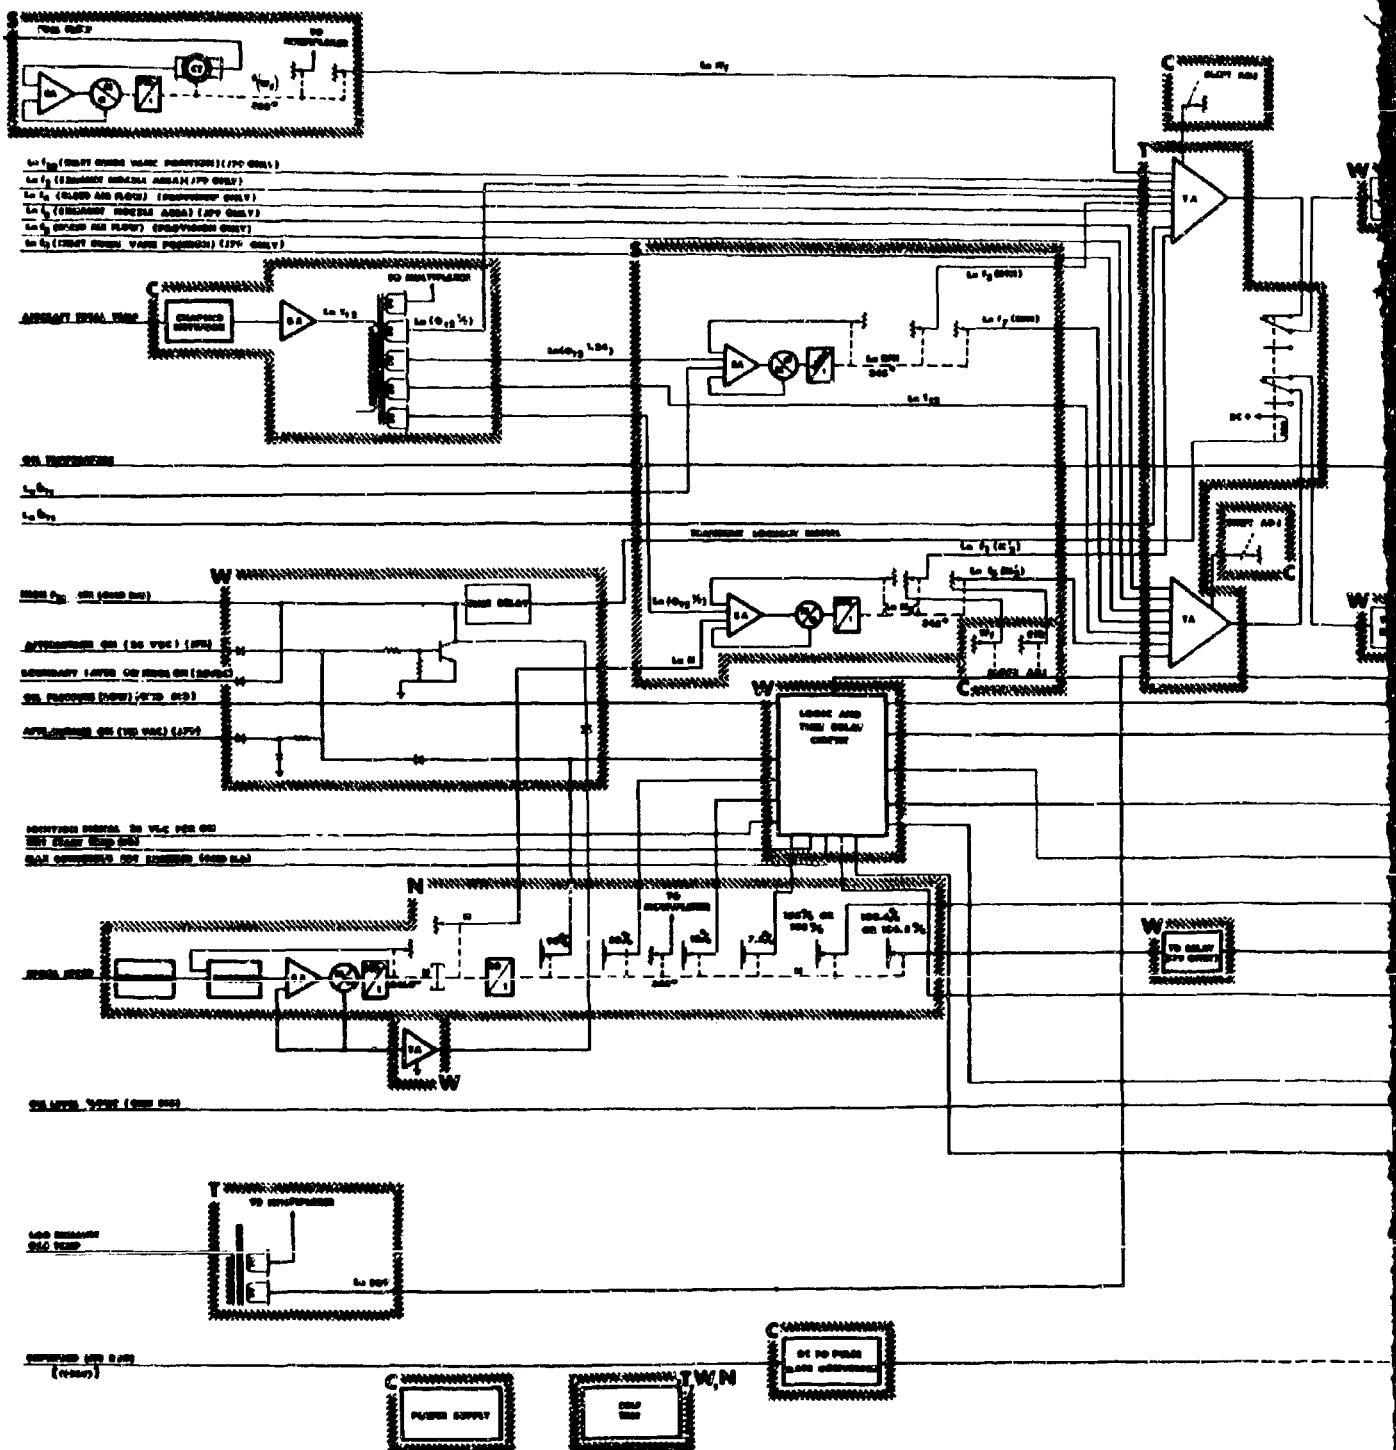



Figure 7. Block Diagram and Computer/Display

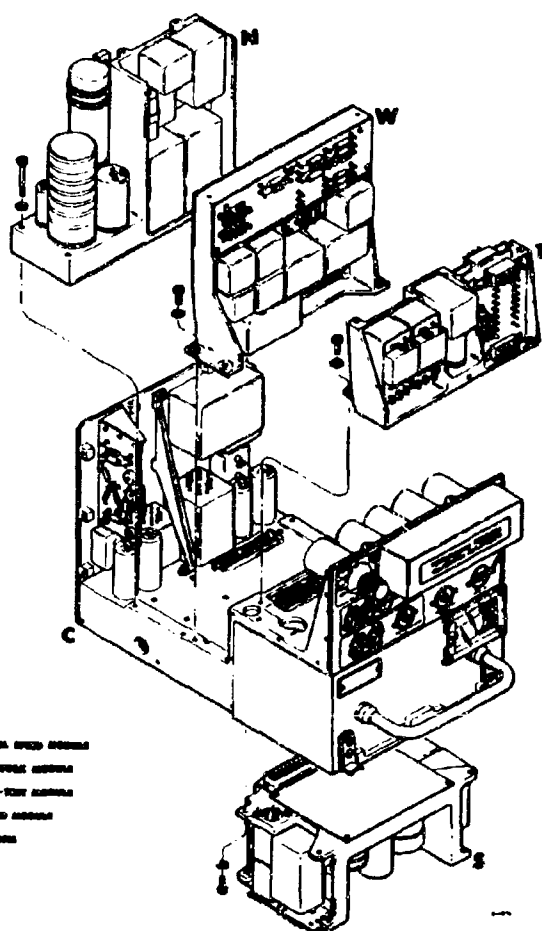

AIRESEARCH MANUFACTURING DIVISION  
Los Angeles, California

A

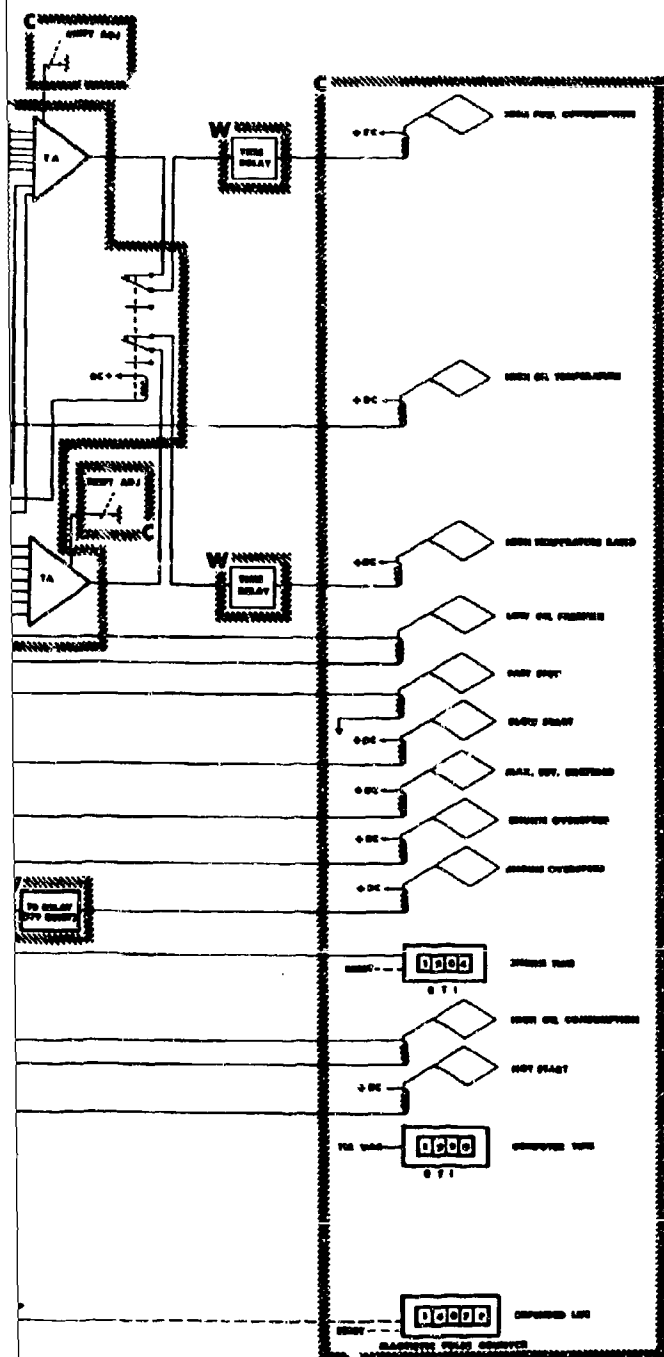

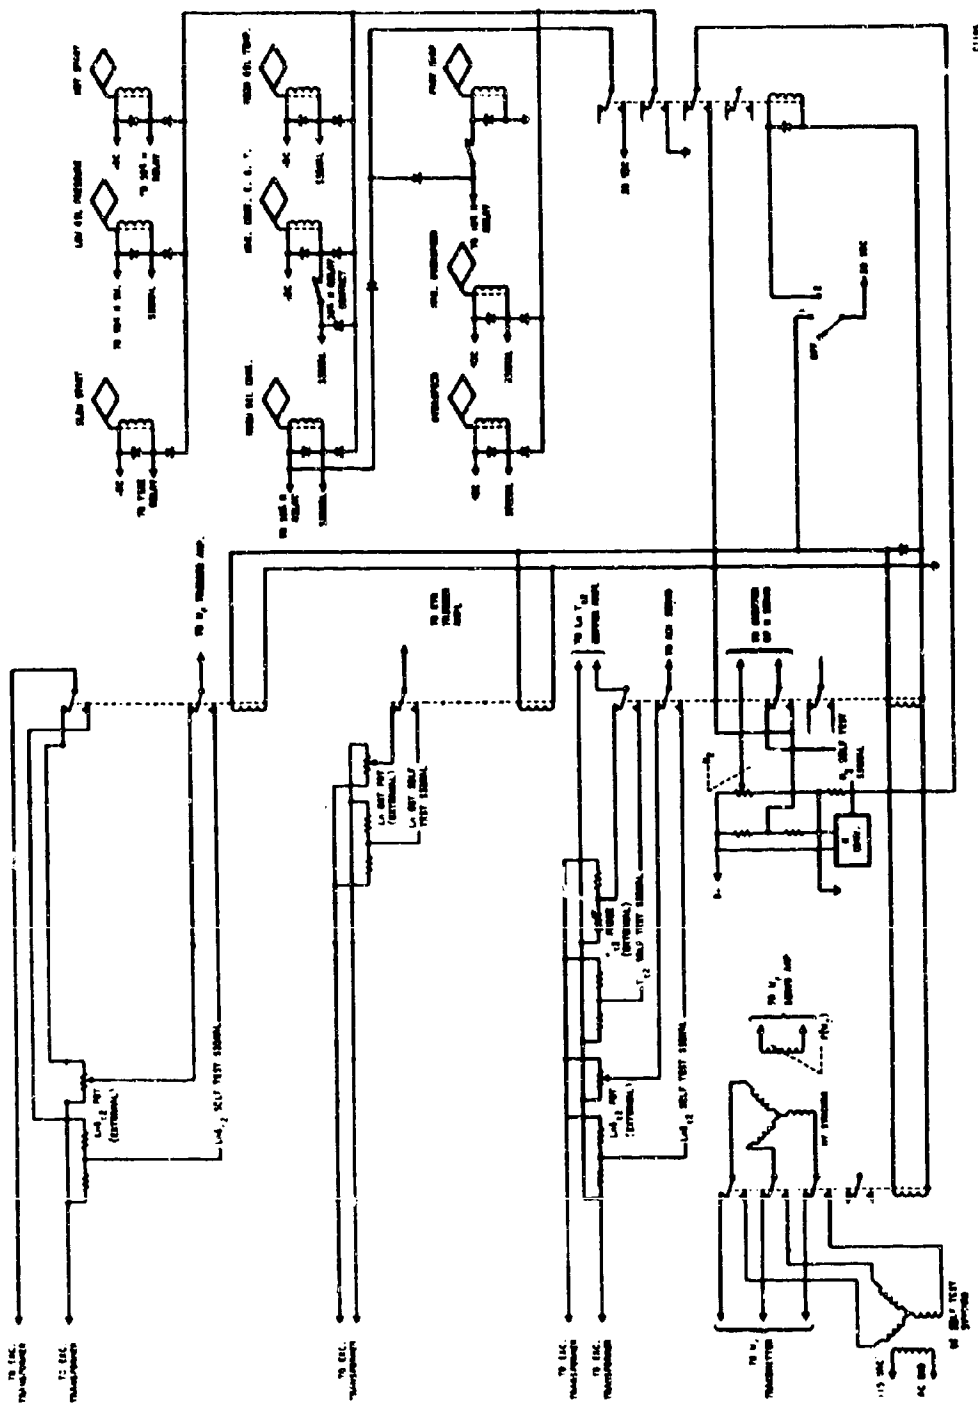

**Figure 8. Computer/Display Self-Test Circuitry**



#### 2.2.2.4 Computer/Display Calibration Adjustments

The controls for the calibration adjustments which adapt the Computer/Display for engine-to-engine variations and for transducer variations are shown in Figure 9.

#### 2.2.3 Signal Data Translator

The Signal Data Translator is a second major component of the Engine Analyzer System. This unit is shown in Figure 10. A front view photograph of the Signal Data Translator is shown in Figure 10a.


The purpose of the Signal Data Translator is to present to the Recorder a number of digital and analog signals. The digital signals from the thumbwheels can be seen in Figure 10. This documentary data is composed of the aircraft and engine serial numbers, flight number, and date; the twenty thumbwheels can be seen in the figure. The switch inputs, e.g., afterburner on and water injection on, are also essentially digital, since the function conditions are represented by a voltage or lack of voltage. The analog signals are those from the engine transducers.

Table VI lists the inputs to the Signal Data Translator, and their sampling frequency, while Table VII lists the source of each. The analog signals from various transducers are conditioned to a zero to five volt dc standard-voltage analog format, and then converted to binary coded decimal digital format. The numbers derived from the BCD conversion then time-share an output circuit with the outputs from the thumbwheels and on-off air frame switches. Each resultant number has 12 bits. The numbers are presented to the recorder as three serial digits in BCD NRZ format. A parity bit is computed by the Signal Data Translator and presented with each BCD digit.

A complete record of all inputs occurs in the first 20 seconds of each minute. Every 60 sec is a frame and every 1/48 of a second is a channel.

A complete breakdown of the frame, channel, and record is shown in Figure 11.

A complete record occurs in the first 20 seconds because the hundreds digit of channel 01 receives 20 different inputs from the 20 SDT thumbwheel switches. One of the 20 SDT thumbwheel switch inputs is sequenced into channel 01 during each record. All of the other 47 data channels are completely sampled over during each second. The other aircraft switch functions are recorded on the tens and units digit of each 01 channel.

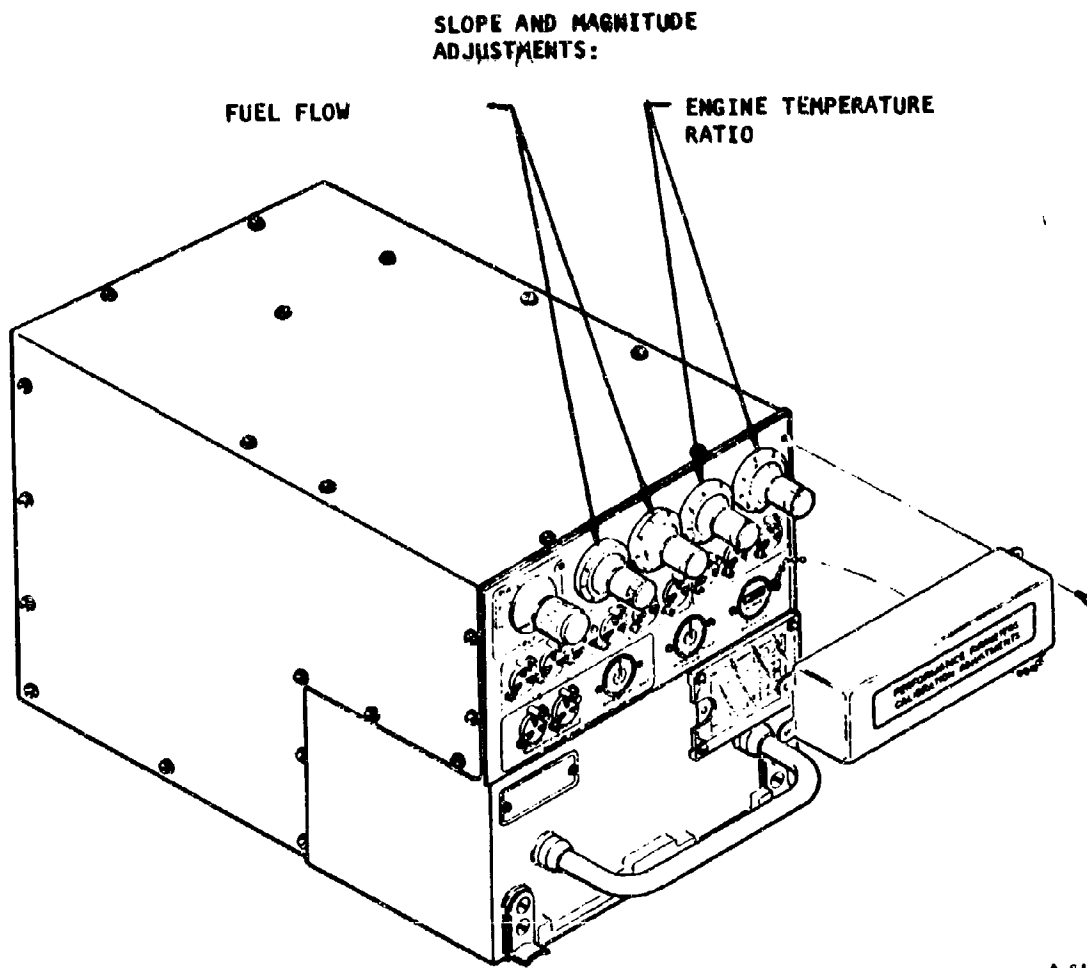

**Figure 9. Computer/Display, Showing Calibration Adjustments**


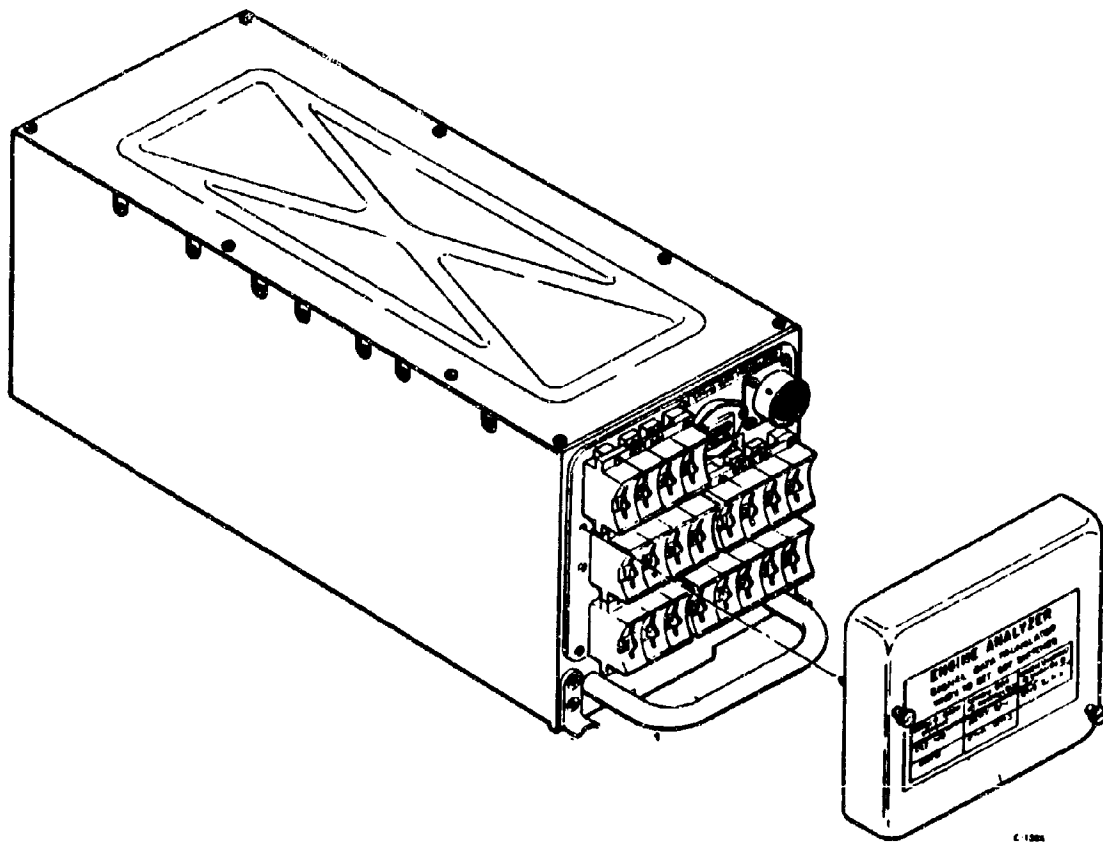


Figure 10. Signal Data Translator

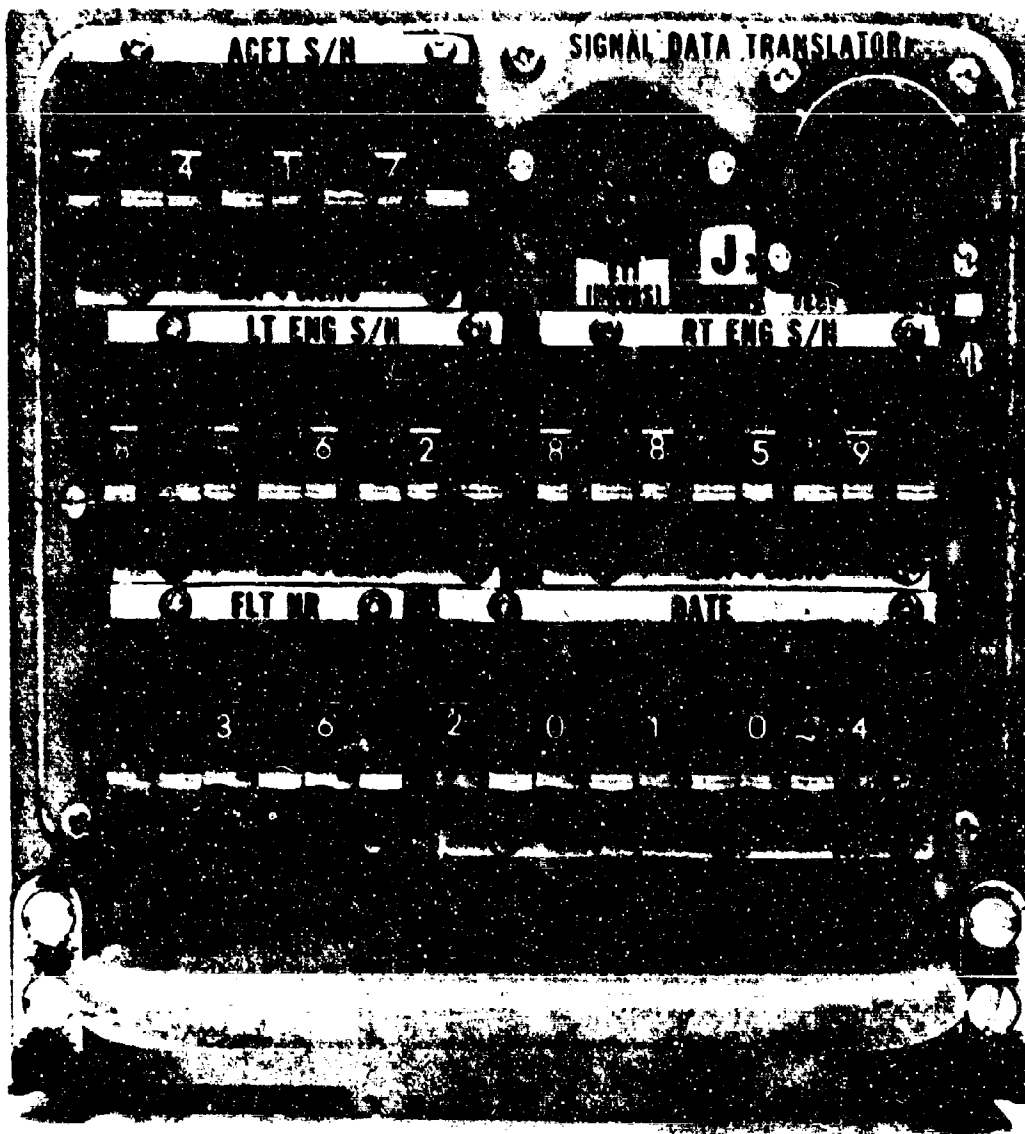

52293-2

Figure 10a. Front View Photograph of  
Signal Data Translator

TABLE VI  
PARAMETER FREQUENCY OF SIGNAL DATA TRANSLATOR OUTPUT  
F-105D ENGINE ANALYZER SYSTEM

Once Per Sec	Every 2 Sec	First 20 Sec of Each Min
W <sub>f</sub>	P <sub>oil</sub>	20 digits of documentary data, one digit each second
EPR		
PLA		
T <sub>cd</sub>		
T <sub>t2</sub>		
EGT		
T <sub>oil</sub>		
N <sub>1</sub> , N <sub>2</sub>		
P <sub>t2</sub>		
P <sub>oil b</sub>		
IGN		
AB		
WI		
Anti-ice		

TABLE VII


## SIGNAL DATA TRANSLATOR INPUTS

NOTE: All parameters are analog signals except switch functions

PARAMETER	CHANNEL		SOURCE	DEVICE	RANGE	PARAMETER	CHANNEL		SOURCE	DEVICE	RANGE
	Primary	Cross Strap					Primary	Cross Strap			
<u>Inlet Condition</u>						<u>Lubrication System</u>					
1. Inlet Total Temp ( $T_{t1}$ )	18	---	C/D	AC Transformer	300° to 1100°R	1. Oil Temperature	38	14	A/C	DC Resistance Probe	-65 to +350°F
2. Inlet Total Pressure ( $P_{t2}$ )	27	45	A/C	DC Potentiometer	1.6 to 36 psia	2. Oil Pressure	41	---	A/C	AC Variable Reluctance	0 to 100 psid
3. Water Injection On	---	---	A/C	Switch	---	a. TRU-20A	40(Sin)	---	A/C	AC	0 to 100 psid
<u>Compressor Conditions</u>						b. MH-5	46(Cos)	---	A/C	Synchro	
1. Compressor Discharge Temperature	39	21	A/C	DC Resistance	600 to 1500°R	3. Oil Breather Pressure	29	23	A/C	AC Variable Reluctance	10 to 25 psia
2. Compressor Discharge Pressure	17	35	A/C	AC Variable Reluctance	0 to 310 psi	<u>Initial Condition</u>	---	---	A/C	Switch	---
3. Spool Speed, $N_2$	9	33	C/D	DC Potentiometer	0 to 120% N	1. Ignition On	---	---	A/C	Switch	---
4. Spool Speed, $N_1$	5	---	A/C	AC Tachometer	0 to 120% N	2. Afterburner On	---	---	A/C	Switch	---
5. Anti-Ice On	---	---	A/C	Switch	---	<u>Documentary Data</u>					
<u>Fuel System</u>						1. Aircraft Number	---	---	SDT	Thumbwheel Switches	---
1. Power Lever Angle	2	20	A/C	DC Potentiometer	0-105°	2. Engine Number	---	---	SDT	Thumbwheel Switches	---
2. Fuel Flow	19	37	C/D	DC Potentiometer	0-28,000 pph	3. Flight Number	---	---	SDT	Thumbwheel Switches	---
<u>Turbine</u>						4. Date	---	---	SDT	Thumbwheel	---
1. Exhaust Gas Temperature	30	42	C/D	AC Transformer	700° to 2350°R	CODE: A/C --- Aircraft C/D --- Computer/Display SDT --- Signal Data Translator					
2. Engine Pressure Ratio	16(Sin) 22(Cos)	---	A/C	AC Synchro	1.2 to 3.4						

TIME SEQUENCE OF SIGNAL DATA TRANSLATOR OUTPUT

THIS TABLE SHOWS WHAT SIGNALS ARE TO BE RECORDED IN EACH 1/4TH SECOND TIME SLOT DURING AN ENTIRE MINUTE. THE SIGNAL PATTERN IS IDENTICAL IN EACH SUCCESSIVE MINUTE.

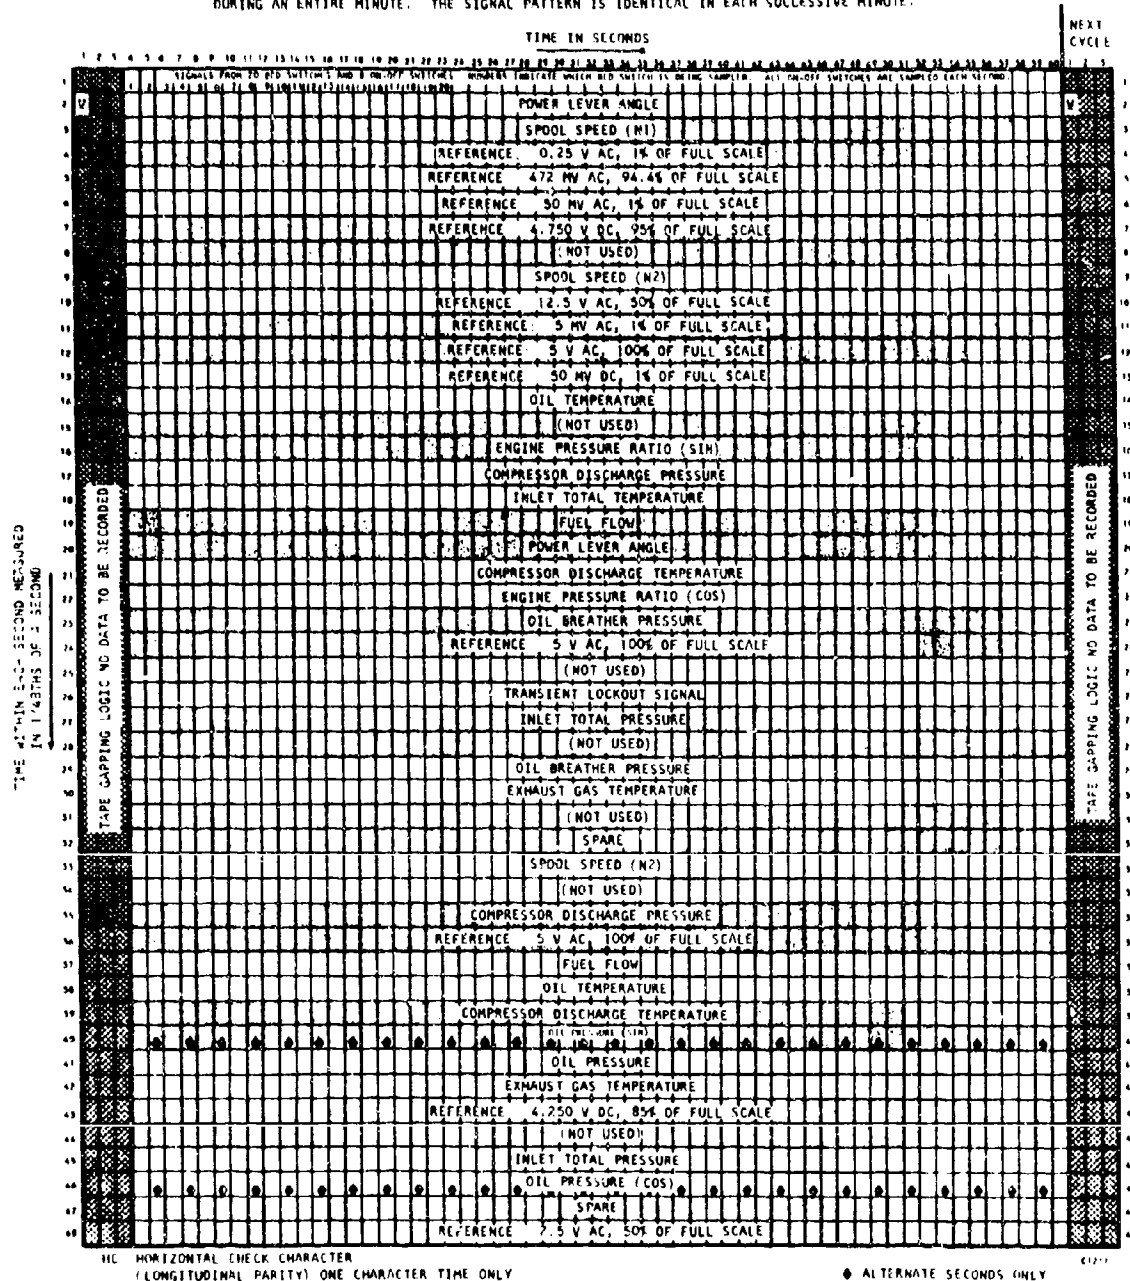



**Figure 11. System Timing Diagram Recording System Signal Data Translator and Recorder**



#### 2.2.3.1 Signal Data Translator Theory of Operation

A schematic diagram of the Signal Data Translator is shown in Figure 12. As this drawing illustrates, the Signal Data Translator is functionally divided into the following areas: (1) calibration, signal preconditioning and a-c signal conditioning; (2) submultiplexers and multiplexer; (3) thumbwheel switches; (4) analog-to-digital converter; (5) signal gate; (6) parity generators; and (7) programmer and sequence generator.

The system uses several different types of transducers and sensors, e.g., synchros, variable reluctance devices, resistance elements, and potentiometers, to measure the various engine performance parameters. The signal data translator furnishes the required excitation to these transducers. The signal conditioning transforms the signals from these various transducers to d-c voltages in a 0 to +5v range. These signals are sequenced by the multiplexers, and converted to digital format.

The thumbwheels, which have digital outputs, are also presented sequentially. The signal gate time-shares the output with the converted analog signals, the thumbwheel signals, and the inputs from the engine and airframe switches (i.e., ignition, anti-ice, afterburner, and water injection). The parity and NRZ generator determines the parity of the output and presents the output and its parity bit in NRZ format to the recorder.


a. Calibration and Signal Preconditioners - Both a-c and d-c analog transducer signals and calibration voltages are supplied by the transducers. All signals must be converted to standard 0-5 v dc for subsequent conversion to digital format. The d-c signals and calibration voltages are preconditioned to 0-5 v dc by simple resistive dividers.

The a-c signals are grouped into three sets. Each set is preconditioned to the same a-c voltage range. Each signal of a given set is converted to 0-5 v dc by an a-c conditioner. The a-c signal preconditioner makes use of transformers to change voltage levels.

The preconditioning circuits also provide standard calibration signals which perform two functions: first, they verify the accuracy (scale factor or gain, and null) of the ADC and of each a-c to d-c signal conditioner; second, in the case of the a-c conditioners, they enable ground-based data reduction to correct for transducer scale factor errors caused by variations in the 115-v, 400-cps line supply.

Several different types of transducers and sensors supply data to the Signal Data Translator. Some of these must be excited by the SDT in order to provide semistandardized signals which can be handled by the time-shared signal conditioners. The following paragraphs describe this excitation and the preconditioning required to provide signals which may be either directly connected to the analog-to-digital converter or connected to one of the three a-c to d-c signal conditioners.



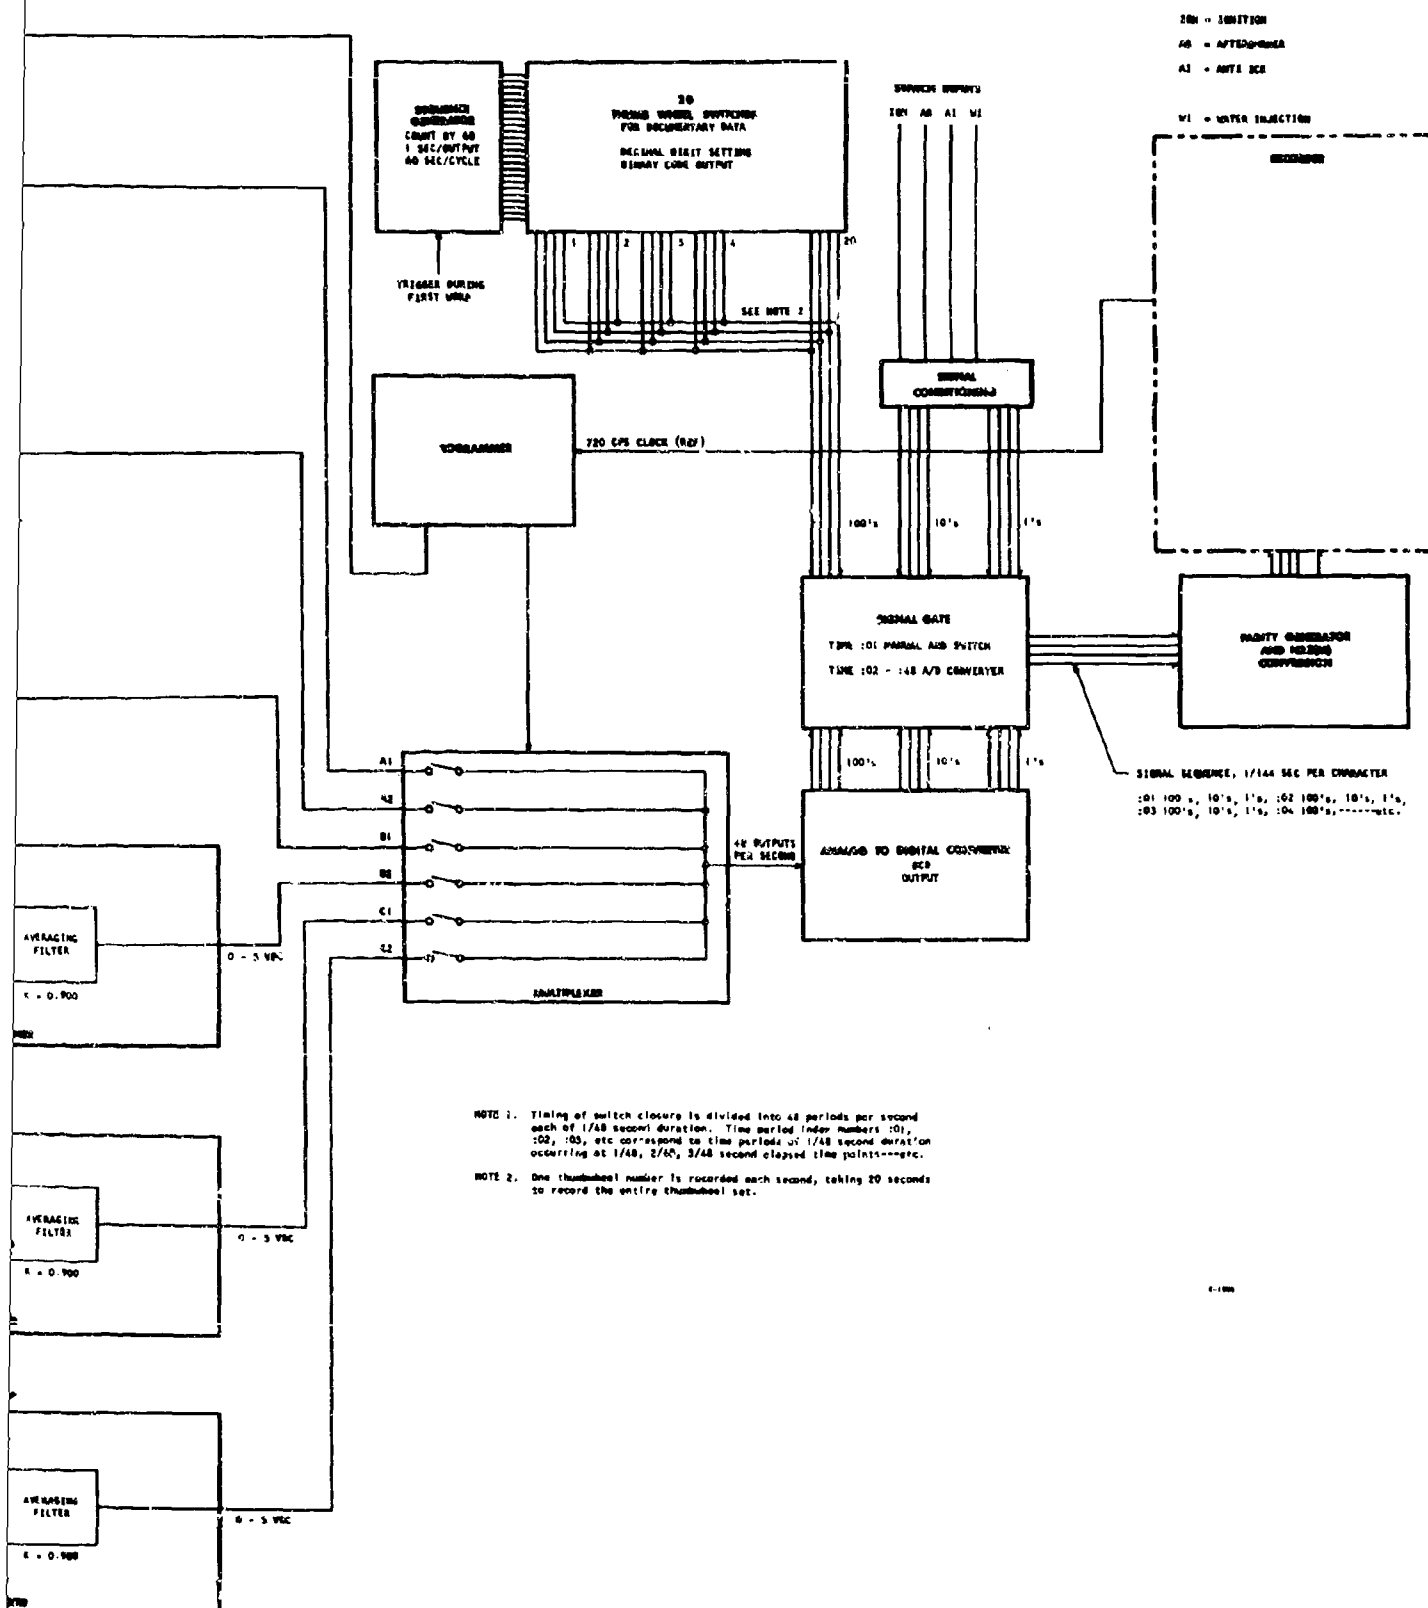

B

Synchros - The synchro signal inputs are three wire delta signals, the three voltages being spaced 120 deg apart (space phase). The three-wire, 120-deg signal is converted to a four-wire, 90-deg, resolver-type signal and recorded as two perpendicular components of the synchro angle vector. The conversion is accomplished with two Scott T-connected precision transformers which yield the sine and cosine of the input angle.

In addition to the transformer T, a bucking voltage transformer is used for synchro signal preconditioning. Since the a-c to d-c signal conditioners require a single-phase voltage input, the converted synchro voltages are offset by 12.5 v, converting the nominal voltage range, 11.8 v in-phase to 11.8 out-of-phase, to a new range of 0.7 to 24.3 v in-phase. By recording a wider range, 0 to 25 v, as 0 to 1000 counts, assurance is provided that individual transformation ratio variations from one synchro to the next will not result in off-scale voltage signals. The offset voltage is also recorded to provide an exact null point definition and allow precise calculation of synchro angles, independent of expected variations in excitation voltage or synchro transformation ratio.

Variable Reluctance, 10.45 to 15.55 v - This signal results from the unbalance of a 26-v bridge circuit in the transducer which is balanced at mid-scale. Since the signal conditioning circuits are designed to operate on a zero to maximum voltage signal, a bias voltage is subtracted from the incoming signal. The bias voltage shifts the range of the input to 0 to 5.1 v. An additional precision stepdown transformer provides signal isolation and changes the voltage range to 0 to 500 mv, in order to be able to use the same signal conditioner as the other variable reluctance transducers.

Variable Reluctance, 0 to 500 mv - This signal is obtained from several AiResearch-supplied transducers. These are bridge unbalance devices, as is the type described above; however, they are electrically connected internally to provide an output which varies from 0 to 500 mv for the full range of input values. The transducer scale factor is defined as 50 mv/v for full scale; the signal data translator provides an excitation voltage of 10 v which gives the 500 mv full-scale range.

Resistance Probe Temperature Sensors - Two types of resistance probes are used for temperature sensing; one has a nominal resistance, of 50 ohms, the other, nominally 90 ohms at 0°C. A d-c current of approximately 10 ma, in the case of the 50-ohm probes, or 5 ma in the case of the 90-ohm probes, provides an output within the five volts dc input range at the maximum temperature of the required ranges. Series precision resistors from the 28-v d-c supply to the probes, selected to deliver the desired currents into the known maximum probe resistances, provide simple and effective means of converting the probes' temperature-resistance functions into usable voltage signals. Due to the finite source impedance feeding each probe, the current through the probe will be partly a function of probe resistance, i.e., the voltage across the probe will not be strictly proportional to probe resistance. The relationship is, however, defined so that the ground computer can be supplied with the exact temperature-voltage function for each probe network.

To make these temperature probe measurements independent of variations in the 28-v dc supply voltage, a reference signal given by a fixed precision divider from the 28-v d-c supply is also recorded.

400-cps Signals from Computer/Display - Two quantities, EGT and  $T_{t_2}$ , are supplied from the Computer/Display in the form of 400-cps signal outputs from buffer amplifiers through transformers. These signals are handled in much the same way as the 500-mv transducer signals. The primary difference is that these signal circuits' excitation voltages, which determine the signal scale factors, are supplied by the Computer/Display unit, rather than by the Signal Data Translator. To avoid possible scale factor errors, an excitation reference signal is recorded with each information signal. The exact excitation used in the Computer/Display is, therefore, known; moreover, the signal can be corrected for variations in this excitation during ground computer data reduction.

Potentiometers - All potentiometers, whether located in the Computer/Display or externally mounted in the aircraft, are handled electrically in the same way. Excitation for the potentiometers is provided from the same supply as the ADC reference voltage. The resistance ratio output of the potentiometer is thus converted to a voltage input to the ADC with the same scaling as the ADC reference.

Tachometer Signal - Since the low-pressure spool speed is not used in the Computer/Display, this signal must be conditioned in the Signal Data Translator. However, it is a signal of precisely the same form as the tachometer input to the Computer/Display; the same frequency to d-c voltage conditioner is used in the Signal Data Translator as in the Computer/Display, providing a d-c voltage to the ADC.

Calibration References - In addition to the true information channels, nine words in each 1-sec subframe are used to record calibration signals, as a continuing check on the accuracy of the SDT. Two kinds of such signals are used, d-c and a-c.

Two d-c signals are obtained directly from resistive division of the basic ADC 5-v reference supply. One is a signal voltage of 1 percent of the reference, in order to check possible ADC null drift; the other is a 95-percent signal, checking ADC scale factor. Between these two signals, the accuracy of the ADC is verified. A third d-c signal of 85 percent of full scale is derived from the 28-v supply, since this supply is used to deliver excitation current to the temperature probes, and the probe excitation current is proportional to this voltage. This calibration signal is to be used as a scale factor correction on all temperature probe voltages.

Two a-c voltage levels also are provided at the input to each a-c to d-c signal conditioner during each 1-sec subframe. These are 94.4 percent and 1 percent of full scale. The 1-percent signal verifies the null accuracy of the signal conditioner; the 94.4-percent signal verifies gain, or scale factor. Also, since the a-c signals are obtained from voltage ratio devices which are excited from the aircraft line voltage, and since this line voltage will fluctuate with time, this calibration check is required to correct for line voltage variations as well as possible signal conditioner gain errors.

b. Signal Conditioners - The input signals and preconditioning circuits simplify the signal conditioning problem. The submultiplexer outputs are all in the form of either a d-c signal, which can be directly connected to the ADC, or an a-c voltage signal with a range from zero to some maximum voltage, with the same maximum voltage for every signal which connects through a given submultiplexer. Each signal conditioner is, therefore, only required to convert a range of a-c voltage to a standard range, 0 to 5 v, of dc. This is accomplished by operating on the signal successively with a stable fixed-gain a-c amplifier, a precision demodulator, and a smoothing filter.

Amplifiers - The basic amplifier circuit is a three-stage, direct-coupled amplifier, utilizing heavy overall feedback both for a-c gain stability and d-c bias stabilization. The gain stability is approximately 0.2 percent over a wide range of temperatures up to the maximum temperature required.

Demodulators - The demodulator circuit switches on and off synchronously with the 400 cps line power. The circuit has very little low temperature drift and contributes an error of 0.05 percent.

Filter - The four-element Bessel filter designed for these signal conditioners has a total ripple and settling time error below 0.1 percent. The filter has four reactive elements and a nominal corner frequency of approximately 40 cps.

c. Multiplexers - All of the analog transducer signals are scanned by six submultiplexers in a fixed time sequence. Signals with the same characteristics are scanned by the same submultiplexer.

The outputs from the signal conditioners, as well as the signals that were already in the 0 to 5 v dc format, go to the multiplexer. The multiplexer samples each of the six submultiplexer output signals in turn in a fixed time sequence. The multiplexed signal then goes to the analog-to-digital converter.

The switching elements of the multiplexers are reed relays which are controlled by the SOT programmer. The relays are described in the following paragraphs.

Relay Driver - To isolate the logic and counting circuits in the programmer from the voltage pulses associated with switching the relays, which are inductive loads, separate transistors are used as relay drivers. This method ensures that the inductive voltage spikes likely to result from switching the relay coils will not cause spurious counts or erratic switching; also, it allows the logic circuits to run at relatively low power levels.

The relay driver circuit accepts a logical zero (ground) input from the programming logic and provides a ground signal to one end of the relay coil load; the other end of the relay coil is permanently connected to the positive voltage supply. Two transistors are used to provide the required current multiplication. Both are operated as grounded emitter inverter stages. The first is normally biased off and is switched on by the NAND gate ground signal to command the relay to turn on. The second transistor then turns on, allowing current to flow through the relay coil. Although the NAND gate itself is designed to drive only a 1.5-ma load, the current multiplication in the 2-transistor driver circuit readily provides the approximately 60 ma required by the 2-pole relays in the submultiplexers.

Zener diode protection is used to limit the voltage spike produced when the coil is switched off and to protect the coil driver transistor from over-voltage. This method is preferred to a simple shunt diode because of the faster relay dropout time it provides.

Switching Element - A reed relay consists of one or more reed switch elements and a d-c actuating coil. The relay contacts are hermetically sealed in a glass capsule containing an inert gas. The switch elements, or reeds, are made of a nickel-iron alloy. The contact surfaces are gold-plated for this application to provide reliable life and performance for switching the low-level signals of the engine analyzer transducer. The coil is provided with a magnetic shield which improves the magnetic circuit and isolates adjacent switch assemblies from stray magnetic field interactions that might otherwise affect pull-in or drop-out characteristics.

d. Thumbwheel Switches - The thumbwheel switches are rotating devices which display each digit on a counter drum dial. The drum for each digit may be rotated individually to the desired number. A connector at the back of each counter wheel provides five wires which give an electrical BCD representation of the digit which is set to show on the face of the switch. The wires are for the 8, 4, 2, and 1 binary bits, representing the digit displayed, and an excitation or common lead. Wiper contacts, mounted on the display drum, travel over a printed circuit card with the rotation of the drum, and successively connect the common lead to the various output bit leads required to define each decimal digit in turn. The logic language is a closed circuit for a one bit and an open for a zero bit. As described in the programming and sequencing discussion, the common leads of the 20 thumbwheel switches are successively energized to provide commutation between the switches in the recording sequence.

e. Analog-to-Digital Converter - The analog-to-digital converter changes each of the 0-5 v dc signals in the sequence from the multiplexer into numbers of three four-bit digits (binary-coded decimal), which is the format required by the system recorder.

The analog-to-digital converter is of the voltage ramp type. These devices digitize input voltages by generating a time period as a function of the input voltage and gating a counter during this time period.

The components of the system are: (Figure 13)

1. A voltage ramp generator to provide a signal with constant rate of change of voltage.
2. A switching network and steering logic to condition the ramp generator signal and input voltage for the zero crossing detector
3. A zero crossing detector to provide an indication of the zero voltage and the input (measured) voltage ramp crossover points
4. A reference power supply for excitation of the input devices and to provide a reference voltage for the ramp generator
5. A gatable BCD Counter for conversion of the time period to a BCD output

At the receipt of a signal at the reset input, the ramp generator, switching networks, and counter are all set to their initial state. After the removal of this signal, a negative-going voltage ramp is initiated by the ramp generator. The switching logic adds the input from the ramp generator to a small bias voltage to generate a voltage which starts slightly positive and progresses toward zero. This voltage is then applied to the zero-crossing detector. As this voltage crosses zero, the detector provides an output to the steering logic, changing the state of its memory element, and starts the counter. The switching network then adds the previously generated ramp voltage, which is now zero and progressing in a negative direction, to the input signal and resets the zero-crossing detector. The input to the detector will now be positive by an amount proportional to the input signal. As the voltage ramp progresses in a negative direction, the detector input will again cross zero, providing an output which is used to stop the counter. The time the counter was operating is, therefore, directly proportional to the input voltage, and the accumulated count is a digital representation of the input.


f. Signal Gate - The inputs to the signal gate come from the aircraft switches and the thumbwheel switches, and from the output of the analog-to-digital converter. According to timing signals received from the programmer, the signal gate selects the output word from either the ADC or the switches, and either the hundreds, tens, or units digit of the chosen word, and presents this digit to the NRZ(M) converter.

Parity Generator and NRZ(M) Converter - The parity generator and NRZ(M) "non return to zero" converter receive their inputs from the signal gate. The signal gate output is the four bits associated with one decimal digit.

The parity generator uses the signal gate outputs to compute even parity. If either one or three of the four inputs to the parity generator is ONE the output of the parity generator will be a ONE. If either none or two of the four inputs to the parity generator is ONE, the output of the parity generator will be ZERO.

The NRZ(M) converter has a five bit register. The five inputs to this register are the four bits selected by the signal gate output and the output of the parity generator. If the input bit going to a specific flip-flop in the register is a ONE, the flip-flop will change state. If the input bit going to a specific flip-flop in the register is a ZERO, the flip-flop will remain in its original state, resulting in the NRZ(M) format required by the recorder.



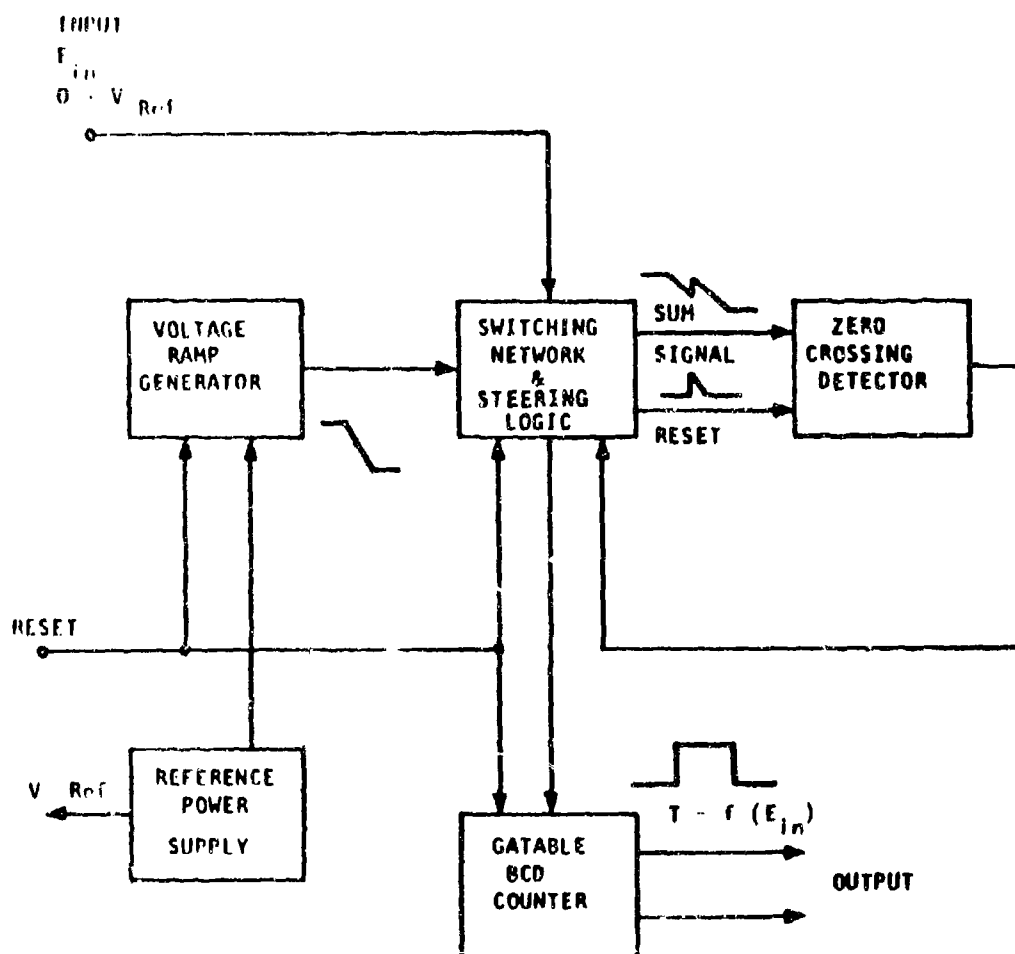

A-5342

Figure 13. Analog-to-Digital Converter

g. Programmer - The programmer in the Signal Data Translator controls all the required time sequencing. It controls the opening and closing of the multiplexer and submultiplexer switches, as well as pulsing the analog-to-digital converter, and the signal gate.

System Timing - The programmer generates its timing pulses from the 720-cps clock frequency output of the Recorder; the data sequence presented to the Recorder is spaced directly proportional to the speed of the tape, resulting in a constant data density on the tape.

The basic recorded frame on the magnetic tape is 60 seconds. There are 57 seconds of continuous BCD recording, followed by 3 seconds of blanking. All incoming data are multiplexed so that each is recorded once per second with the exceptions noted in Table VI: oil pressure,  $P_{oil}$ , is only recorded once every 2 seconds, and the thumbwheel data are recorded one digit each second for the first 20 second of each frame.

During each 1-second subframe, 48 unique inputs are selected by the multiplexer and submultiplexer and presented to the ADC. A signal time period in the subframe is 1/48th second or approximately 21 millisecond. A time period is symbolized in the following discussion with a colon; for example, :17 refers to the period from 16/48 to 17/48 second after the start of a 1-second subframe.

Some of the programmer timing signals are used to close one of six multiplexer switches and simultaneously closes one of the eight six-pole switches on each of the submultiplexers. The switching sequence makes it possible to select 48 unique data channels in sequence. This is done in 48 time periods (Table VIII).

During time period :01 only, data for recording comes from the thumbwheel and aircraft switch inputs. During this time, the signal gate selects digital data from the switches. During time periods :02 through :48, the signal gate passes the data channeled through the submultiplexer and multiplexer and digitized by the analog-to-digital converter.

The following sequence of events occur during each time period from :02 through :48.

Start	0	1's BCD triggered from ADC register
	10 $\mu$ s	Signal to switch multiplexer selection to next channel
	1.5 ms	Multiplexer switching completed, including contact bounce and transients
	2.5 $\pm$ .5 ms	ADC conversion starts
	6.1 ms	ADC conversion cycle complete
	6.94 ms	100's BCD triggered from ADC register

15.88 ms 10's Binary-Coded Decimal triggered from ADC register  
End 20.82 ms 1's Binary-Coded Decimal triggered from ADC register

Every 1/144 second, a four-bit digit enters the parity generator and NRZ(M) conversion unit. The four data bits enter the output registers and simultaneously set a parity register. Two microseconds after the incoming data arrives, an output command-pulse transfers the new bits to the recorder amplifiers. The data presented in Figure 11 show the time sequence of the Signal Data Translator output.

### 2.2.3.2 Signal Data Translator Modules

The Signal Data Translator is assembled in six functional modules: (1) the programmer, (2) the analog-to-digital converter, (3) the relay module, (4) the signal conditioner module, (5) the frequency-to-dc converter, and (6) the power supply. An exploded view of the Signal Data Translator showing these modules is presented as Figure 14. These modules are designed for easy removal.

### 2.2.3.3 Signal Data Translator Self-Test

The circuitry for the Signal Data Translator self-test is housed in a box separate from the SDT chassis. The self-test unit is connected to the Signal Data Translator through the connector on the SDT front panel, shown in Figure 14.

The Signal Data Translator self-test checks the signal conditioner, multiplexers, and the analog-to-digital converter.

To self-test the Signal Data Translator, the following operations must be performed.

- a. Set the switch on the self-test unit to Position 1.
- b. Depress the self-test unit pushbutton. The lamp on the self-test unit should light within 1 minute.
- c. Repeat for switch Positions 2, 3, and 4. In each position, the lamp should light within 1 minute after the pushbutton is depressed.

If the lamp does not light under each of these conditions, the Signal Data Translator is malfunctioning.

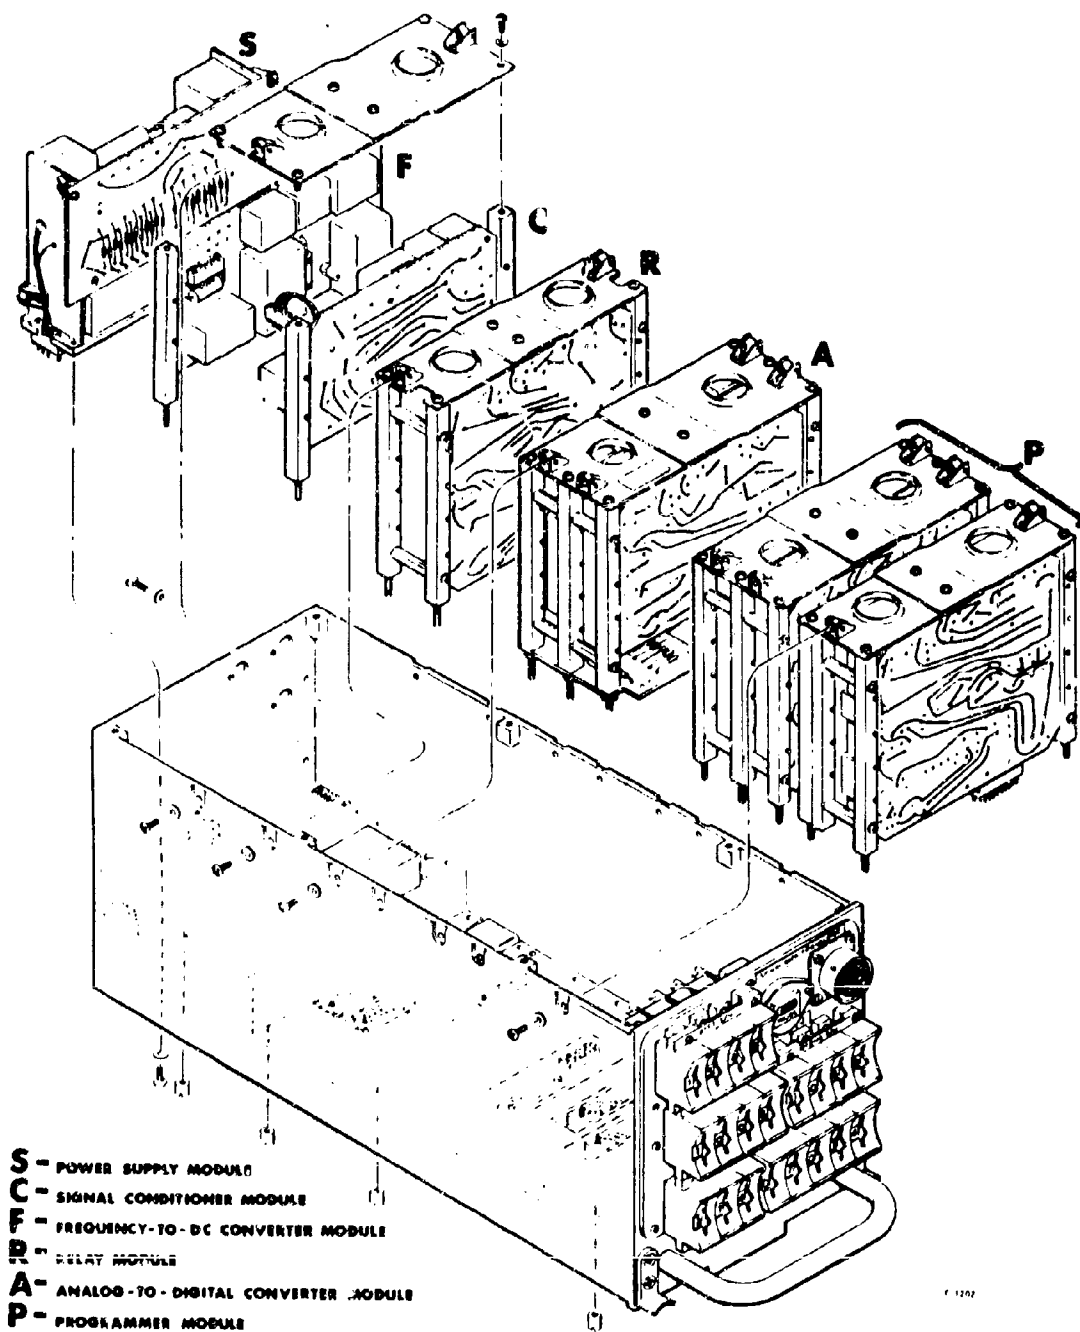


Figure 14. Signal Data Translator Exploded View

A schematic wiring diagram of the SDT self-test circuitry is shown in Figure 15. The circuit performs in the following manner: several reference voltages are applied to the Signal Data Translator. Since the amplitudes of these voltages are known, the outputs of the analog-to-digital converter can be computed. For each of the reference voltages used for self-test, the most significant decimal digit of the analog-to-digital converter output is examined. This is done as the self-test channel is being scanned. The three a-c signal conditioners and one of the d-c channels are checked.


A three-pole, four-position switch is used to select one of the four self-test channels. The signals that operate four of the multiplexer relays are used to determine when each of the four self-test signals have been selected. The 2's bit and 1's bit of the ADC output are the same for all four tests. Therefore, the two bits associated with the most significant decimal digit of the analog-to-digital converter output, the 8's bit and the 4's bit, are connected to the output line either directly or through an inverter. The circuitry is such that the output line will always be high whenever the analog-to-digital converter is correct. If the pushbutton switch is depressed when the output line is high, the SCR will be turned on, thus lighting the lamp.

#### 2.2.4 Recorder

The third major component of the Engine Analyzer System is the Recorder. The Recorder, shown in Figure 16, produces a magnetic tape record in standard IBM format of the measured engine operation parameters, and the variation of each during the mission. These parameters are received by the recorder from the Signal Data Translator as digital NRZ(M) signals. The recorder uses a reel which has standard IBM type hubs and can record for 30 hr on one reel of tape. At the end of the 30-hr period, as indicated by the hours-remaining dial on the recorder face, or whenever the operation history of the engine is required, the tape is removed and processed by a computer facility utilizing the Engine Analyzer Data Processing Program; this results in a printout of the operating parameters, trends, etc., for each of the flights on the tape. Table IX lists some of the important features of the recorder and its magnetic tape output.


TABLE IX  
SIGNIFICANT RECORDER AND OUTPUT  
TAPE FEATURES

Tape speed	0.259 in./sec
Time per decimal digit word	1/144 sec
Parallel bits per word and parity	5
Words per channel	3
3-word channels per second	48
Words per inch	556
Continuous recording	57 sec
Blanking-gap	3 sec
Length of gap	0.819 in.
Tape width	0.500 in.
Tape length	2400 ft
Total recording period	27 1/2 hr

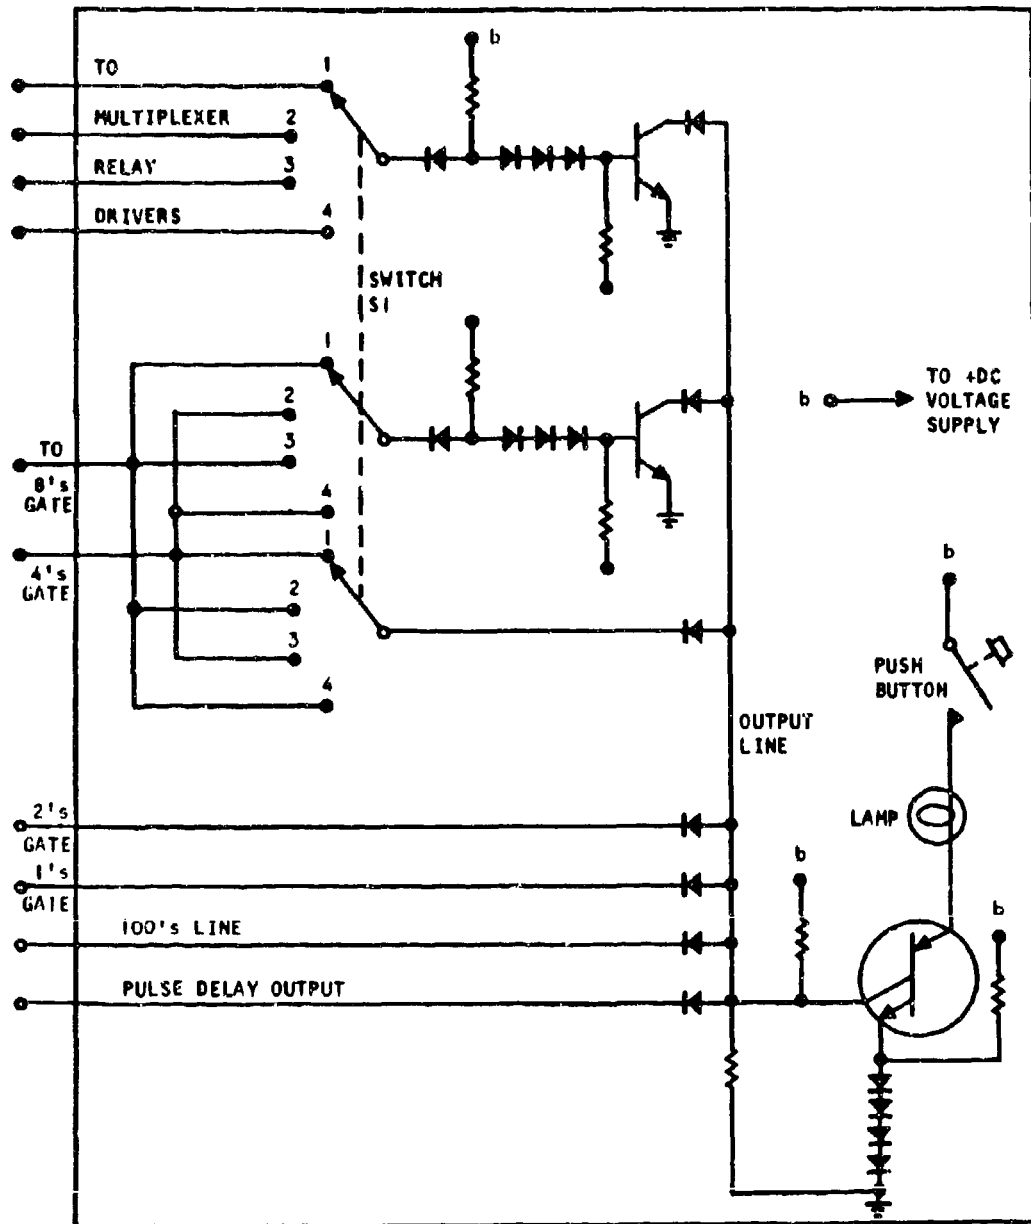

A-5081

Figure 15. Signal Data Translator Self-Test Circuitry

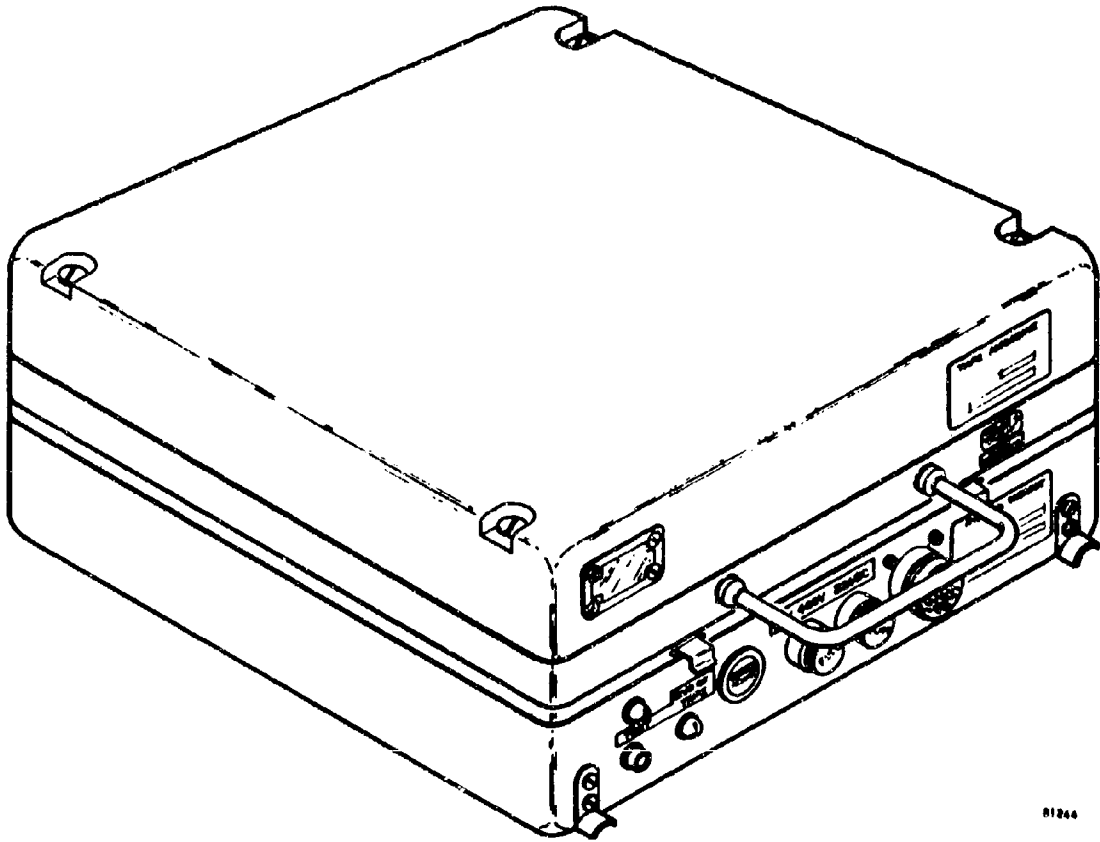

01266

Figure 16. Engine Analyzer System Data Recorder,  
Isometric View

The Recorder consists of two separable units: the tape magazine, which contains the tape feed and take-up reels and recording heads, and the recorder base, which contains the electronics and the motor and tape drive mechanism. The recorder base is securely rack-mounted to the aircraft in the air turbine motor (ATM) compartment behind Access Door FF76. The tape magazine is removable from the front of the Recorder. Both units are separately housed in dust-proof and humidity-resistant enclosures. The tape magazine, which also serves as a transit container for the tape, has a magnetic shielding liner which provides protection against spurious external magnetic fields up to a magnitude of 50 gauss.

#### 2.2.4.1 Recorder Theory of Operation

A functional diagram of the recorder is presented as Figure 17, showing both the electronic and mechanical portions of the recorder.

The record amplifiers are direct-coupled, solid-state stages, providing constant current to drive the magnetic heads. The timing reference is a 1440-cps tuning fork oscillator which controls the tape drive motor and also provides a 720-cps clock output to control the timing of the SDT. Power supplied to the recorder is both 28 v dc and 115 v, 400 cycle (single phase) ac. The d-c power is used for the motor drive circuits and the electronic functions; the a-c power drives the elapsed time indicator. The d-c power input is protected by transient suppressors which provide smoothing of aircraft-generated transients.

The tape transport mechanism is a capstan-driven, reel-to-reel device. The tape reels are mounted on the same axis for compactness, with the supply (unrecorded tape) reel mounted on the bottom and the take-up (recorded tape) reel mounted on the top. Take-up is accomplished on the take-up reel by a capstan-driven mylar belt driving the reel through a pulley-clutch combination. A clutch on the take-up reel compensates for the changing speed required as the reel fills with tape. On the supply reel, hold-back or drag is maintained by a static slip clutch. This drag prevents spillage from the supply reel as well as assuring taut guiding from reel to capstan. The capstan shaft is driven through a multi-jaw coupling between the magazine and the base. Drive power is provided by a 60-cps synchronous motor through a right-angle gear reduction designed to furnish the required tape speed of 0.259 in./sec.

#### 2.2.4.2 Recorder Modules

The Recorder is designed using modular concepts for ease of maintenance.

#### 2.2.4.3 Recorder Self-Test

The self-test function of the Recorder is actuated by the self-test push-button on the front of the recorder, shown in Figure 16. Initiation of self-test by pressing this button results in two operations: one is the





56

Illumination of the interior of the tape magazine which allows the motion of the tape pressure roller to be observed. The recorder drive motor is a hysteresis synchronous device. This operation, then, serves as a test of the tape transport mechanism. The second operation initiated by actuation of self-test is a check of the recording amplifiers and heads. The self-test circuit samples the head drive current in each channel. If saturation current is present at each of the record heads during the 3-sec blanking gap period of the SDT, an AND gate provides an output which causes the self-test lamp on the front of the recorder to light steadily for a 3-sec period out of each minute, indicating the proper functioning of record circuitry.

### 2.3 Description of F-4C System

The F-4C Engine Analyzer System comprises two Computer/Displays, one Signal Data Translator, one Recorder, two sets of transducers, and interconnecting cables, pneumatic lines, and connectors. A complete list of the transducers is given in Table X; the table also presents salient characteristics of the system, including the part numbers, form-factor and weight of each of the major system components. The power requirements of the major system components are identical to those for the F-105D system (see Table II). Appendix II presents complete electrical circuitry schematic for the system components.

#### 2.3.1 Transducers

The system includes a set of transducers which measure the temperatures, pressures, ON-OFF switch conditions, fuel flow, and speed (rpm), which will indicate changes of the engine operating conditions. The transducers are of the following types:

1. Variable reluctance transducers
2. Position variable resistance transducers
3. Temperature variable resistance transducers
4. Pressure switches
5. Temperature switches
6. Indicators (EGT)
7. Tach-generators
8. Synchro output transducers (EPR, fuel flow)
9. Relay contacts and limit switches

A list of the transducers used in the F-4C Engine Analyzer System is included in Table X. This table includes the weight and dimensions of major system components, in addition to the applicable AirResearch part number and Air Force Equipment Reference Number (AERNO). Succeeding paragraphs briefly describe the function of each transducer.

TABLE X  
F-4C ENGINE ANALYZER SYSTEM DATA

System Components	Part Number	Size (Inches) height x width x depth	Weight (Pounds)
Computer/Display	538254-2-1	7 by 6.5 by 9.88	18.5
Signal Data Translator	538250-1-1	5.5 by 5.25 by 12.5	17.7
Recorder	538956	5 by 11 by 11	22.7 <sup>Δ</sup>
TRANSDUCERS			
Afterburner Switch*			
Anti-Ice Switch*			
Boundary Layer Control* Switch			
Compressor Discharge Pressure	538947-1		
Compressor Discharge Temperature	538952		
Compressor Inlet Pressure	538362-1-1		
Engine Pressure Ratio	61-2484**		
Exhaust Gas Temperature Indicator	538382		
Exhaust Nozzle Area (Pot)	538440-1-1		
Fuel Flow Transducer*			
Ignition Switch*			
Inlet Guide Vane (Pot)	538442-1-1		
Oil Pressure Switch	538957		

\*F-4C engine analyzer system uses existing aircraft transducer

\*\*Air Force Equipment Reference Numbers (AERNO)

ΔIncludes tape and reels

TABLE X (continued)

System Components	Part Number	Size (Inches) height x width x depth	Weight (Pounds)
Oil Pressure Transducer*			
Oil Sump Pressure	538947-3		
Oil Temperature Switch	538948		
Oil Temperature Transducer	802187-1		
Power Lever Angle	538444-1-1		
Spool Speed (N)*			
Inlet Total Temperature	60-1625**		

\*Engine analyzer system uses existin. aircraft transducer

\*\*Air Force Equipment Reference Numbers (AERNO)

#### 2.3.1.1 Afterburner (A/B) Switch

The afterburner 115-v a-c signal to Computer/Displays one and two and the Signal Data Translator indicates that the A/B switch, actuated by a rise in fuel pressure, has been activated. AIRsearch detection system is isolated from the aircraft afterburner system by an isolation relay.

#### 2.3.1.2 Anti-Ice (A/I) Switch

The anti-ice 115-v a-c signal indicates that the A/I switch in the forward cockpit has been activated. The wiring diagram of the A/I system is found in Air Force Technical Manual T.O. 1F-4C-2-23, page 3-41, Figure 3-17.

#### 2.3.1.3 Boundary Layer Control (BLC) Switch

The boundary layer control switch provides a ground signal to the Engine Analyzer System that indicates that the two flap conditions, during which compressor bleed air is used for boundary layer control, are in effect. The two conditions are full-down and mid-way.

#### 2.3.1.4 Compressor Discharge Pressure ( $P_{cd}$ ) Transducer

This transducer measures absolute pressure at the discharge of the compressor. The transducer is a variable reluctance type with a range from 0 to 300 psia. The transducer output voltage varies from 0 to 500 mv at 400 cps for an input pressure change from 0 to 300 psia with a load of 20,000 ohms across the output. The output signal is supplied to the Signal Data Translator.

#### 2.3.1.5 Compressor Discharge Temperature ( $P_{cd}$ ) Transducer

The compressor discharge temperature transducer is a variable resistance element made of platinum wire, and has a temperature range of  $-100^{\circ}\text{C}$  to  $+500^{\circ}\text{C}$  with a nominal resistance of 50 ohms at  $0^{\circ}\text{C}$ . The probe tip has an applied operating pressure of 0 to 500 psia. The output is supplied to the SDT.

#### 2.3.1.6 Compressor Inlet Pressure ( $P_{t_2}$ ) Transducer

The compressor inlet pressure transducer utilizes a servoed force-balance sensor and provides outputs proportional to the natural logarithm of absolute pressure, switching action occurring at certain time-rates-of-change of the logarithm of absolute pressure, and a voltage proportional to absolute pressure.

#### 2.3.1.7 Engine Pressure Ratio (EPR) Transducer

The EPR transducer is a pressure ratio synchro-style thrust transmitter (type MK-2). The output is supplied to the SDT Scott "T" transformer.

#### 2.3.1.8 Exhaust Gas Temperature (EGT) Transducer

The exhaust gas temperature system consists of existing Chromel-Alumel thermocouple probes in the engine that actuate a single-point null-balancing type indicator in the cockpit. The indicator in turn provides four output signals to the engine analyzer. The four outputs are two pots and two

switches; switch "A" closes at 982°C for hot start and switch "B" closes at 749°C for in-flight overtemperature; pot "1" is a log function of EGT and pot "2" is exponential function of EGT.

#### 2.3.1.9 Exhaust Nozzle Area (ENA) Transducer

The exhaust nozzle area transducer consists of three ganged nonlinear pots, two 5000-ohm pots and one 1000-ohm pot, the positions of which are proportional to ENA. The pots are mechanically connected to the ENA Teleflex nozzle feedback linkage. Voltage ratios proportional to ENA are transmitted to the Computer/Display and to the Signal Data Translator.

#### 2.3.1.10 Fuel Flow (Wf) Transducer

The fuel flow transducer is a remote indicating synchro-style rate of flow transmitter (Type T-6A). The synchro outputs feed the following:

- a. An indicator with a range of 0 to 12,000 pph (Type A-19) in the cockpit
- b. A control transformer in the Computer/Display fuel flow servo

#### 2.3.1.11 Ignition Switch

The ignition switch signal is obtained from the cockpit ignition switch. The complete wiring diagram of the aircraft system is found in Air Force T.O. 1F-4C, Page 3-39, Figure 3-16.

#### 2.3.1.12 Inlet Guide Vane (IGV) Transducer

The IGV transducer consists of three ganged nonlinear pots, two 5000-ohm pots and one 1000-ohm pot, the positions of which are proportional to IGV position. The transducer is mechanically connected to the IGV linkage in a manner similar to the feedback system. The voltage ratios proportional to IGV position are transmitted to the Computer/Display and the Signal Data Transducer.

#### 2.3.1.13 Oil Pressure Switch

The oil pressure switch is a differential pressure-actuated switch used as a warning device to indicate the loss of turbine engine lubricating oil pressure. The switch provides a ground signal to the Computer Display upon loss of oil pressure.

The pressure switch has a pressure and vent port and is actuated by the pressure differential between ports. When oil pressure is 23 to 28 psid and above, a diaphragm in the switch housing maintains the switch contacts in the open position. When booster-pump pressure drops to 20 ( $\pm 1$ ) psid and below, the diaphragm closes the switch contacts, providing a ground circuit to the master caution control box. The pressure switch operates as follows: on increasing differential pressure, the switch will open the circuit at 23 to 28 psid and on decreasing differential pressure, the switch will close at 20 ( $\pm 1$ ) psid.

#### 2.3.1.14 Oil Pressure ( $P_{oil}$ ) Transducer

The oil pressure transducer is a synchro-style pressure transmitter (MHS). The output signals are supplied to an indicator in the cockpit and to the Signal Data Translator.

#### 2.3.1.15 Oil Sump Pressure ( $P_{oil\text{ sump}}$ ) Transducer

The oil sump pressure transducer is a variable reluctance output type differential pressure sensor which indicates the proper functioning or malfunctioning of the engine by indicating the common sump to ambient air differential pressure.

#### 2.3.1.16 Oil Temperature Switch

The oil temperature switch is a temperature-actuated switch used for indicating excessive oil temperature on the aircraft engine in flight. The switch provides a ground signal to the Computer/Display upon excessive temperature conditions.

#### 2.3.1.17 Oil Temperature ( $T_{oil}$ ) Transducer

The oil temperature transducer is a clamp-on and adhesive-bonded temperature transducer used for measuring the oil temperature of the aircraft engine in flight. The transducer output is a variable resistance signal supplied to the Signal Data Translator.

#### 2.3.1.18 Power Lever Angle (PLA) Transducer

The power lever angle transducer is a single-turn precision linear variable resistor. The output goes to the Signal Data Translator.

#### 2.3.1.19 Spool Speed (N) Transducer

The spool speed transducer N is a miniature electric three-phase, two-pole a-c tachometer-generator (GEU-7/A). The output signal goes to the Computer/Display and the cockpit indicators.

#### 2.3.1.20 Total Temperature ( $T_{t2}$ ) Transducer

The total temperature transducer is a dual-element total temperature probe capable of operating during atmospheric icing conditions. The dual elements are platinum wire, temperature-variable resistors which have a nominal resistance of 50 ohms at 0°C.

### 2.3.2 Computer/Display

The F-4C system employs two computer/displays, one for each engine of the F-4C. These units perform the same general functions as the F-105 computer/display and are identical to the latter units in external configuration. The F-4C computer/display, as described in the F-105 system description, presents red-flag indications when any of several engine parameters exceed predetermined limits.

The computer/display for the left hand engine is located in the forward cockpit in the left aft corner above the console. The computer/display for the right hand engine is also located in the forward cockpit in the right aft corner just above the console.

#### 2.3.2.1 Computer/Display Operation

As in the case of the F-105 system, the computer/display mechanizes test cell and thermodynamic performance parameters to provide a go/no-go assessment at shutdown of gross engine health. The tests performed are the same as listed in Section 2.2.2.1 for the F-105.

The basis for and mechanization of the tests for the F-4C are essentially the same as described for the F-105 (Section 2.2.2). The principal differences are the test limits employed. The test conditions and limits for the F-4C computer/display are shown in Table XI. A signal flow diagram and functional block diagram of the computer/display were presented earlier as Figures 6 and 7. These diagrams identify the elements peculiar to the F-4C computer/display and study of the diagrams provide a working knowledge of the operation theory of the computer/display.

Tables XII and XIII show the inputs, function ranges, and slew rates for the parameters for the referred fuel flow and engine temperature ratio computations.

#### 2.3.2.2 Computer/Display Modules

The modular construction of the F-4C computer/display is identical to that for the F-105 and was shown earlier in Figure 7.



TABLE XI  
COMPUTER/DISPLAY FLAG CHARACTERISTICS

Test	Test Condition	Failure Trigger Level
1. Slow start	Engine starting cycle from ignition or 10% rpm to 50% rpm; locked out thereafter	Greater than 55 sec
2. Fast stop	Engine shutdown 50% to 10% rpm	Less than 20 sec
3. Referred fuel flow	Steady-state engine operation, non-afterburning, non-water injection operation	$W_f^i \text{ meas} - W_f^i \text{ ref} > 0.10 W_f^i \text{ ref}$
4. Engine temperature ratio	Steady-state engine operation, non-afterburning, non-water injection operation	$ETR_{\text{meas}} - ETR_{\text{ref}} > 0.06 ETR_{\text{ref}}$
5. High EGT		
a. Hot start	Engine starting cycle to 90% rpm; locked out thereafter	Greater than 1800°F (982°C)
b. Operation	Sustained engine operation	Greater than 1380°F (749°C)
6. Engine overspeed		
a. Maximum	Any condition	Greater than 105% $N_2$
b. Normal	Any condition	Greater than 103.6% $N_2$ for over 1 min.
7. Low oil pressure	$N_2$ greater than 90%	Less than 21 psid
8. High oil temperature	Any condition	Greater than 300°F (149°C)
9. Expended hot section factors	EGT greater than 1572°R (600°C)	Accumulation

TABLE XII

J79-GE-15/F-4C REFERRED FUEL FLOW COMPUTER/DISPLAY  
INPUTS, FUNCTION RANGES, AND SLEW RATES

Input	Function	Source	Range	Slew Rate	Scale Factor
$W_f$	----	Fuel flow transmitter Type J-6A, per MIL-T-6598	200 to 12000 pph	NA	Synchro - 12.5 pph/deg to 3K pph 100 pph/deg above 3K pph
$T'_{t_2}$	----	Airframe total temperature probe, MIL-P-27723A, MIL-S 27188-2	390° to 1100°R	NA	Platinum wire with 50 $\Omega$ resistance 0°C
$P_{t_2}$		538362-1-1 Transducer	1.2 to 36 psia	Equivalent to $\ln P_{t_2}$ Rate range in 1 min	
N	----	Aircraft tachometer, type R-88G	0 to 120 percent $N_2$		
$f_2(A_8)$	----	Nozzle area potentiometer	Equivalent to 2.0 to 5.0 sq ft	NA	
$f_{10}(IGV)$	----	IGV potentiometer	-16.5 to +19.5 deg	NA	
---	$W_f$	Computer/Display servo repeater	0 to 12,000 pph	2000 pph/sec	
---	$T'_{t_2}$	Computer/Display isolation transformer	390° to 1100°F	3°F/sec	
---	N	Computer/Display spool speed servo	0 to 120 percent N	25,000 rpm/min	
---	$\ln N'$	Computer/Display $\ln N'$ servo	6000 to 8600 rpm	Compatible to N and $T_{t_2}$ rate	
---	RNI	Computer/Display RNI servo	0 to 0.6	Compatible to $P_{t_2}$ and $T_{t_2}$ rate	

TABLE XIII

J79-GE-15/F-4C ENGINE TEMPERATURE RATIO COMPUTER/DISPLAY  
INPUTS, FUNCTION RANGES, AND SLEW RATES

Inputs	Function	Source	Range	Slew Rate
$T'_{t_2}$	----	Computer/Display Isolation trans- former	390° to 1100°F	3°F/sec
EGT	----	EGT Indicator, modified MIL-I- 27209-A	700 to 2350°R	
N	----	Aircraft tach- ometer, Type R-88G	0 to 120 per- cent N	----
$P_{t_2}$	----		1.2 to 36 psia	----
$f_s(A_0)$	----	Nozzle area po- tentiometer	Equivalent to 2.0 to 5.0 sq ft	NA
$f_g(\text{IGV})$		IGV potentiometer	-16.5 to +19.5 deg	NA
----	$T'_{t_2}$	Computer/Display Isolation trans- former	390° to 1100°R	3°R/sec
----	$P_{t_2}$	Transducer	1.2 to 36 psia	Equivalent to $\ln P_{t_2}$ Rate range in 1 min
----	$N_2$	Computer/Display	0 to 120 per- cent N	25,000 rpm/min
----	$N_i$	Computer/Display N servo repeater	6000 to 8600 rpm	Compatible to N and $T'_{t_2}$ rate
----	RNI	Computer/Display RNI servo	0 to 0.6	Compatible to $P_{t_2}$ and $T'_{t_2}$ rate

# NOT REPRODUCIBLE

## 2.3.2.3 Computer/Display Self-Test

Computer/Display Self-Test is actuated by the switch in the upper left corner of the computer/display face. Position 1 of the switch, marked NO TRIP, simulates a normal engine operating condition in the computer/display; none of the flags should drop during this phase of self-test. Position 2 of the self-test switch, marked TRIP, simulates an abnormal operating condition in the computer/display, during which all the flags must drop.

A schematic wiring diagram of the self-test circuitry is shown in Figure 18. When the self-test switch is turned to position 1, NO TRIP, a set of input signals corresponding to a typical engine operating condition is applied to the computer/display. These conditions are simulated by resistive dividing networks. As mentioned above, none of the computer/display flags should drop. Position 2 of the self-test switch, TRIP, applies a set of signals corresponding to an abnormal operating condition. This is simulated by an improper spool speed signal for the other operating conditions. This abnormal condition will trip both the high consumption flag and the high engine temperature ratio flag. The remainder of the flags, which are switch operated, are tripped by the position 2 self-test circuitry. All the flags should, therefore, trip when the self-test switch is in position 2.

## 2.3.2.4 Computer/Display Calibration Adjustments

The controls for the calibration adjustments which adapt the computer/display for engine-to-engine variations and for transducer variations are the same as for the F-105 (Section 2.2.2.4).

## 2.3.3 Signal Data Translator

The characteristics and operation of the F-4C signal data translator are identical to those of the F-105 except for inputs and outputs. The characteristics of the inputs to the F-4C SDT are specified in Tables XIV and XV. The format of the F-4C SDT output is as shown in Table XVI. For all other aspects of the operation of this unit, refer to Section 2.2.3.

NOT REPRODUCIBLE

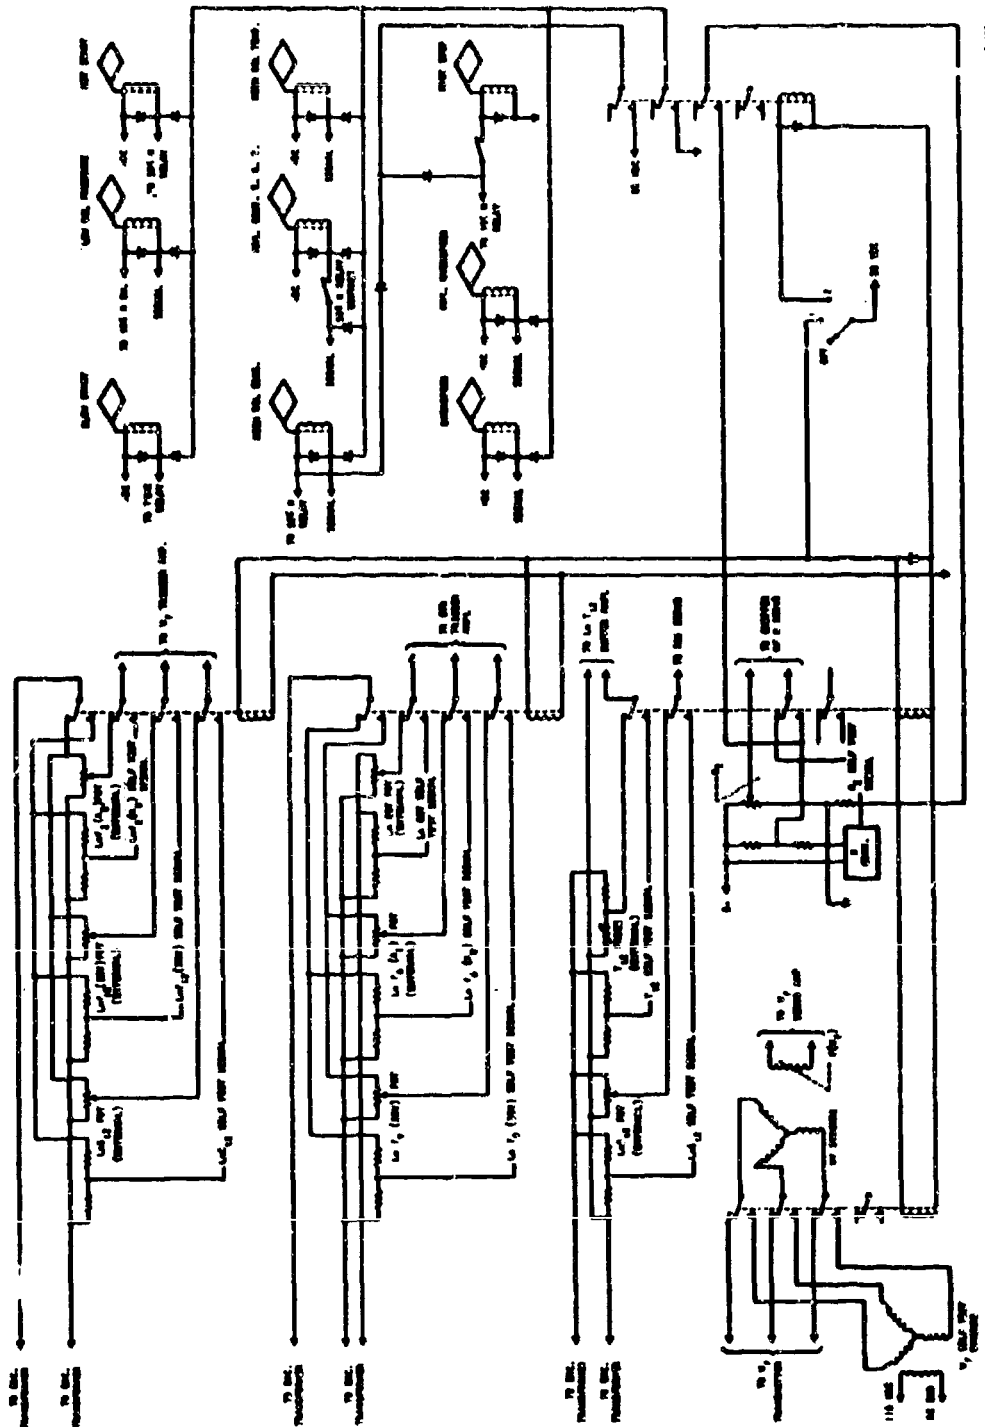


Figure 10. Computer/Display Self-Test Circuitry

TABLE XIV

## F-4C SIGNAL DATA TRANSLATOR INPUTS

PARAMETER	CHANNEL		SOURCE	DEVICE	RANGE	PARAMETER	CHANNEL		SERVICE	DEVICE	RANGE
	Engine No. 1	Engine No. 2					Engine No. 1	Engine No. 2			
<u>Inlet Conditions</u>						<u>Lubrication System</u>					
1. Inlet Total Temp ( $T_{12}$ )	18	18	C/H	AC Transformer	300° to 1100°	1. Oil Temperature	38	44	A/C	DC Resistance Probe	-45 to +550°
2. Inlet Total Pressure ( $P_{12}$ )	27	33	A/C	DC Potentiometer	1.2 to 36 psia	2. Oil Pressure			A/C	AC Synchro	0 to 100 psia
3. Inlet Static Temp Position	14	20	A/C	DC Potentiometer	-18.3° to +19.3°	40 (Sin) 44 (Cos) Alternate			A/C	AC Variable Reluctance	0 to 15 psia
<u>Compressor Conditions</u>						3. Sump Pressure	29	35	A/C		
1. Compressor Discharge Temperature	38	45	A/C	DC Resistance	600 to 1500°	<u>Ignition Condition</u>					
2. Compressor Discharge Pressure	17	23	A/C	AC Variable	0 to 310 psi	1. Ignition On	—	—	A/C	Switch	—
3. Spark Speed, R	15	21	C/D	DC Potentiometer	0 to 120° R	2. Afterburner On	—	—	A/C	Switch	—
4. Anti-Ice On	—	—	A/C	Switch	—	<u>Secondary Data</u>					
5. ILS On	—	—	A/C	Switch	—	1. Aircraft Number	—	—	SPT	Thumbwheel Switches	—
<u>Fuel System</u>						2. Engine Number	—	—	SPT	Thumbwheel Switches	—
1. Power Lever Angle	2	8	A/C	DC Potentiometer	0-101°	3. Flight Number	—	—	SPT	Thumbwheel Switches	—
2. Fuel Flow	19	25	C/H	DC Potentiometer	0-12,000 gph	4. Data	—	—	SPT	Thumbwheel Switches	—
<u>Engine</u>						CODE: A/C — Aircraft C/D — Computer/Display SPT — Signal Data Translator					
1. Exhaust Gas Temperature	30	42	C/D	AC Transformer	700° to 2300°						
2. Engine Pressure Ratio	18 (Sin) 20 (Cos) 34		A/C	AC Synchro	1.2 to 3.4						
3. Exhaust Nozzle Area	31	37	A/C	DC Potentiometer	240 to 710 in. <sup>2</sup>						

NOTE: All parameters are using signal's except switch functions

TABLE XV

PARAMETER FREQUENCY OF SIGNAL DATA TRANSLATOR OUTPUT  
F-4C ENGINE ANALYZER SYSTEM

Once Per Sec Per Engine	Every 2 Sec Per Engine	First 20 Sec of Each Min
$W_f$ EPR PLA $T_{cd}$ (CDT) $T_{t_2}$ EGT $T_{oil}$ N $P_{t_2}$ $P_{oil}$ -sump IGN AB WI BLC ENA IGV	$P_{oil}$	20 digits of documentary data, one digit each second

#### 2.3.4 Recorder

The F-4C and F-105 systems use the same recorder. See section 2.2.4 for a description of the recorder design and operation characteristics.

#### 2.4 Ground Calibrator

The Engine Analyzer Ground Calibrator P/N 538256-1-1 (Figure 19) provides ground support for the Engine Analyzer System. It is designed to check out and calibrate the Computer/Display, Signal Data Translator, and Recorder.


NOT REPRODUCIBLE

TABLE XVI

### TIME SEQUENCE OF SDT OUTPUT

**F-4C (J79 ENGINE)**

THIS TABLE SHOWS WHAT SIGNALS ARE TO BE RECORDED IN EACH 1/40TH SECOND TIME SLOT DURING AN ENTIRE MINUTE. THE SIGNAL PATTERN IS IDENTICAL IN EACH SUCCESSIVE MINUTE.

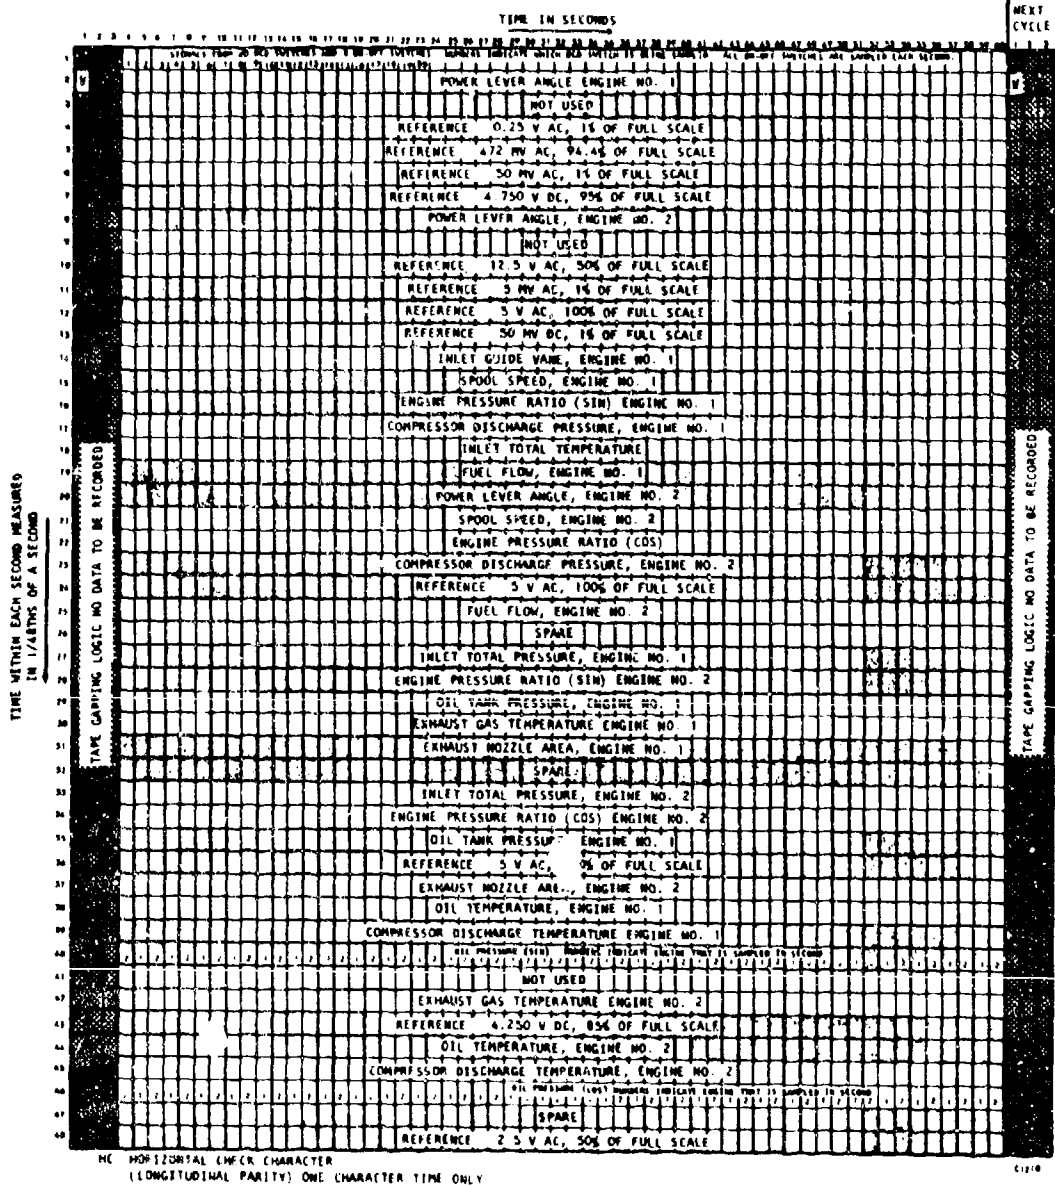



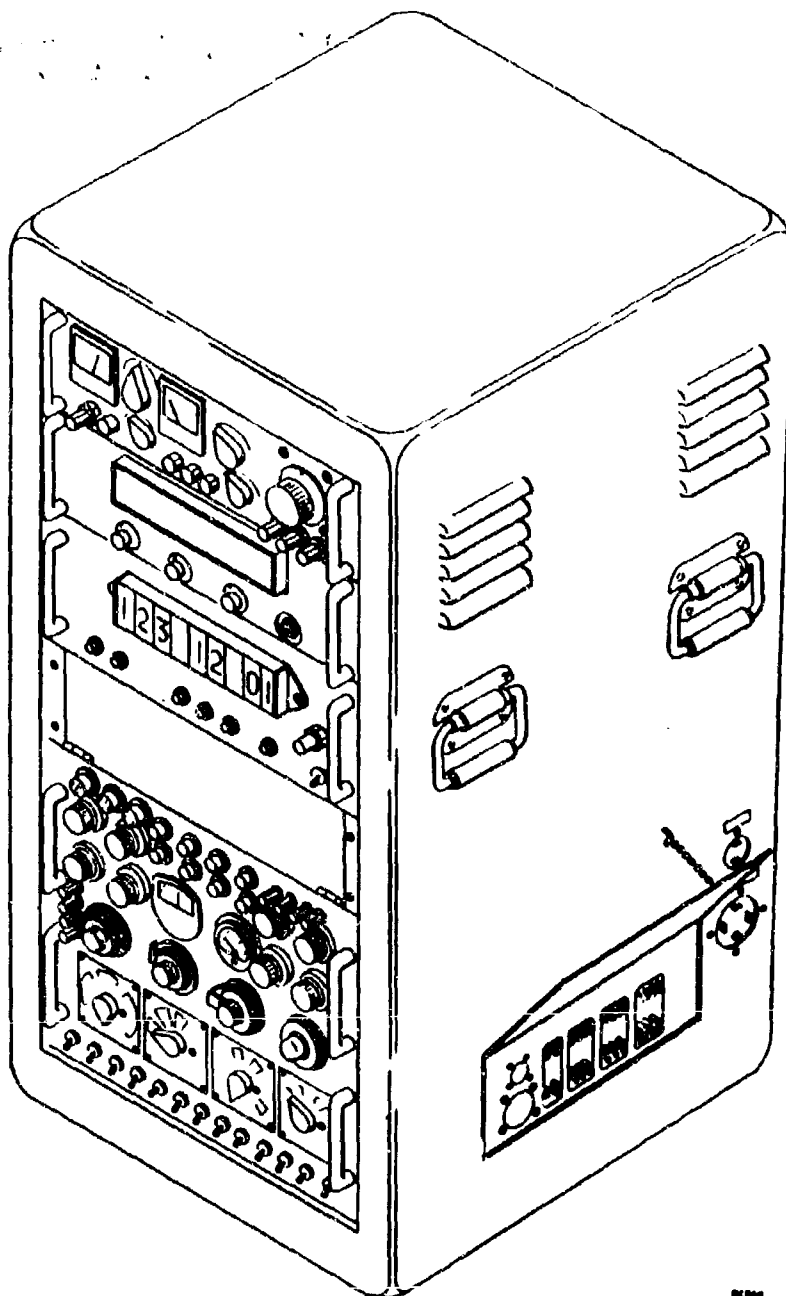


Figure 19. Engine Analyzer Ground Calibrator

In addition, all submodules requiring calibration can be calibrated and checked by the simulated inputs provided by the calibrator. Any combination of the Computer/Display, Signal Data Translator, or Recorder may be operated simultaneously. Appendix III presents the electrical circuitry schematic of the ground calibration.

With the exception of the GFAE tachometer tester TTU-27/EC, the externally supplied cables and holding fixture, all simulated inputs, and all readouts required are contained within the basic unit.

External equipment is necessary only during troubleshooting; the external equipment needed is a Tektronix oscilloscope Model 555 or equivalent and an a-c voltmeter, Hewlett-Packard Model 400H or equivalent. The calibrator is contained in one chassis and requires only 115-v, 400 cps, 3-phase, and 28-v d-c power to furnish flight line or shop level test capability for the analyzer system. The calibrator provides all the power necessary to drive any portion of the engine analyzer system under test. The alternating current supplied to the various components of the calibrator and to the component being tested is accurately controlled by a self-contained 3-phase Variac. Provisions are included for an external adjustable d-c power supply whenever variable direct current is required.

A block diagram of the Ground Calibrator is shown in Figure 20. The outputs which the calibrator furnishes for the Computer/Display checkout provide stimuli which can be varied over the entire range of the Computer/Display functions. The calibrator simulates the switch inputs to the Computer/Display, such as high oil temperature, by furnishing the required ground or 28-v d-c signal; the variable functions, such as  $P_{t_2}$ , are simulated by potentiometers.

For checks of spool speed over the range, a GFAE tachometer tester, Consolidated Airborne Systems TTU-27/E, is used in conjunction with the calibrator. Testing of parameters other than spool speed is all done at one of three discrete rpm values for N: 50 percent, 85 percent, or 100 percent. These values supplied to the Computer/Display are tuning-fork controlled for maximum accuracy.

Fuel flow input is provided to the Computer/Display by a synchro. Variable over the fuel flow range, the synchro is adjusted by a synchro-positioner.

A self-contained ratimeter is used to check fuel flow and spool speed signals from potentiometers on the respective servo shafts in the Computer/Display. The calibrator contains a Dekatron to check the total temperature and exhaust gas temperature signals from the transformer windings in the Computer/Display. A self-contained transistorized a-c VTVM is used for null indication.

A switch is provided for the Computer/Display elapsed engine time indicator. This allows verification of proper indicator operation, after which the indicator is switched off to prevent the accumulation of indicated engine time during ground testing.

NOT REPRODUCIBLE

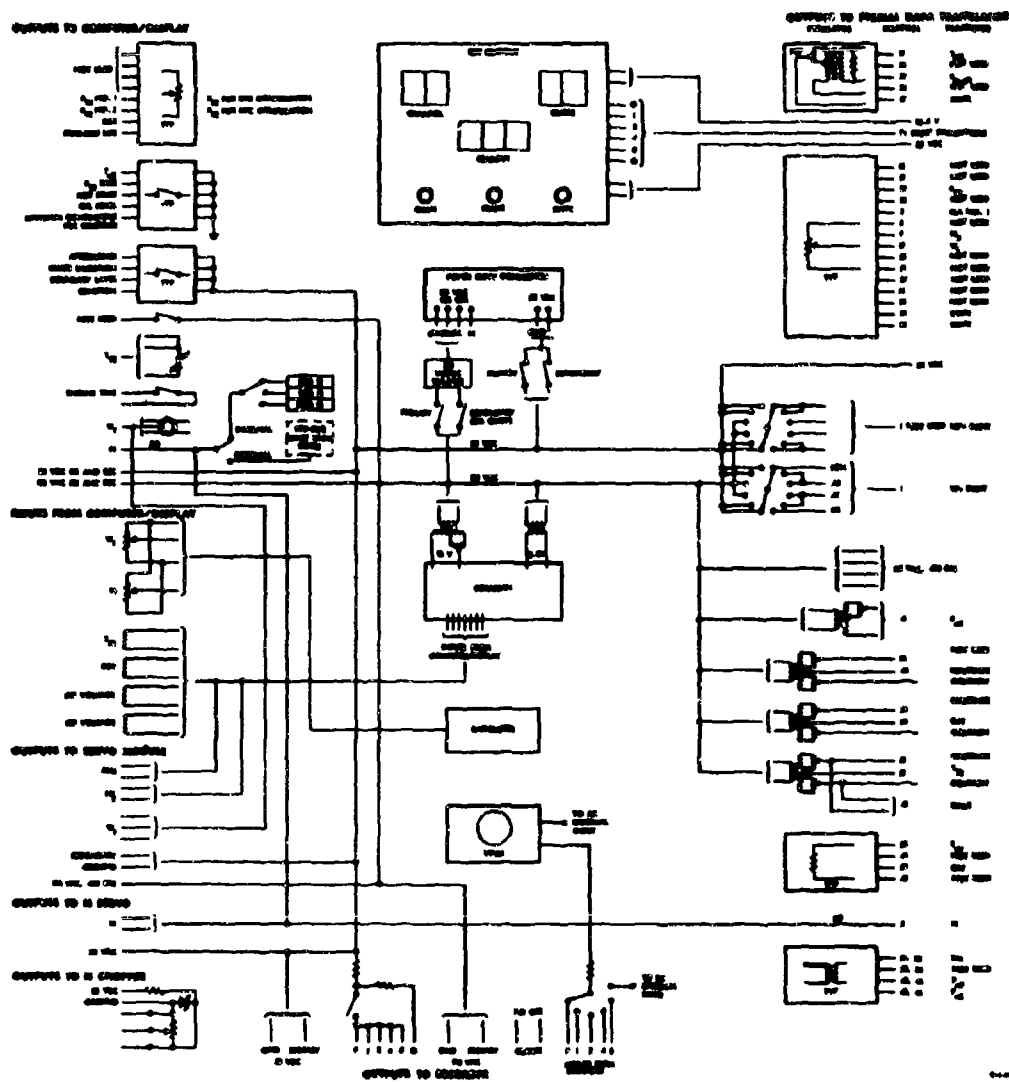


Figure 20. Engine Analyzer Ground Calibrator Block Diagram

Provisions are included in the calibrator for testing the Computer/Display spool speed module and the servo module. Energizing dc and a spool speed signal are provided to the N module for its checkout. A highly accurate adjustable d-c signal is provided to simulate the N converter and directly drive the chopper in the spool speed loop. The calibrator provides to the servo module the necessary power, a fuel flow signal to the  $W_f$  control transformer, and signals for the Reynolds number Index and  $N_s$  servo follow-up potentiometers.

All inputs to the Signal Data Translator are fixed signal points simulated by resistive dividers, tapped transformers, switches, and fixed resistors. The gains on each input are staggered to detect any shorts between channels. The staggered points also provide an indication of the linearity of the individual active elements. Provisions for the calibration of the analog-to-digital converter module are included. A readout panel is provided which presents the number and output of the channel being checked. Frame number is also presented to allow stepping through 20 48-channel frames to check each of the thumbwheel switch outputs. The channel and frame advance functions gate a free-running oscillator to the Signal Data Translator clock input. Internal calibrator logic counts the output pulses to provide the SDT with the required number of pulses for channel and frame advance.

To check the recorder, the calibrator provides a 9-v signal to each of the recorder inputs, in addition to the required power. A test point from each of the record heads is brought out, and the VTVM in the calibrator is used to see that there is current of sufficient magnitude and proper phase flowing in each head. The 720-cps clock signal is also checked by the calibrator by means of a small electronic counter and meter.

#### 2.4.1 Calibrator Sub-Units

The ground calibrator is physically arranged in five separate panels which are shown in Figure 21. Each panel and its accompanying chassis is considered an individual subunit of the calibrator. The top panel is the power supply subunit; the second is the ratiometer; and the third contains the SDT readouts and the controls for stepping through the channels and frames of the SDT. The chassis of the fourth panel, which is blank, holds the logic cards for the SDT readout circuitry. The bottom panel is the switching panel and contains the controls for the parameter simulation that the calibrator supplies to the Engine Analyzer System. On the lower right side of the cabinet are the connectors for the power required by the calibrator, and, behind a hinged door, are the connectors for the system components and modules.

Each of the five basic panels is removable from the front. A detailed description of each panel follows.

a. Power Panel--The power panel controls the 28-v d-c and 115-v, 400-cps, three-phase power for unit checkout. The panel contains meters for monitoring, control switches, pilot lights, adjustments, and fusing for the 28-v d-c power and the three-phase, 115-v a-c power. The fuses have pilot lamps which light when a fuse blows. There is a four-position control switch for both the d-c and a-c supplies.

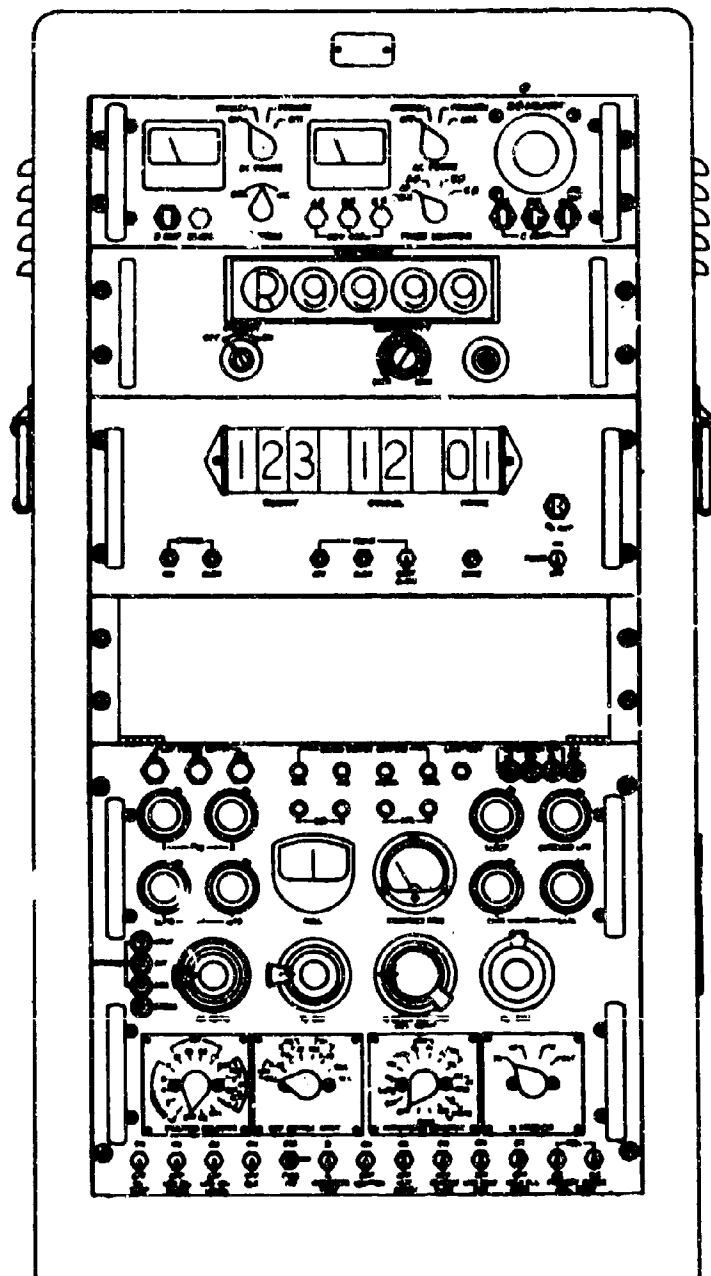


Figure 21. Ground Calibrator Face

The a-c power switching arrangement is identical to the d-c switching. The ac, in addition, is adjustable by means of a three-phase Variac and a trim adjustment for the A-phase. The ac is monitored by pilot lights for each phase and an expanded-scale voltmeter which can be switched to each phase or to monitor the A-phase trimming. Each phase is fused for 2 amps. The "OFF" positions remove power from the units completely. The "STANDBY" position supplies power to the ratiometer, readout, and the logic panels only. The "PRIMARY" position supplies power to the Computer/Display for checkout of "essential" circuits only. The "SEC" position supplies the power required by the modules, any combination of Computer/Display, Signal Data Translator, and Recorder.

The d-c voltmeter is used to monitor the 28-v d-c bench supply, while the expanded scale a-c meter monitors the three-phase output of the three-phase adjust Variac by means of the phase monitor switch. The "A $\phi$  TRIM" control acts as a vernier on the A-phase voltage when the Signal Data Translator is being tested. This control adds or subtracts a small voltage from the A-phase and is monitored on the a-c meter when the "PHASE MONITOR" switch is in "A $\phi$  TRIM" position. Front panel fuses and power lamps are also provided. Accessory power connectors are located on the rear of the chassis with access through the rear cabinet door.

b. Ratiometer--The ratiometer is an ESI model 4000-3182 which functions both as a ratiometer and digital voltmeter. All controls for operation are located on the front panel. Inputs to the ratiometer are controlled by the "RATIOMETER SELECTOR" switch located on the switching panel.

c. Readout Panel--The readout panel contains all the control circuitry for the various operational modes of the Signal Data Translator and a visual readout device which displays the individual channel readouts (000 to 999), the channel (0 to 48) and frame counts (01 to 60). A separate power switch and fuse are provided. The "Sync" switch (which must be depressed at the start of each checkout) is used to synchronize the calibrator to the Signal Data Translator.

The channel "ADV" switch will advance the Signal Data Translator one channel each time it is depressed. The readout and channel will visually appear in the readout window. The channel "SLEW" switch permits rapid access to any of the 48 input channels.

The frame "ADV" switch will advance the Signal Data Translator one frame (48 channels) each time it is depressed. The number of the frame will visually appear in the frame readout window. The frame "SLEW" and "CONT SLEW" switches permit rapid access to any of the 60 frames during testing or troubleshooting.

A block diagram of the readout logic is presented in Figure 22. The channel and frame advance switches gate free-running 600-cps and 800-cps oscillators, respectively, to the counter logic and the SDT. When the required number of pulses for the desired advance have passed, the clock gates are closed and the frame and channel number are digitally displayed. The SDT output is read, converted from non-return-to-zero to decimal, the parity computed, and then displaced.

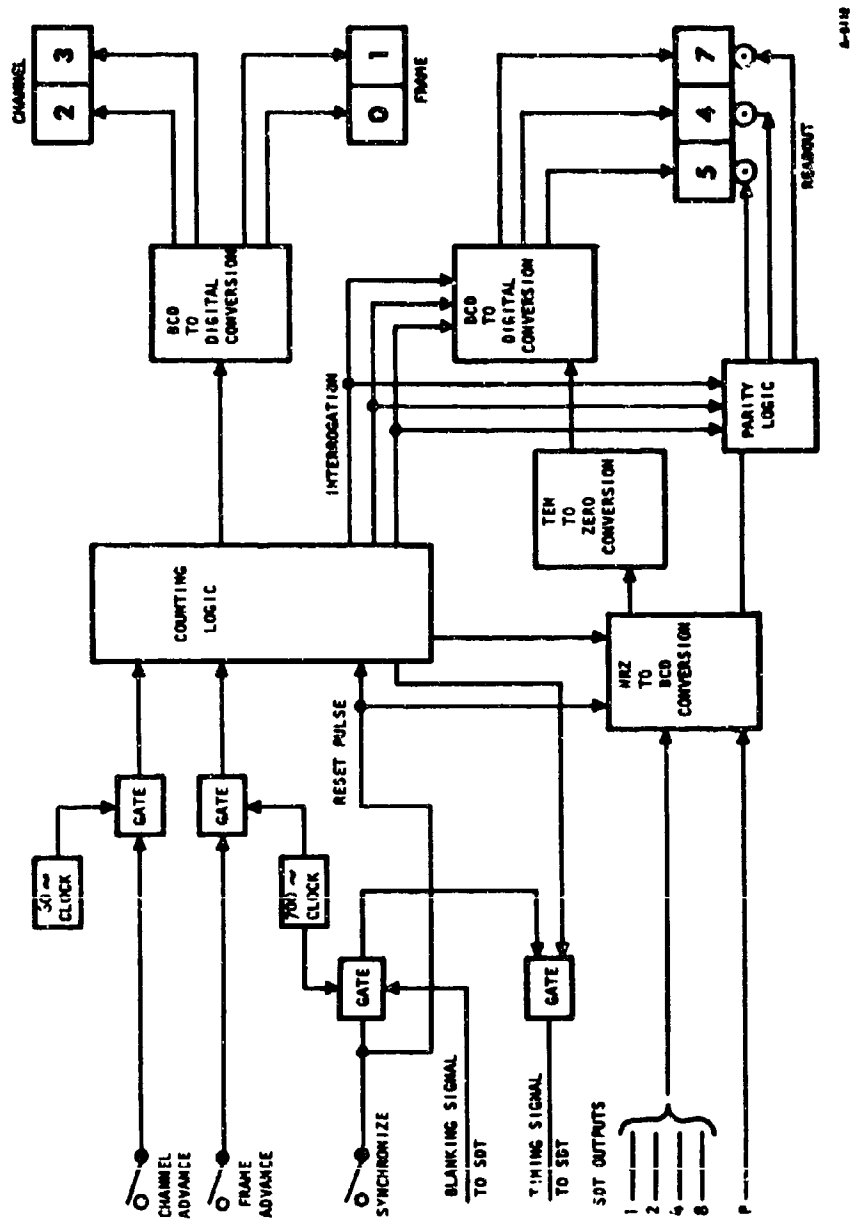


Figure 22. Block Diagram of Ground Calibrator SDT Readout

d. Logic Panel--The logic panel converts the NRZ logic output of the Signal Data Translator into decimal form which drives the visual display on the readout panel. Operator control is provided by the readout panel.

e. Switching Panel--The switching panel provides the simulated inputs and required readouts for the modules, Signal Data Translator, Recorder, and Computer/Display. Each control, beginning left top, left to right, will be discussed below.

The "SDT Power Output" lamps "AC," "DC," and "GRD," indicate that proper power is available from the SDT for driving the recorder.

The eight lamps labeled 7.5 percent through 105 percent, check switch closure when the Computer/Display "N Servo" module is being tested or calibrated.

The "Lamp Test" switch is a self-test of the eight lamps previously described.

The "Ratiometer EXT" and "10V REF" jacks allow external use of the ratiometer when the "Ratiometer Selector" is in "EXT" position.

The "Ln P<sub>T2</sub> (1 and 2)," "IGV (Ln F<sup>10</sup> and Ln F<sup>9</sup>)," "ENA (Ln f<sub>2</sub> and Ln f<sub>8</sub>)," "Ln EGT" and "Expended Life" are 10-turn precision potentiometers used to simulate inputs to the Computer/Display.

The "NULL" meter is used with the "AC RATIO" ratiotran when reading the inputs shown for the "Recorder," "SDT," and "CD" on the "Function Selector" switch.

The "Recorder Frequency" is a self-contained digital counter which checks the Recorder clock frequency during Recorder testing.

The "Ratiotran" and "Bridge" test jacks allow external use of the "AC Ratio" ratiotran and "NULL" meter when the "Function Selector" is in "EXT" position.

The "AC RATIO" ratiotran is a five-place a-c voltage divider used to read out all positions shown on the "Function Selector" switch except N<sub>i</sub> and RNI positions. In these two positions, ratioed voltages are supplied to the N<sub>i</sub> and RNI servo modules for calibration of the W<sub>f</sub>, N<sub>i</sub>, RNI servo module.

The "T<sub>T</sub> Sim" is a precision, five-place resistive network designed to simulate the total temperature probe during Computer/Display checkout and calibration.

The "N Servo Command and ADC Input" simulator is a precision, five-place resistive divider used to provide d-c voltage ratios when testing either the Computer/Display "N Servo Module" or the SDT "ADC" module. Its use is controlled by the "N and ADC IN" positions of the "Ratiometer Selector" switch.



The  $W_f$  simulator is a precision 10-turn Acton positioner driving a synchro which simulates fuel flow. The output is used by the Computer/Display, and the  $W_f$ ,  $N_i$ , RNI Computer/Display servo module.

The "Function Selector" switch selects and routes the inputs and outputs of the "AC RATIO" ratio-tran and "NULL" meter. When testing the Recorder, positions 1, 2, 4, 8, and P read out acceptable limits of recorder head currents on the "NULL" meter. At each position, the "Recorder Test" switch is actuated from "A" to "B" position. This checks that the record amplifiers provide current reversals. Positions E1, E2, E3, and E4 are used to measure the a-c transducer excitation on the "AC RATIO" ratio-tran and "NULL" meter when testing the SDT. Positions "EGT and  $T_{T_2}$  REF" and "EGT and  $T_{T_2}$  OUT" are used to measure the C/D outputs to the SDT on the "AC RATIO" ratio-tran and "NULL" meter when testing the Computer/Display. The remaining three positions were discussed under "AC RATIO" ratio-tran.

The "SDT SWITCH INPUT" switch simulates aircraft switch functions as indicated on the switch plate. These are used when testing the Signal Data Translator.

The "Ratiometer Selector" selects all inputs for the ratiometer.  $N_2$  and  $Ln N_2$  are used during N module calibration.  $W_f$ ,  $Ln W_f$ , RNI ( $f_3$  and  $f_7$ ), and  $N_2$  ( $f_1$  and  $f_5$ ) are used during calibration of the  $W_f$ , RNI,  $N_i$  servo module. Positions were previously discussed under "N Servo Command" and "Ratiometer", respectively. "N Volts" is used to monitor the N rate lockout signal during Computer/Display checkout. The "ADC VOLTS" is used to check the 5-v d-c reference when calibrating the ADC.

The "N FREQ SIM" provides three precision frequency points for checkout of the SDT and C/D. An "Ext" position is provided to use the GFAE TTU-27/E tachometer tester as a test input.

All 13 toggle switches, except for the "Recorder Test" previously described, are used as marked during checkout of the Computer/Display.

All connector receptacles are located on the switching panel chassis and are accessible through an access door on the lower right side of the calibrator cabinet.

In addition to the front panel controls described previously, the chassis contains all the simulated inputs for the SDT. These inputs consist of fixed-gain, precision-calibrated, resistive dividers, transformers, and resistors. The characteristics of each are described in Tables XVII and XVIII under Accuracy.

#### 2.4.2 Simulator Characteristics and Accuracy

The important characteristics and accuracies for all the simulated inputs required by the Engine Analyzer System are tabulated below. These are divided into two groups (1) front panel variable functions which have been previously described and are used mostly for Computer/Display checkout and calibration; and (2) the fixed-gain simulated inputs for SDT.

TABLE XVII  
FRONT PANEL FUNCTION

Function	Device	Accuracy	Comment
D-c power	Meter	2%	-
A-c power	Meter	0.2% FS	Expanded meter calibrated at 115 v
Ratio	Ratiometer	$\pm 0.0\%$ full scale plus 0.002% per °C from 25°C	
D-c voltage	Ratiometer	$\pm 0.01\%$ full scale plus 0.002% per °C from 25°C	-
Readout and logic panels	Digital	No error	-
P <sub>T2</sub> (1)	10T potentiometer	$\pm 0.1\%$ FS	-
P <sub>T2</sub> (2)	10T potentiometer	$\pm 0.1\%$ FS	-
Ln EGT	10T potentiometer	$\pm 0.1\%$ FS	-
Expended life	10T potentiometer	$\pm 0.3\%$ FS	-
EGV Lnf10	10T potentiometer	$\pm 0.2\%$ FS	-
IGV Lnf9	10T potentiometer	$\pm 0.3\%$ FS	-
EMA Lnf2	10T potentiometer	$\pm 0.1\%$ FS	-
EMA Lnf6	10T potentiometer	$\pm 0.1\%$ FS	-
Null	Meter	$\pm 0.5$ mv	-
Recorder freq	Digital circuit and meter	0.1% at 720 cps	-
A-c ratio	Ratiotran	$\pm 0.002\%$ FS	-
T <sub>T</sub> SIM	Dekastat	$\pm 0.5^\circ R$	-
ADC Input	Dekastat	$\pm 0.1\%$ FS	-

TABLE XVII (continued)

Function	Device	Accuracy	Comment
$W_f$ SIM	Synchro and positioner	$\pm 0.2$ deg	-
N FREQ SIM	Tuning fork oscillator	$\pm 0.02\%$ of frequency	Fixed frequency points at 35, 63, and 70 cps

TABLE XVIII

FIXED SBT FUNCTION'S  
(INTERNAL TO CALIBRATOR)

Function	Device	Fixed Output or Gain Setting	Setting Accuracy
$W_f$ No. 1	Resistive Divider	0.010	$\pm 0.2\%$ Ind
$W_f$ No. 2	Resistive Divider	0.120	$\pm 0.2\%$ Ind
$A_g$ No. 1	Resistive Divider	0.140	$\pm 0.2\%$ Ind
$A_g$ No. 2	Resistive Divider	0.160	$\pm 0.2\%$ Ind
$A_g$ No. 2	Resistive Divider	0.160	$\pm 0.2\%$ Ind
PLA No. 1	Resistive Divider	0.500	$\pm 0.1\%$ Ind
PLA No. 2	Resistive Divider	0.520	$\pm 0.1\%$ Ind
IGV No. 1	Resistive Divider	0.540	$\pm 0.1\%$ Ind
IGV No. 2	Resistive Divider	0.560	$\pm 0.1\%$ Ind

TABLE XVIII (continued)

Function	Device	Fixed Output or Gain Setting	Setting Accuracy
Spare CH 26	Resistive divider	0.570	$\pm 0.1\%$ Ind
Spare CH 32	Resistive divider	0.580	$\pm 0.1\%$ FS
T <sub>011</sub> No. 1	Resistive	0.50	$\pm 0.1\%$ FS
T <sub>011</sub> No. 2	Resistor	0.100	$\pm 0.1\%$ FS
N <sub>1</sub> J75	Tuning fork oscillator	35 cps 63 cps 70 cps	$\pm 0.2\%$ of frequency point
N <sub>2</sub> J75	Resistive divider	0.900	$\pm 0.1$ Ind
N J79 No. 1	Resistive divider	0.920	$\pm 0.1\%$ Ind
N J79 No. 2	Resistive divider	0.940	$\pm 0.1$ Ind
P <sub>T2</sub> No. 1	Resistive divider	0.960	$\pm 0.1\%$ Ind
P <sub>T2</sub> No. 2	Resistive divider	0.990	$\pm 0.1\%$ Ind
CDT No. 1	Resistor	0.099	$\pm 0.2\%$ FS
CDT No. 2	Resistor	0.050	$\pm 0.2\%$ FS
EPR No. 1	Transformer	EZ 120 deg	$\pm 0.25\%$ Ind
EPR No. 2	Transformer	EZ 240 deg	$\pm 0.25\%$ Ind
P <sub>011</sub> No. 1	Transformer	EZ 0 deg	$\pm 0.25\%$ Ind
P <sub>011</sub> No. 2	Transformer	EZ 300 deg	$\pm 0.25\%$ Ind

TABLE XVIII (Continued)

Function	Device	Fixed Output or Gain Setting	Setting Accuracy
$P_{cd}$ No. 1	Transformer	0.450 v ac	$\pm 0.25\%$ Ind
$P_{cd}$ No. 2	Transformer	0.225 v ac	$\pm 0.25\%$ Ind
$P_{D\ o11}$ No. 1	Transformer	0.045 v ac	$\pm 0.35\%$ Ind
$P_{D\ o11}$ No. 2	Transformer	0.005 v ac	$\pm 0.5\%$ Ind
$P_{D\ o11}$	Transformer	12.95 v ac	$\pm 0.25\%$ Ind
Spare CH 47	Transformer	0.450 v ac	$\pm 0.25\%$ Ind
$T_{T2}$ ref	Transformer	4.50 v ac	$\pm 0.25\%$ Ind
$T_{T2}$ out	Transformer	2.50 v ac	$\pm 0.25\%$ Ind
EGT No. 1 ref	Transformer	4.50 v ac	$\pm 0.25\%$ Ind
EGT No. 1 out	Transformer	3.25 v ac	$\pm 0.25\%$ Ind
EGT No. 2 ref	Transformer	4.50 v ac	$\pm 0.25\%$ Ind
EGT No. 2 out	Transformer	1.25 v ac	$\pm 0.25\%$ Ind

**APPENDIX I**

**CIRCUIT SCHEMATICS FOR F-105D  
ENGINE ANALYZER SYSTEM**

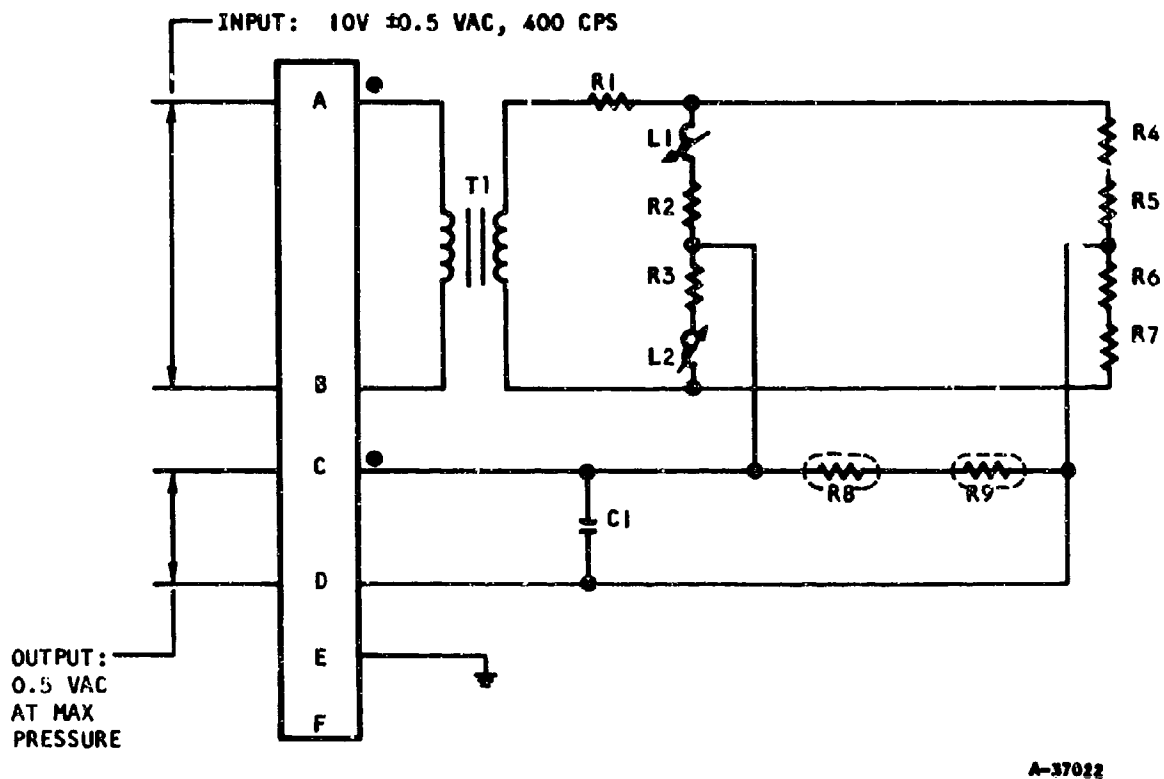


Figure 23. Oil Breather Pressure (P/N 538947-2) and Compressor Discharge Pressure (P/N 538947-1) Transducer Circuit Schematic


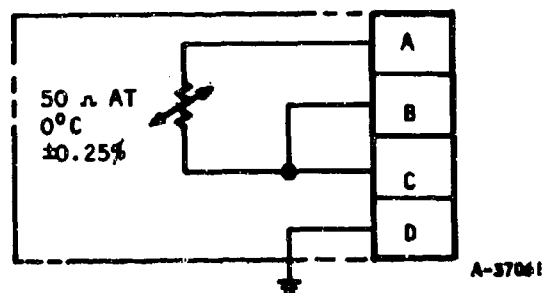



Figure 24. Compressor Discharge Temperature Transducer  
(P/N 538952) Circuit Schematic



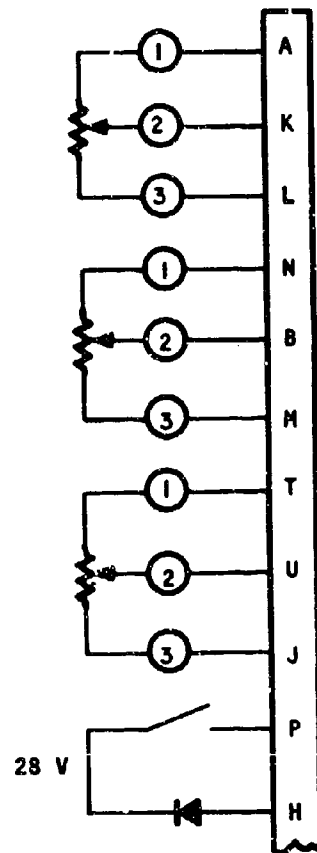

A-37065

Figure 25. Compressor Inlet Pressure Transducer (P/N 538962-1-1) Circuit Schematic

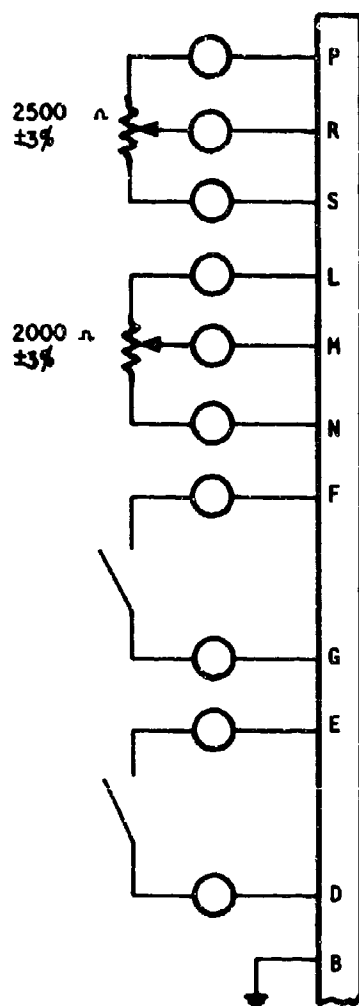

NOTE: Unit is a modified  
MS-24569-1 Indicator

A-37003

Figure 26. Exhaust Gas Temperature Transducer  
(P/N 538380) Circuit Schematic


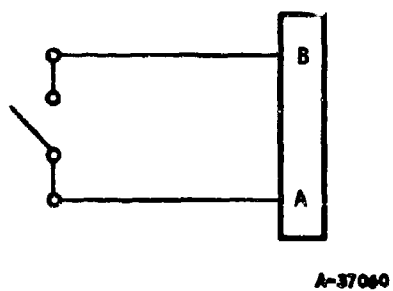


Figure 27. Oil Temperature Switch (P/N 538948) Circuit Schematic

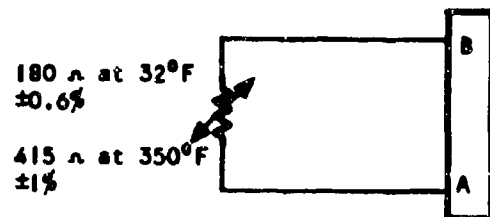

A-37059

Figure 28. Oil Temperature Transducer (P/N 538950)  
Circuit Schematic



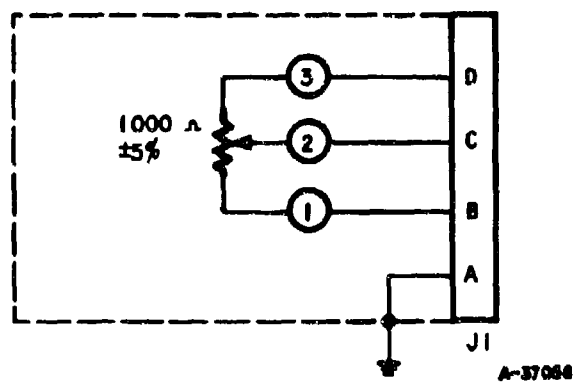


Figure 29. Power Lever Angle Transducer (P/N 538444-1-1)  
 Circuit Schematic

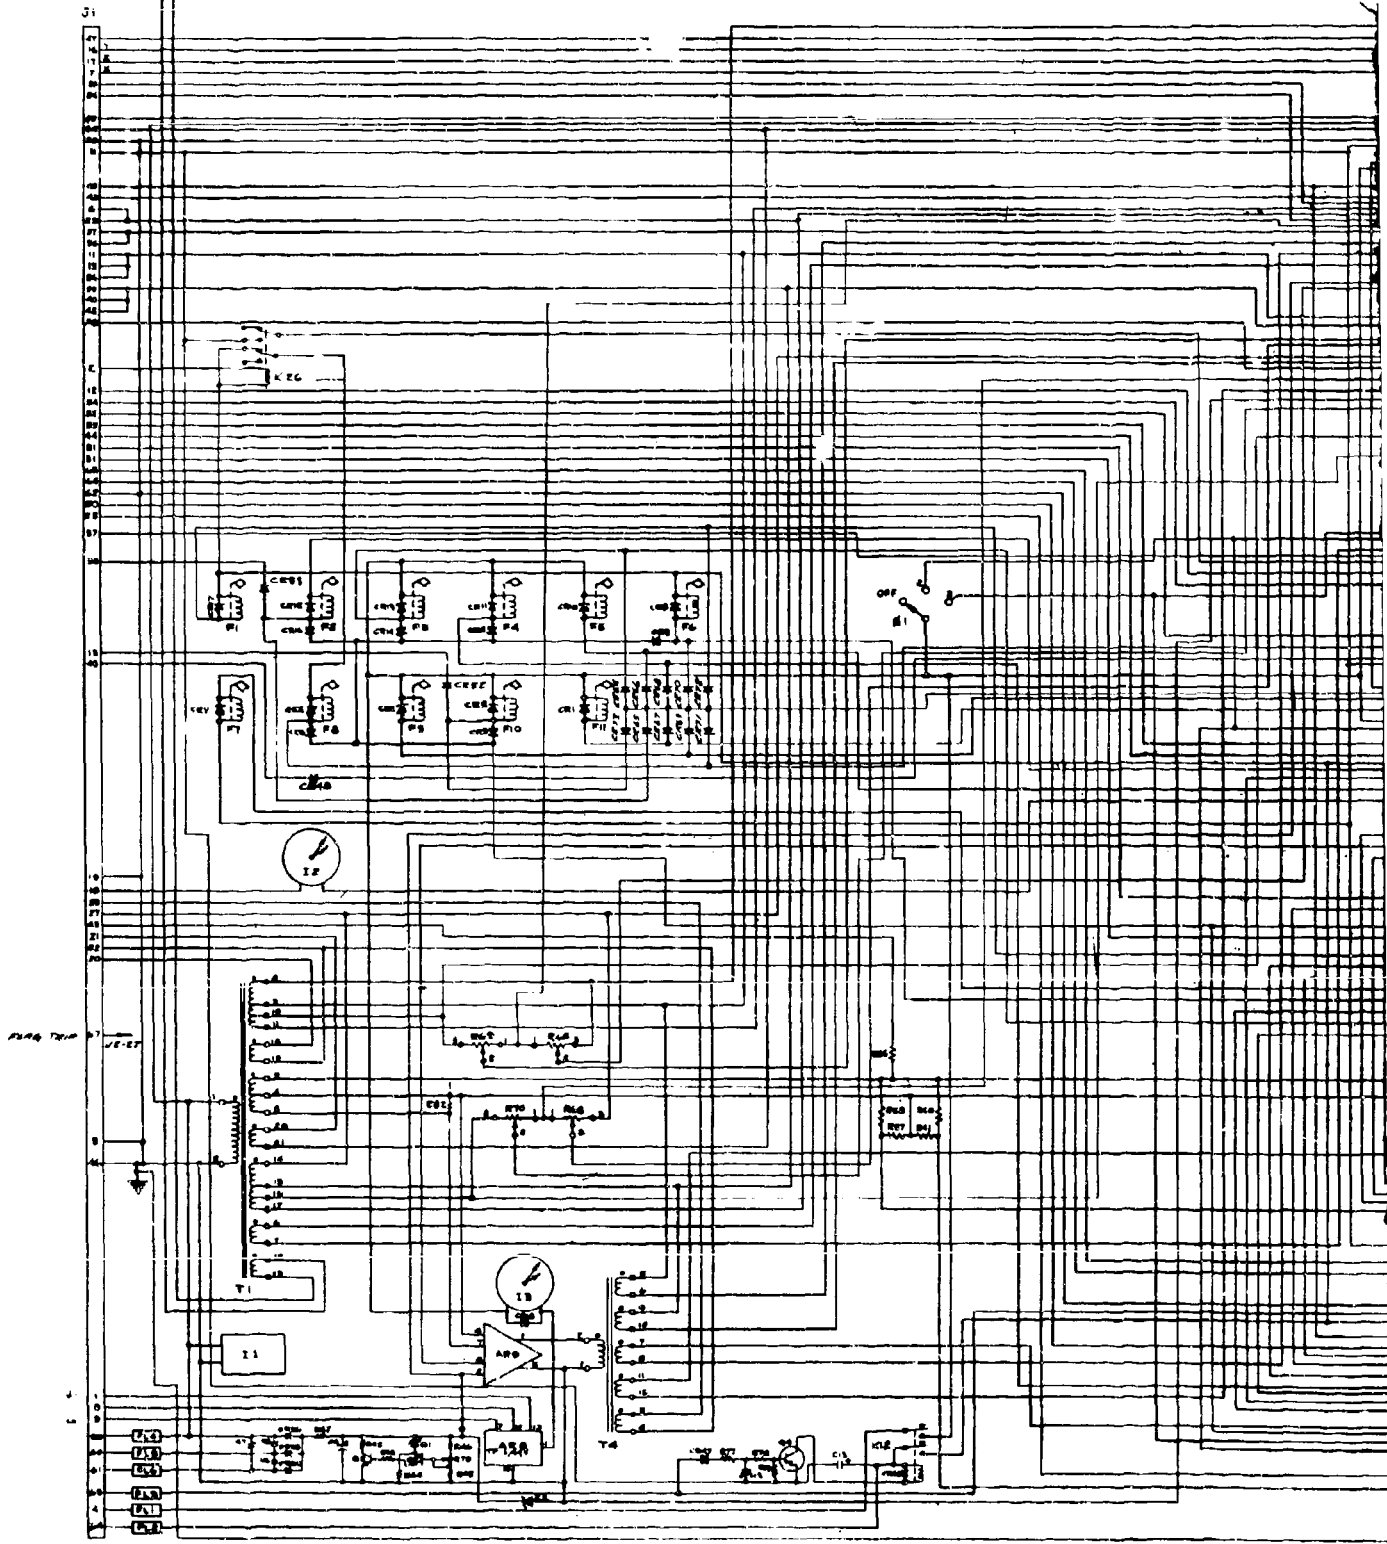

NOT REPROD

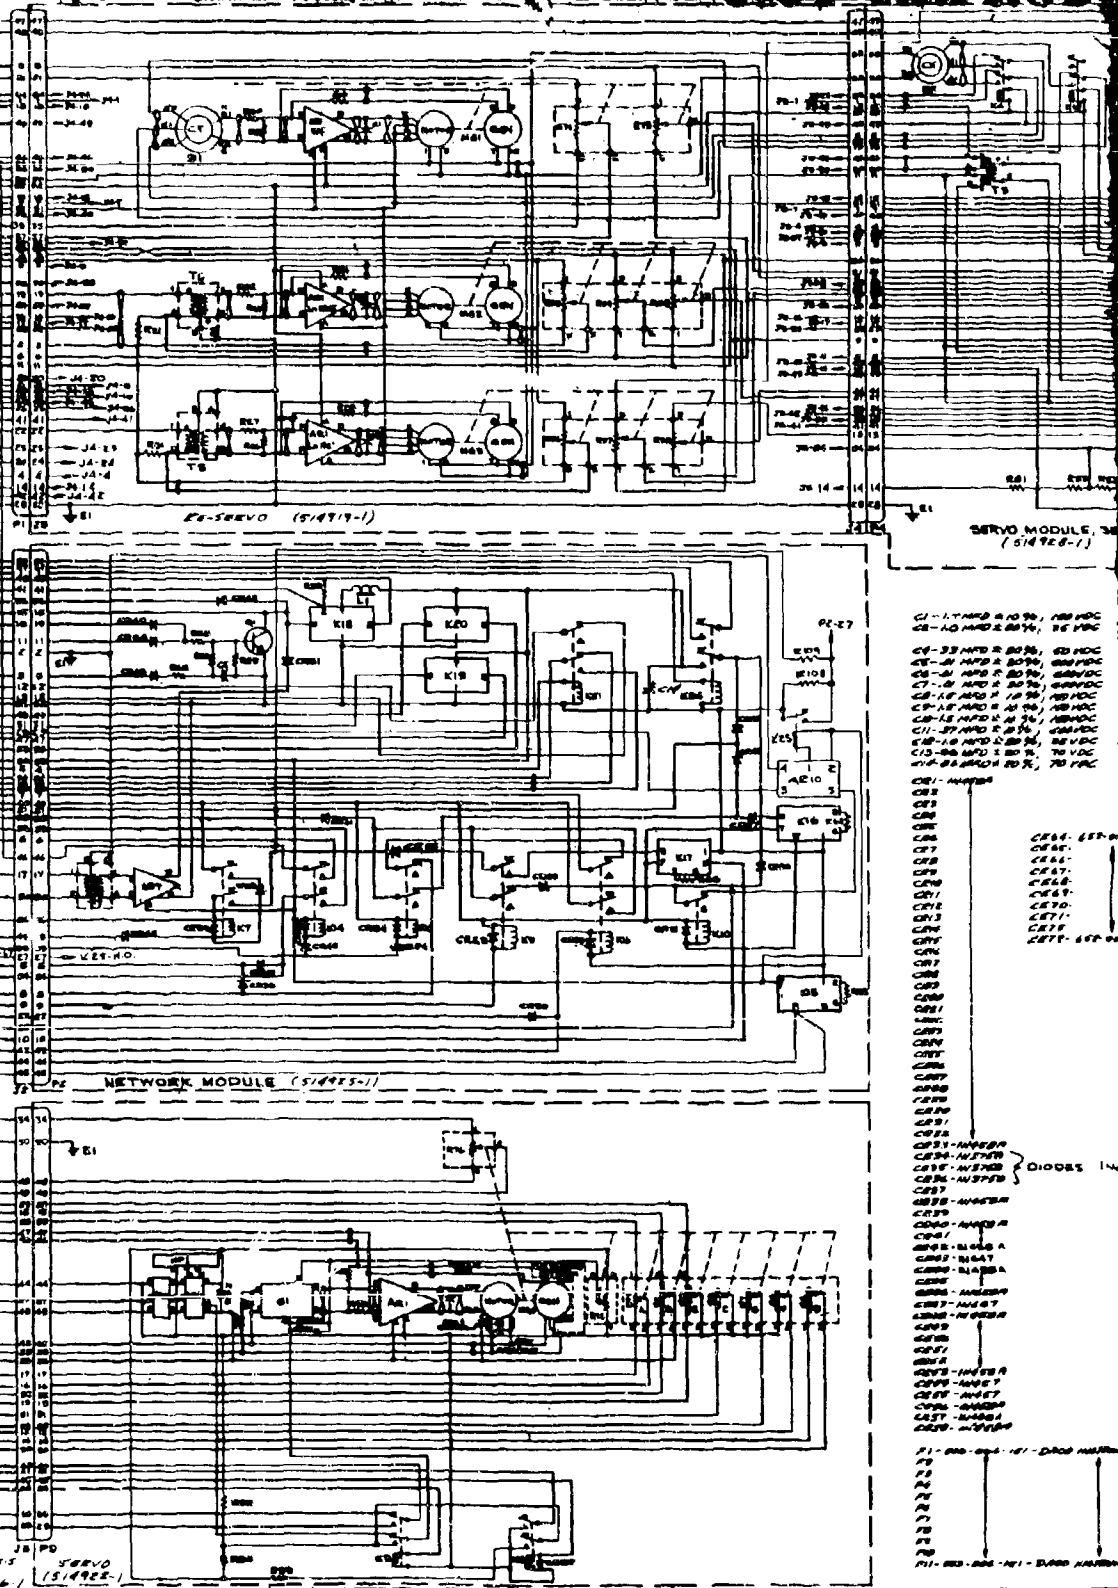

13





**NOT REPRODUCIBLE**

ARI	COMPONENT	LIST
00	REF ID	REFERENCE
01	ADDRESS 110	
02	ADDRESS 111	
03	ADDRESS 112	
04	ADDRESS 113	
05	ADDRESS 114	
06	ADDRESS 115	
07	ADDRESS 116	
08	ADDRESS 117	
09	ADDRESS 118	
10	ADDRESS 119	
11	ADDRESS 120	
12	ADDRESS 121	
13	ADDRESS 122	
14	ADDRESS 123	
15	ADDRESS 124	
16	ADDRESS 125	
17	ADDRESS 126	
18	ADDRESS 127	
19	ADDRESS 128	
20	ADDRESS 129	
21	ADDRESS 130	
22	ADDRESS 131	
23	ADDRESS 132	
24	ADDRESS 133	
25	ADDRESS 134	
26	ADDRESS 135	
27	ADDRESS 136	
28	ADDRESS 137	
29	ADDRESS 138	
30	ADDRESS 139	
31	ADDRESS 140	
32	ADDRESS 141	
33	ADDRESS 142	
34	ADDRESS 143	
35	ADDRESS 144	
36	ADDRESS 145	
37	ADDRESS 146	
38	ADDRESS 147	
39	ADDRESS 148	
40	ADDRESS 149	
41	ADDRESS 150	
42	ADDRESS 151	
43	ADDRESS 152	
44	ADDRESS 153	
45	ADDRESS 154	
46	ADDRESS 155	
47	ADDRESS 156	
48	ADDRESS 157	
49	ADDRESS 158	
50	ADDRESS 159	
51	ADDRESS 160	
52	ADDRESS 161	
53	ADDRESS 162	
54	ADDRESS 163	
55	ADDRESS 164	
56	ADDRESS 165	
57	ADDRESS 166	
58	ADDRESS 167	
59	ADDRESS 168	
60	ADDRESS 169	
61	ADDRESS 170	
62	ADDRESS 171	
63	ADDRESS 172	
64	ADDRESS 173	
65	ADDRESS 174	
66	ADDRESS 175	
67	ADDRESS 176	
68	ADDRESS 177	
69	ADDRESS 178	
70	ADDRESS 179	
71	ADDRESS 180	
72	ADDRESS 181	
73	ADDRESS 182	
74	ADDRESS 183	
75	ADDRESS 184	
76	ADDRESS 185	
77	ADDRESS 186	
78	ADDRESS 187	
79	ADDRESS 188	
80	ADDRESS 189	
81	ADDRESS 190	
82	ADDRESS 191	
83	ADDRESS 192	
84	ADDRESS 193	
85	ADDRESS 194	
86	ADDRESS 195	
87	ADDRESS 196	
88	ADDRESS 197	
89	ADDRESS 198	
90	ADDRESS 199	
91	ADDRESS 200	
92	ADDRESS 201	
93	ADDRESS 202	
94	ADDRESS 203	
95	ADDRESS 204	
96	ADDRESS 205	
97	ADDRESS 206	
98	ADDRESS 207	
99	ADDRESS 208	
100	ADDRESS 209	
101	ADDRESS 210	
102	ADDRESS 211	
103	ADDRESS 212	
104	ADDRESS 213	
105	ADDRESS 214	
106	ADDRESS 215	
107	ADDRESS 216	
108	ADDRESS 217	
109	ADDRESS 218	
110	ADDRESS 219	
111	ADDRESS 220	
112	ADDRESS 221	
113	ADDRESS 222	
114	ADDRESS 223	
115	ADDRESS 224	
116	ADDRESS 225	
117	ADDRESS 226	
118	ADDRESS 227	
119	ADDRESS 228	
120	ADDRESS 229	
121	ADDRESS 230	
122	ADDRESS 231	
123	ADDRESS 232	
124	ADDRESS 233	
125	ADDRESS 234	
126	ADDRESS 235	
127	ADDRESS 236	
128	ADDRESS 237	
129	ADDRESS 238	
130	ADDRESS 239	
131	ADDRESS 240	
132	ADDRESS 241	
133	ADDRESS 242	
134	ADDRESS 243	
135	ADDRESS 244	
136	ADDRESS 245	
137	ADDRESS 246	
138	ADDRESS 247	
139	ADDRESS 248	
140	ADDRESS 249	
141	ADDRESS 250	
142	ADDRESS 251	
143	ADDRESS 252	
144	ADDRESS 253	
145	ADDRESS 254	
146	ADDRESS 255	
147	ADDRESS 256	
148	ADDRESS 257	
149	ADDRESS 258	
150	ADDRESS 259	
151	ADDRESS 260	
152	ADDRESS 261	
153	ADDRESS 262	
154	ADDRESS 263	
155	ADDRESS 264	
156	ADDRESS 265	
157	ADDRESS 266	
158	ADDRESS 267	
159	ADDRESS 268	
160	ADDRESS 269	
161	ADDRESS 270	
162	ADDRESS 271	
163	ADDRESS 272	
164	ADDRESS 273	
165	ADDRESS 274	
166	ADDRESS 275	
167	ADDRESS 276	
168	ADDRESS 277	
169	ADDRESS 278	
170	ADDRESS 279	
171	ADDRESS 280	
172	ADDRESS 281	
173	ADDRESS 282	
174	ADDRESS 283	
175	ADDRESS 284	
176	ADDRESS 285	
177	ADDRESS 286	
178	ADDRESS 287	
179	ADDRESS 288	
180	ADDRESS 289	
181	ADDRESS 290	
182	ADDRESS 291	
183	ADDRESS 292	
184	ADDRESS 293	
185	ADDRESS 294	
186	ADDRESS 295	
187	ADDRESS 296	
188	ADDRESS 297	
189	ADDRESS 298	
190	ADDRESS 299	
191	ADDRESS 300	
192	ADDRESS 301	
193	ADDRESS 302	
194	ADDRESS 303	
195	ADDRESS 304	
196	ADDRESS 305	
197	ADDRESS 306	
198	ADDRESS 307	
199	ADDRESS 308	
200	ADDRESS 309	
201	ADDRESS 310	
202	ADDRESS 311	
203	ADDRESS 312	
204	ADDRESS 313	
205	ADDRESS 314	
206	ADDRESS 315	
207	ADDRESS 316	
208	ADDRESS 317	
209	ADDRESS 318	
210	ADDRESS 319	
211	ADDRESS 320	
212	ADDRESS 321	
213	ADDRESS 322	
214	ADDRESS 323	
215	ADDRESS 324	
216	ADDRESS 325	
217	ADDRESS 326	
218	ADDRESS 327	
219	ADDRESS 328	
220	ADDRESS 329	
221	ADDRESS 330	
222	ADDRESS 331	
223	ADDRESS 332	
224	ADDRESS 333	
225	ADDRESS 334	
226	ADDRESS 335	
227	ADDRESS 336	
228	ADDRESS 337	
229	ADDRESS 338	
230	ADDRESS 339	
231	ADDRESS 340	
232	ADDRESS 341	
233	ADDRESS 342	
234	ADDRESS 343	
235	ADDRESS 344	
236	ADDRESS 345	
237	ADDRESS 346	
238	ADDRESS 347	
239	ADDRESS 348	
240	ADDRESS 349	
241	ADDRESS 350	
242	ADDRESS 351	
243	ADDRESS 352	
244	ADDRESS 353	
245	ADDRESS 354	
246	ADDRESS 355	
247	ADDRESS 356	
248	ADDRESS 357	
249	ADDRESS 358	
250	ADDRESS 359	
251	ADDRESS 360	
252	ADDRESS 361	
253	ADDRESS 362	
254	ADDRESS 363	
255	ADDRESS 364	
256	ADDRESS 365	
257	ADDRESS 366	
258	ADDRESS 367	
259	ADDRESS 368	
260	ADDRESS 369	
261	ADDRESS 370	
262	ADDRESS 371	
263	ADDRESS 372	
264	ADDRESS 373	
265	ADDRESS 374	
266	ADDRESS 375	
267	ADDRESS 376	
268	ADDRESS 377	
269	ADDRESS 378	
270	ADDRESS 379	
271	ADDRESS 380	
272	ADDRESS 381	
273	ADDRESS 382	
274	ADDRESS 383	
275	ADDRESS 384	
276	ADDRESS 385	
277	ADDRESS 386	
278	ADDRESS 387	
279	ADDRESS 388	
280	ADDRESS 389	
281	ADDRESS 390	
282	ADDRESS 391	
283	ADDRESS 392	
284	ADDRESS 393	
285	ADDRESS 394	
286	ADDRESS 395	
287	ADDRESS 396	
288	ADDRESS 397	
289	ADDRESS 398	
290	ADDRESS 399	
291	ADDRESS 400	
292	ADDRESS 401	
293	ADDRESS 402	
294	ADDRESS 403	
295	ADDRESS 404	
296	ADDRESS 405	
297	ADDRESS 406	
298	ADDRESS 407	
299	ADDRESS 408	
300	ADDRESS 409	
301	ADDRESS 410	
302	ADDRESS 411	
303	ADDRESS 412	
304	ADDRESS 413	
305	ADDRESS 414	
306	ADDRESS 415	
307	ADDRESS 416	
308	ADDRESS 417	
309	ADDRESS 418	
310	ADDRESS 419	
311	ADDRESS 420	
312	ADDRESS 421	
313	ADDRESS 422	
314	ADDRESS 423	
315	ADDRESS 424	
316	ADDRESS 425	
317	ADDRESS 426	
318	ADDRESS 427	
319	ADDRESS 428	
320	ADDRESS 429	
321	ADDRESS 430	
322	ADDRESS 431	
323	ADDRESS 432	
324	ADDRESS 433	
325	ADDRESS 434	
326	ADDRESS 435	
327	ADDRESS 436	
328	ADDRESS 437	
329	ADDRESS 438	
330	ADDRESS 439	
331	ADDRESS 440	
332	ADDRESS 441	
333	ADDRESS 442	
334	ADDRESS 443	
335	ADDRESS 444	
336	ADDRESS 445	
337	ADDRESS 446	
338	ADDRESS 447	
339	ADDRESS 448	
340	ADDRESS 449	
341	ADDRESS 450	
342	ADDRESS 451	
343	ADDRESS 452	
344	ADDRESS 453	
345	ADDRESS 454	
346	ADDRESS 455	
347	ADDRESS 456	
348	ADDRESS 457	
349	ADDRESS 458	
350	ADDRESS 459	
351	ADDRESS 460	
352	ADDRESS 461	
353	ADDRESS 462	
354	ADDRESS 463	
355	ADDRESS 464	
356	ADDRESS 465	
357	ADDRESS 466	
358	ADDRESS 467	
359	ADDRESS 468	
360	ADDRESS 469	
361	ADDRESS 470	
362	ADDRESS 471	
363	ADDRESS 472	
364	ADDRESS 473	
365	ADDRESS 474	
366	ADDRESS 475	
367	ADDRESS 476	
368	ADDRESS 477	
369	ADDRESS 478	
370	ADDRESS 479	
371	ADDRESS 480	
372	ADDRESS 481	
373	ADDRESS 482	
374	ADDRESS 483	
375	ADDRESS 484	
376	ADDRESS 485	
377	ADDRESS 486	
378	ADDRESS 487	
379	ADDRESS 488	
380	ADDRESS 489	
381	ADDRESS 490	
382	ADDRESS 491	
383	ADDRESS 492	
384	ADDRESS 493	
385	ADDRESS 494	
386	ADDRESS 495	
387	ADDRESS 496	
388	ADDRESS 497	
389	ADDRESS 498	
390	ADDRESS 499	
391	ADDRESS 500	
392	ADDRESS 501	
393	ADDRESS 502	
394	ADDRESS 503	
395	ADDRESS 504	
396	ADDRESS 505	
397	ADDRESS 506	
398	ADDRESS 507	
399	ADDRESS 508	
400	ADDRESS 509	
401	ADDRESS 510	
402	ADDRESS 511	
403	ADDRESS 512	
404	ADDRESS 513	
405	ADDRESS 514	
406	ADDRESS 515	
407	ADDRESS 516	
408	ADDRESS 517	
409	ADDRESS 518	
410	ADDRESS 519	
411	ADDRESS 520	
412	ADDRESS 521	
413	ADDRESS 522	
414	ADDRESS 523	
415	ADDRESS 524	
416	ADDRESS 525	
417	ADDRESS 526	
418	ADDRESS 527	
419	ADDRESS 528	
420	ADDRESS 529	
421	ADDRESS 530	
422	ADDRESS 531	
423	ADDRESS 532	
424	ADDRESS 533	
425	ADDRESS 534	
426	ADDRESS 535	
427	ADDRESS 536	
428	ADDRESS 537	
429	ADDRESS 538	
430	ADDRESS 539	
431	ADDRESS 540	
432	ADDRESS 541	
433	ADDRESS 542	
434	ADDRESS 543	
435	ADDRESS 544	
436	ADDRESS 545	
437	ADDRESS 546	
438	ADDRESS 547	
439	ADDRESS 548	
440	ADDRESS 549	
441	ADDRESS 550	
442	ADDRESS 551	
443	ADDRESS 552	
444		

AR-4 COMPONENT LIST		
COMPONENT	PART NO.	REMARKS
C1	4N5500-10	WAS BY J-11
C2	4N5500-10	WAS BY J-11
C3	4N5500-10	WAS BY J-11
C4	COT 12-20	WAS BY COINING
C5	COT 12-20	WAS BY COINING
C6	COT 12-20	WAS BY COINING
C7	COT 12-20	WAS BY COINING
C8	4N5500-10	WAS BY J-11
C9	4N5500-10	WAS BY J-11
C10	4N5500-10	WAS BY J-11
C11	4N5500-10	WAS BY J-11
C12	4N5500-10	WAS BY J-11
C13	4N5500-10	WAS BY J-11
C14	4N5500-10	WAS BY J-11
C15	4N5500-10	WAS BY J-11
C16	4N5500-10	WAS BY J-11
C17	4N5500-10	WAS BY J-11
C18	4N5500-10	WAS BY J-11
C19	4N5500-10	WAS BY J-11
C20	4N5500-10	WAS BY J-11
C21	4N5500-10	WAS BY J-11
C22	4N5500-10	WAS BY J-11
C23	4N5500-10	WAS BY J-11
C24	4N5500-10	WAS BY J-11
C25	4N5500-10	WAS BY J-11
C26	4N5500-10	WAS BY J-11
C27	4N5500-10	WAS BY J-11
C28	4N5500-10	WAS BY J-11
C29	4N5500-10	WAS BY J-11
C30	4N5500-10	WAS BY J-11
C31	4N5500-10	WAS BY J-11
C32	4N5500-10	WAS BY J-11
C33	4N5500-10	WAS BY J-11
C34	4N5500-10	WAS BY J-11
C35	4N5500-10	WAS BY J-11
C36	4N5500-10	WAS BY J-11
C37	4N5500-10	WAS BY J-11
C38	4N5500-10	WAS BY J-11
C39	4N5500-10	WAS BY J-11
C40	4N5500-10	WAS BY J-11
C41	4N5500-10	WAS BY J-11
C42	4N5500-10	WAS BY J-11
C43	4N5500-10	WAS BY J-11
C44	4N5500-10	WAS BY J-11
C45	4N5500-10	WAS BY J-11
C46	4N5500-10	WAS BY J-11
C47	4N5500-10	WAS BY J-11
C48	4N5500-10	WAS BY J-11
C49	4N5500-10	WAS BY J-11
C50	4N5500-10	WAS BY J-11
C51	4N5500-10	WAS BY J-11
C52	4N5500-10	WAS BY J-11
C53	4N5500-10	WAS BY J-11
C54	4N5500-10	WAS BY J-11
C55	4N5500-10	WAS BY J-11
C56	4N5500-10	WAS BY J-11
C57	4N5500-10	WAS BY J-11
C58	4N5500-10	WAS BY J-11
C59	4N5500-10	WAS BY J-11
C60	4N5500-10	WAS BY J-11
C61	4N5500-10	WAS BY J-11
C62	4N5500-10	WAS BY J-11
C63	4N5500-10	WAS BY J-11
C64	4N5500-10	WAS BY J-11
C65	4N5500-10	WAS BY J-11
C66	4N5500-10	WAS BY J-11
C67	4N5500-10	WAS BY J-11
C68	4N5500-10	WAS BY J-11
C69	4N5500-10	WAS BY J-11
C70	4N5500-10	WAS BY J-11
C71	4N5500-10	WAS BY J-11
C72	4N5500-10	WAS BY J-11
C73	4N5500-10	WAS BY J-11
C74	4N5500-10	WAS BY J-11
C75	4N5500-10	WAS BY J-11
C76	4N5500-10	WAS BY J-11
C77	4N5500-10	WAS BY J-11
C78	4N5500-10	WAS BY J-11
C79	4N5500-10	WAS BY J-11
C80	4N5500-10	WAS BY J-11
C81	4N5500-10	WAS BY J-11
C82	4N5500-10	WAS BY J-11
C83	4N5500-10	WAS BY J-11
C84	4N5500-10	WAS BY J-11
C85	4N5500-10	WAS BY J-11
C86	4N5500-10	WAS BY J-11
C87	4N5500-10	WAS BY J-11
C88	4N5500-10	WAS BY J-11
C89	4N5500-10	WAS BY J-11
C90	4N5500-10	WAS BY J-11
C91	4N5500-10	WAS BY J-11
C92	4N5500-10	WAS BY J-11
C93	4N5500-10	WAS BY J-11
C94	4N5500-10	WAS BY J-11
C95	4N5500-10	WAS BY J-11
C96	4N5500-10	WAS BY J-11
C97	4N5500-10	WAS BY J-11
C98	4N5500-10	WAS BY J-11
C99	4N5500-10	WAS BY J-11
C100	4N5500-10	WAS BY J-11
C101	4N5500-10	WAS BY J-11
C102	4N5500-10	WAS BY J-11
C103	4N5500-10	WAS BY J-11
C104	4N5500-10	WAS BY J-11
C105	4N5500-10	WAS BY J-11
C106	4N5500-10	WAS BY J-11
C107	4N5500-10	WAS BY J-11
C108	4N5500-10	WAS BY J-11
C109	4N5500-10	WAS BY J-11
C110	4N5500-10	WAS BY J-11
C111	4N5500-10	WAS BY J-11
C112	4N5500-10	WAS BY J-11
C113	4N5500-10	WAS BY J-11
C114	4N5500-10	WAS BY J-11
C115	4N5500-10	WAS BY J-11
C116	4N5500-10	WAS BY J-11
C117	4N5500-10	WAS BY J-11
C118	4N5500-10	WAS BY J-11
C119	4N5500-10	WAS BY J-11
C120	4N5500-10	WAS BY J-11
C121	4N5500-10	WAS BY J-11
C122	4N5500-10	WAS BY J-11
C123	4N5500-10	WAS BY J-11
C124	4N5500-10	WAS BY J-11
C125	4N5500-10	WAS BY J-11
C126	4N5500-10	WAS BY J-11
C127	4N5500-10	WAS BY J-11
C128	4N5500-10	WAS BY J-11
C129	4N5500-10	WAS BY J-11
C130	4N5500-10	WAS BY J-11
C131	4N5500-10	WAS BY J-11
C132	4N5500-10	WAS BY J-11
C133	4N5500-10	WAS BY J-11
C134	4N5500-10	WAS BY J-11
C135	4N5500-10	WAS BY J-11
C136	4N5500-10	WAS BY J-11
C137	4N5500-10	WAS BY J-11
C138	4N5500-10	WAS BY J-11
C139	4N5500-10	WAS BY J-11
C140	4N5500-10	WAS BY J-11
C141	4N5500-10	WAS BY J-11
C142	4N5500-10	WAS BY J-11
C143	4N5500-10	WAS BY J-11
C144	4N5500-10	WAS BY J-11
C145	4N5500-10	WAS BY J-11
C146	4N5500-10	WAS BY J-11
C147	4N5500-10	WAS BY J-11
C148	4N5500-10	WAS BY J-11
C149	4N5500-10	WAS BY J-11
C150	4N5500-10	WAS BY J-11
C151	4N5500-10	WAS BY J-11
C152	4N5500-10	WAS BY J-11
C153	4N5500-10	WAS BY J-11
C154	4N5500-10	WAS BY J-11
C155	4N5500-10	WAS BY J-11
C156	4N5500-10	WAS BY J-11
C157	4N5500-10	WAS BY J-11
C158	4N5500-10	WAS BY J-11
C159	4N5500-10	WAS BY J-11
C160	4N5500-10	WAS BY J-11
C161	4N5500-10	WAS BY J-11
C162	4N5500-10	WAS BY J-11
C163	4N5500-10	WAS BY J-11
C164	4N5500-10	WAS BY J-11
C165	4N5500-10	WAS BY J-11
C166	4N5500-10	WAS BY J-11
C167	4N5500-10	WAS BY J-11
C168	4N5500-10	WAS BY J-11
C169	4N5500-10	WAS BY J-11
C170	4N5500-10	WAS BY J-11
C171	4N5500-10	WAS BY J-11
C172	4N5500-10	WAS BY J-11
C173	4N5500-10	WAS BY J-11
C174	4N5500-10	WAS BY J-11
C175	4N5500-10	WAS BY J-11
C176	4N5500-10	WAS BY J-11
C177	4N5500-10	WAS BY J-11
C178	4N5500-10	WAS BY J-11
C179	4N5500-10	WAS BY J-11
C180	4N5500-10	WAS BY J-11
C181	4N5500-10	WAS BY J-11
C182	4N5500-10	WAS BY J-11
C183	4N5500-10	WAS BY J-11
C184	4N5500-10	WAS BY J-11
C185	4N5500-10	WAS BY J-11
C186	4N5500-10	WAS BY J-11
C187	4N5500-10	WAS BY J-11
C188	4N5500-10	WAS BY J-11
C189	4N5500-10	WAS BY J-11
C190	4N5500-10	WAS BY J-11
C191	4N5500-10	WAS BY J-11
C192	4N5500-10	WAS BY J-11
C193	4N5500-10	WAS BY J-11
C194	4N5500-10	WAS BY J-11
C195	4N5500-10	WAS BY J-11
C196	4N5500-10	WAS BY J-11
C197	4N5500-10	WAS BY J-11
C198	4N5500-10	WAS BY J-11
C199	4N5500-10	WAS BY J-11
C200	4N5500-10	WAS BY J-11
C201	4N5500-10	WAS BY J-11
C202	4N5500-10	WAS BY J-11
C203	4N5500-10	WAS BY J-11
C204	4N5500-10	WAS BY J-11
C205	4N5500-10	WAS BY J-11
C206	4N5500-10	WAS BY J-11
C207	4N5500-10	WAS BY J-11
C208	4N5500-10	WAS BY J-11
C209	4N5500-10	WAS BY J-11
C210	4N5500-10	WAS BY J-11
C211	4N5500-10	WAS BY J-11
C212	4N5500-10	WAS BY J-11
C213	4N5500-10	WAS BY J-11
C214	4N5500-10	WAS BY J-11
C215	4N5500-10	WAS BY J-11
C216	4N5500-10	WAS BY J-11
C217	4N5500-10	WAS BY J-11
C218	4N5500-10	WAS BY J-11
C219	4N5500-10	WAS BY J-11
C220	4N5500-10	WAS BY J-11
C221	4N5500-10	WAS BY J-11
C222	4N5500-10	WAS BY J-11
C223	4N5500-10	WAS BY J-11
C224	4N5500-10	WAS BY J-11
C225	4N5500-10	WAS BY J-11
C226	4N5500-10	WAS BY J-11
C227	4N5500-10	WAS BY J-11
C228	4N5500-10	WAS BY J-11
C229	4N5500-10	WAS BY J-11
C230	4N5500-10	WAS BY J-11
C231	4N5500-10	WAS BY J-11
C232	4N5500-10	WAS BY J-11
C233	4N5500-10	WAS BY J-11
C234	4N5500-10	WAS BY J-11
C235	4N5500-10	WAS BY J-11
C236	4N5500-10	WAS BY J-11
C237	4N5500-10	WAS BY J-11
C238	4N5500-10	WAS BY J-11
C239	4N5500-10	WAS BY J-11
C240	4N5500-10	WAS BY J-11
C241	4N5500-10	WAS BY J-11
C242	4N5500-10	WAS BY J-11
C243	4N5500-10	WAS BY J-11
C244	4N5500-10	WAS BY J-11
C245	4N5500-10	WAS BY J-11
C246	4N5500-10	WAS BY J-11
C247	4N5500-10	WAS BY J-11
C248	4N5500-10	WAS BY J-11
C249	4N5500-10	WAS BY J-11
C250	4N5500-10	WAS BY J-11
C251	4N5500-10	WAS BY J-11
C252	4N5500-10	WAS BY J-11
C253	4N5500-10	WAS BY J-11
C254	4N5500-10	WAS BY J-11
C255	4N5500-10	WAS BY J-11
C256	4N5500-10	WAS BY J-11
C257	4N5500-10	WAS BY J-11
C258	4N5500-10	WAS BY J-11
C259	4N5500-10	WAS BY J-11
C260	4N5500-10	WAS BY J-11
C261	4N5500-10	WAS BY J-11
C262	4N5500-10	WAS BY J-11
C263	4N5500-10	WAS BY J-11
C264	4N5500-10	WAS BY J-11
C265	4N5500-10	WAS BY J-11
C266	4N5500-10	WAS BY J-11
C267	4N5500-10	WAS BY J-11
C268	4N5500-10	WAS BY J-11
C269	4N5500-10	WAS BY J-11
C270	4N5500-10	WAS BY J-11
C271	4N5500-10	WAS BY J-11
C272	4N5500-10	WAS BY J-11
C273	4N5500-10	WAS BY J-11
C274	4N5500-10	WAS BY J-11
C275	4N5500-10	WAS BY J-11
C276	4N5500-10	WAS BY J-11
C277	4N5500-10	WAS BY J-11
C278	4N5500-10	WAS BY J-11
C279	4N5500-10	WAS BY J-11
C280	4N5500-10	WAS BY J-11
C281	4N5500-10	WAS BY J-11
C282	4N5500-10	WAS BY J-11
C283	4N5500-10	WAS BY J-11
C284	4N5500-10	WAS BY J-11
C285	4N5500-10	WAS BY J-11
C286	4N5500-10	WAS BY J-11
C287	4N5500-10	WAS BY J-11
C288	4N5500-10	WAS BY J-11
C289	4N5500-10	WAS BY J-11
C290	4N5500-10	WAS BY J-11
C291	4N5500-10	WAS BY J-11
C292	4N5500-10	WAS BY J-11
C293	4N5500-10	WAS BY J-11
C294	4N5500-10	WAS BY J-11
C295	4N5500-10	WAS BY J-11
C296	4N5500-10	WAS BY J-11
C297	4N5500-10	WAS BY J-11
C298	4N5500-10	WAS BY J-11
C299	4N5500-10	WAS BY J-11
C300	4N5500-10	WAS BY J-11
C301	4N5500-10	WAS BY J-11
C302	4N5500-10	WAS BY J-11
C303	4N5500-10	WAS BY J-11
C304	4N5500-10	WAS BY J-11
C305	4N5500-10	WAS BY J-11
C306	4N5500-10	WAS BY J-11
C307	4N5500-10	WAS BY J-11
C308	4N5500-10	WAS BY J-11
C309	4N5500-10	WAS BY J-11
C310	4N5500-10	WAS BY J-11
C311	4N5500-10	WAS BY J-11
C312	4N5500-10	WAS BY J-11
C313	4N5500-10	WAS BY J-11
C314	4N5500-10	WAS BY J-11
C315	4N5500-10	WAS BY J-11
C316	4N5500-10	WAS BY J-11
C317	4N5500-10	WAS BY J-11
C318	4N5500-10	WAS BY J-11
C319	4N5500-10	WAS BY J-11
C320	4N5500-10	WAS BY J-11
C321	4N5500-10	WAS BY J-11
C322	4N5500-10	WAS BY J-11
C323	4N5500-10	WAS BY J-11
C324	4N5500-10	WAS BY J-11
C325	4N5500-10	WAS BY J-11
C326	4N5500-10	WAS BY J-11
C327	4N5500-10	WAS BY J-11
C328	4N5500-10	WAS BY J-11

CONFIDENTIAL LIST		
IDENTITY	AGENCY NO.	TERMINAL
01	601-200-003	
02	601-200-003	
03	601-200-003	
04	601-200-003	
05	601-200-003	
06	601-200-003	
07	601-200-003	
08	601-200-003	
09	601-200-003	
10	601-200-003	
11	601-200-003	
12	601-200-003	
13	601-200-003	
14	601-200-003	
15	601-200-003	
16	601-200-003	
17	601-200-003	
18	601-200-003	
19	601-200-003	
20	601-200-003	
21	601-200-003	
22	601-200-003	
23	601-200-003	
24	601-200-003	
25	601-200-003	
26	601-200-003	
27	601-200-003	
28	601-200-003	
29	601-200-003	
30	601-200-003	
31	601-200-003	
32	601-200-003	
33	601-200-003	
34	601-200-003	
35	601-200-003	
36	601-200-003	
37	601-200-003	
38	601-200-003	
39	601-200-003	
40	601-200-003	
41	601-200-003	
42	601-200-003	
43	601-200-003	
44	601-200-003	
45	601-200-003	
46	601-200-003	
47	601-200-003	
48	601-200-003	
49	601-200-003	
50	601-200-003	
51	601-200-003	
52	601-200-003	
53	601-200-003	
54	601-200-003	
55	601-200-003	
56	601-200-003	
57	601-200-003	
58	601-200-003	
59	601-200-003	
60	601-200-003	
61	601-200-003	
62	601-200-003	
63	601-200-003	
64	601-200-003	
65	601-200-003	
66	601-200-003	
67	601-200-003	
68	601-200-003	
69	601-200-003	
70	601-200-003	
71	601-200-003	
72	601-200-003	
73	601-200-003	
74	601-200-003	
75	601-200-003	
76	601-200-003	
77	601-200-003	
78	601-200-003	
79	601-200-003	
80	601-200-003	
81	601-200-003	
82	601-200-003	
83	601-200-003	
84	601-200-003	
85	601-200-003	
86	601-200-003	
87	601-200-003	
88	601-200-003	
89	601-200-003	
90	601-200-003	
91	601-200-003	
92	601-200-003	
93	601-200-003	
94	601-200-003	
95	601-200-003	
96	601-200-003	
97	601-200-003	
98	601-200-003	
99	601-200-003	
100	601-200-003	







RET (Cont)		
Case	Page No.	
882	11-10-1982	
881	11-10-1982	

[illegible]

AIR 2c ARS2		REQUISITION 1-20
SEQUENCE	PLAT NUMBER	REMARKS
01	0-07 00 000	REF. OF AIRCRAFT, BIRMINGHAM, AL. FIG. 000000 000 0000
02	0-07 00 000	
03	0-07 00 000	
04	0-07 0-00 000	
05	0-07 0-00 000	
06	0-00 000 000	
07	0-07 0-00 000	
08	0-07 00 000	
09	0-07 00 000	
10	0-07 00 000	
11	0-07 00 000	
12	0-07 00 000	
13	0-07 00 000	
14	0-07 00 000	
15	0-07 00 000	
16	0-07 00 000	
17	0-07 00 000	
18	0-07 00 000	
19	0-07 00 000	
20	0-07 00 000	
21	0-07 00 000	
22	0-07 00 000	
23	0-07 00 000	
24	0-07 00 000	
25	0-07 00 000	
26	0-07 00 000	
27	0-07 00 000	
28	0-07 00 000	
29	0-07 00 000	
30	0-07 00 000	
31	0-07 00 000	
32	0-07 00 000	
33	0-07 00 000	
34	0-07 00 000	
35	0-07 00 000	
36	0-07 00 000	
37	0-07 00 000	
38	0-07 00 000	
39	0-07 00 000	
40	0-07 00 000	
41	0-07 00 000	
42	0-07 00 000	
43	0-07 00 000	
44	0-07 00 000	
45	0-07 00 000	
46	0-07 00 000	
47	0-07 00 000	
48	0-07 00 000	
49	0-07 00 000	
50	0-07 00 000	
51	0-07 00 000	
52	0-07 00 000	
53	0-07 00 000	
54	0-07 00 000	
55	0-07 00 000	
56	0-07 00 000	
57	0-07 00 000	
58	0-07 00 000	
59	0-07 00 000	
60	0-07 00 000	
61	0-07 00 000	
62	0-07 00 000	
63	0-07 00 000	
64	0-07 00 000	
65	0-07 00 000	
66	0-07 00 000	
67	0-07 00 000	
68	0-07 00 000	
69	0-07 00 000	
70	0-07 00 000	
71	0-07 00 000	
72	0-07 00 000	
73	0-07 00 000	
74	0-07 00 000	
75	0-07 00 000	
76	0-07 00 000	
77	0-07 00 000	
78	0-07 00 000	
79	0-07 00 000	
80	0-07 00 000	
81	0-07 00 000	
82	0-07 00 000	
83	0-07 00 000	
84	0-07 00 000	
85	0-07 00 000	
86	0-07 00 000	
87	0-07 00 000	
88	0-07 00 000	
89	0-07 00 000	
90	0-07 00 000	
91	0-07 00 000	
92	0-07 00 000	
93	0-07 00 000	
94	0-07 00 000	
95	0-07 00 000	
96	0-07 00 000	
97	0-07 00 000	
98	0-07 00 000	
99	0-07 00 000	
100	0-07 00 000	

AR 7		REFUGEE LIST
NUMBER	NAME	PLACE
01	WATSON, JIM	REF. BY MEMPHIS, TENN. R. REG. OFFICE (REF 0113)
02	WATSON, JIM	
03	WATSON, JIM	
04	WATSON, JIM	
05	WATSON, JIM	
06	WATSON, JIM	
07	WATSON, JIM	
08	WATSON, JIM	
09	WATSON, JIM	
10	WATSON, JIM	
11	WATSON, JIM	
12	WATSON, JIM	
13	WATSON, JIM	
14	WATSON, JIM	
15	WATSON, JIM	
16	WATSON, JIM	
17	WATSON, JIM	
18	WATSON, JIM	
19	WATSON, JIM	
20	WATSON, JIM	
21	WATSON, JIM	
22	WATSON, JIM	
23	WATSON, JIM	
24	WATSON, JIM	
25	WATSON, JIM	
26	WATSON, JIM	
27	WATSON, JIM	
28	WATSON, JIM	
29	WATSON, JIM	
30	WATSON, JIM	
31	WATSON, JIM	
32	WATSON, JIM	
33	WATSON, JIM	
34	WATSON, JIM	
35	WATSON, JIM	
36	WATSON, JIM	
37	WATSON, JIM	
38	WATSON, JIM	
39	WATSON, JIM	
40	WATSON, JIM	
41	WATSON, JIM	
42	WATSON, JIM	
43	WATSON, JIM	
44	WATSON, JIM	
45	WATSON, JIM	
46	WATSON, JIM	
47	WATSON, JIM	
48	WATSON, JIM	
49	WATSON, JIM	
50	WATSON, JIM	
51	WATSON, JIM	
52	WATSON, JIM	
53	WATSON, JIM	
54	WATSON, JIM	
55	WATSON, JIM	
56	WATSON, JIM	
57	WATSON, JIM	
58	WATSON, JIM	
59	WATSON, JIM	
60	WATSON, JIM	
61	WATSON, JIM	
62	WATSON, JIM	
63	WATSON, JIM	
64	WATSON, JIM	
65	WATSON, JIM	
66	WATSON, JIM	
67	WATSON, JIM	
68	WATSON, JIM	
69	WATSON, JIM	
70	WATSON, JIM	
71	WATSON, JIM	
72	WATSON, JIM	
73	WATSON, JIM	
74	WATSON, JIM	
75	WATSON, JIM	
76	WATSON, JIM	
77	WATSON, JIM	
78	WATSON, JIM	
79	WATSON, JIM	
80	WATSON, JIM	
81	WATSON, JIM	
82	WATSON, JIM	
83	WATSON, JIM	
84	WATSON, JIM	
85	WATSON, JIM	
86	WATSON, JIM	
87	WATSON, JIM	
88	WATSON, JIM	
89	WATSON, JIM	
90	WATSON, JIM	
91	WATSON, JIM	
92	WATSON, JIM	
93	WATSON, JIM	
94	WATSON, JIM	
95	WATSON, JIM	
96	WATSON, JIM	
97	WATSON, JIM	
98	WATSON, JIM	
99	WATSON, JIM	
100	WATSON, JIM	









X 802.949

THIS DRAWING IS THE PROPERTY OF THE U.S. GOVERNMENT AND IS LOANED TO YOUR ORGANIZATION. IT AND ITS CONTENTS ARE NOT TO BE DISTRIBUTED OUTSIDE YOUR ORGANIZATION. IT IS TO BE RETURNED TO THE U.S. GOVERNMENT ON REQUEST.


SEE SHEET 1 OF 5 FOR CONTROLLING DRAWING CHANGES

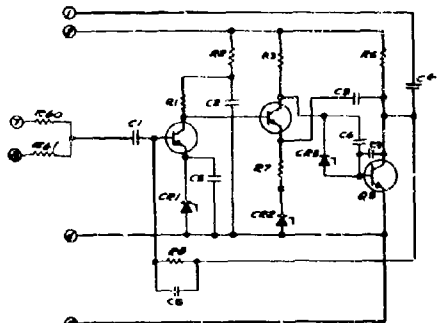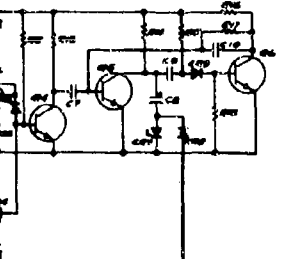


AR 3 SCHEMATIC DIAGRAM (814947-)

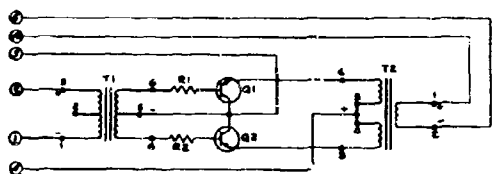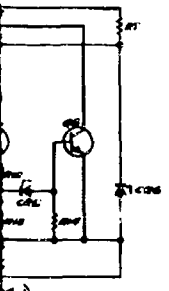

GI SCHEMATIC DIAGRAM (814944-)  
(CHOPPER)

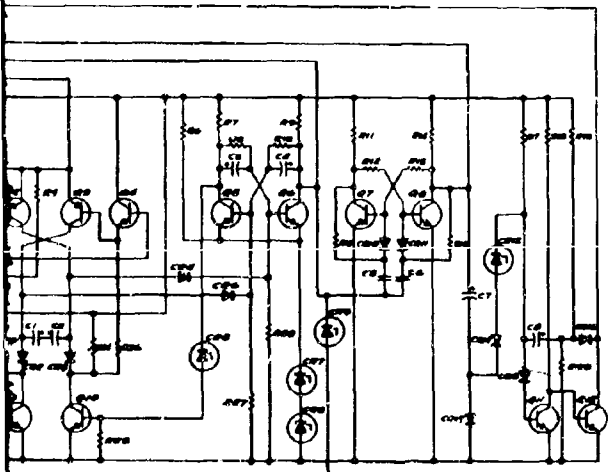

AR 5 SCHEMATIC DIAGRAM (814945-)  
(HSA)

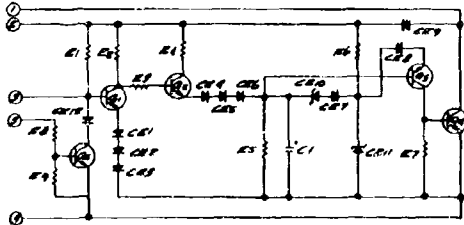


AR 6 SCHEMATIC DIAGRAM (802948-1)  
(FLAG TRIP)

REV	DATE	DESCRIPTION	BY	CHKD	APPROVED
1	7-15-54	WIRING SCHEMATIC, COMPUTER DISPLAY			
<p>WIRING SCHEMATIC, COMPUTER DISPLAY</p> <p>70210 J X 802949</p>					

X 802949 1


D

NOT REPRODUCIBLE

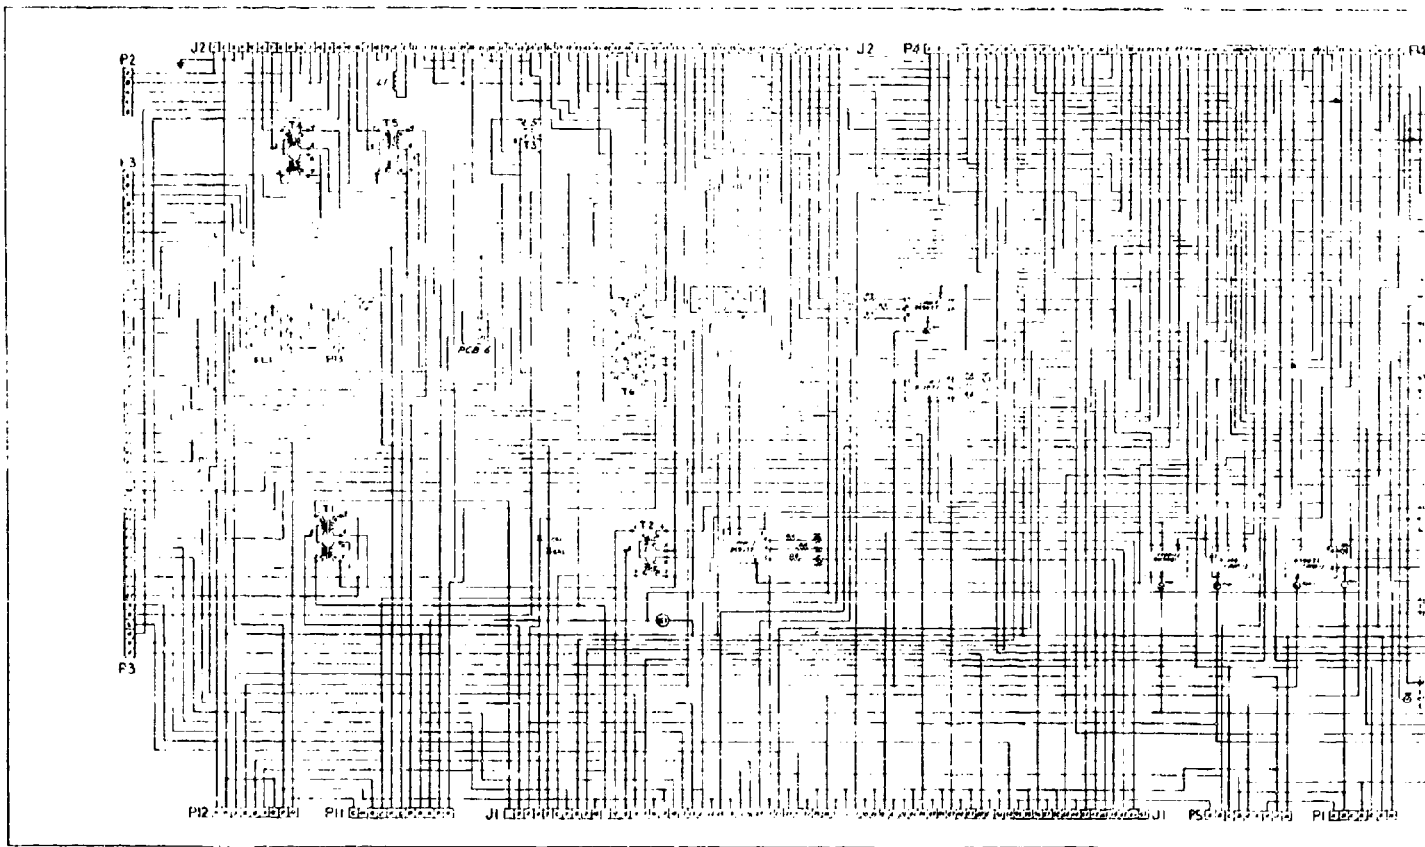

A


NOT REPRODUCIBLE

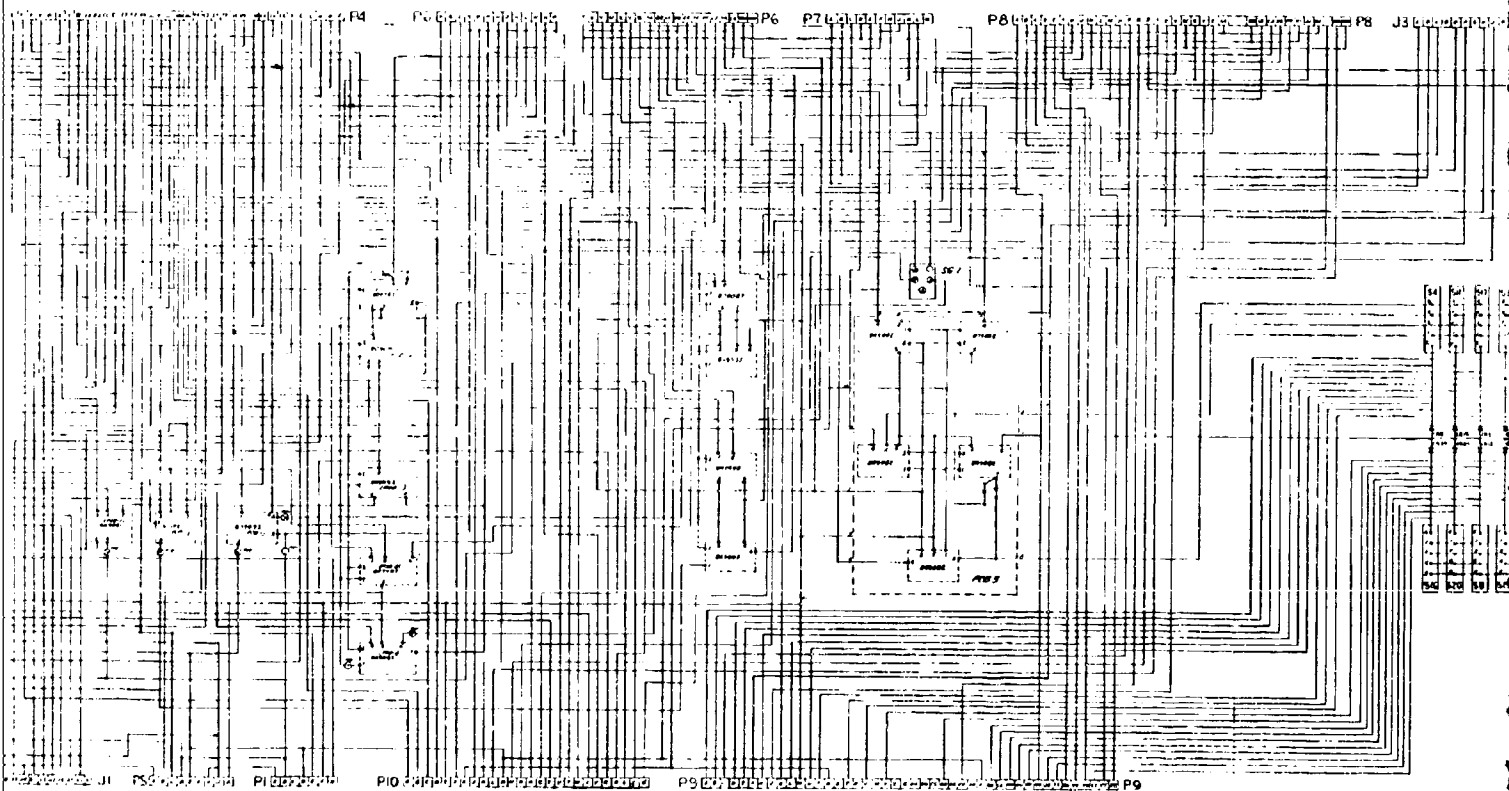


B

RODUCIBLE

NOT REPRODUCIBLE

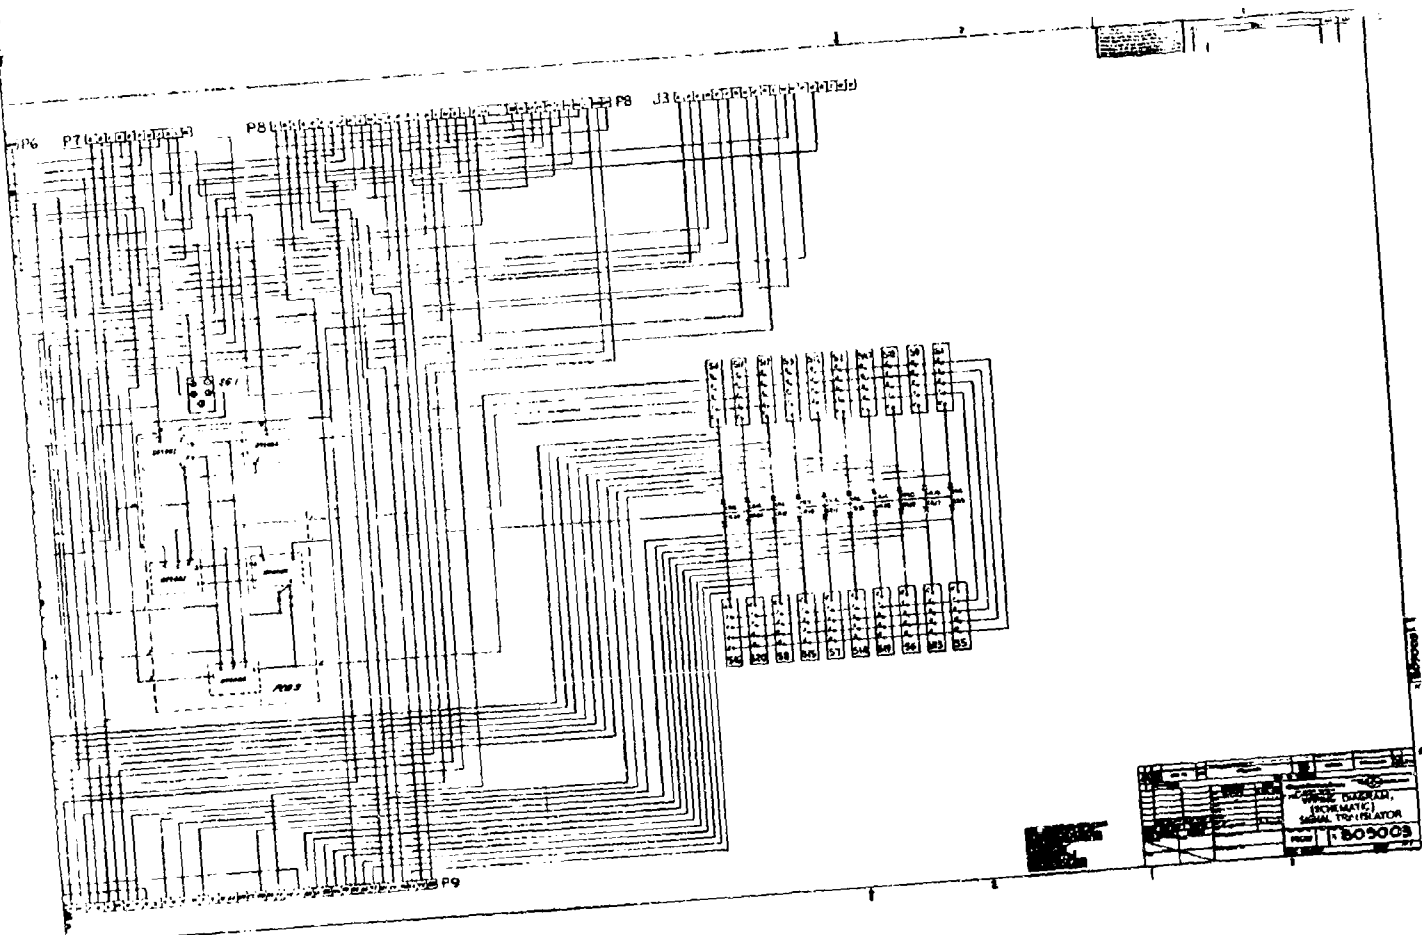

C

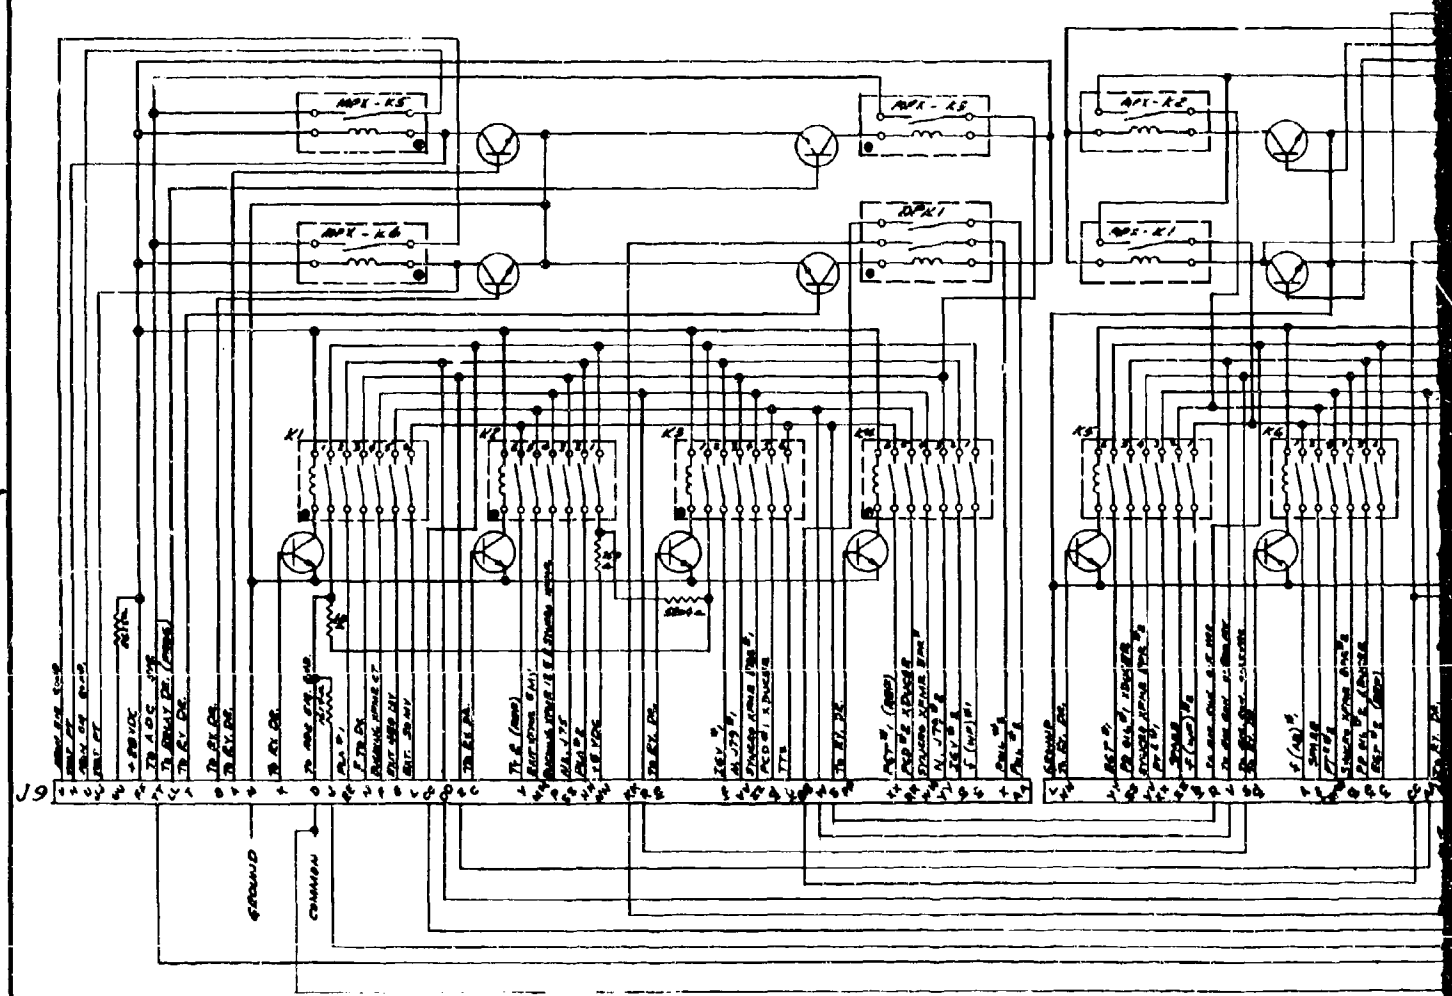

A




REVISIONS			
PRN	DESCRIPTION	DATE	APPROVED
A	SEE REVISION NOTICE	12-1-11	10-1-11





B


[illegible]

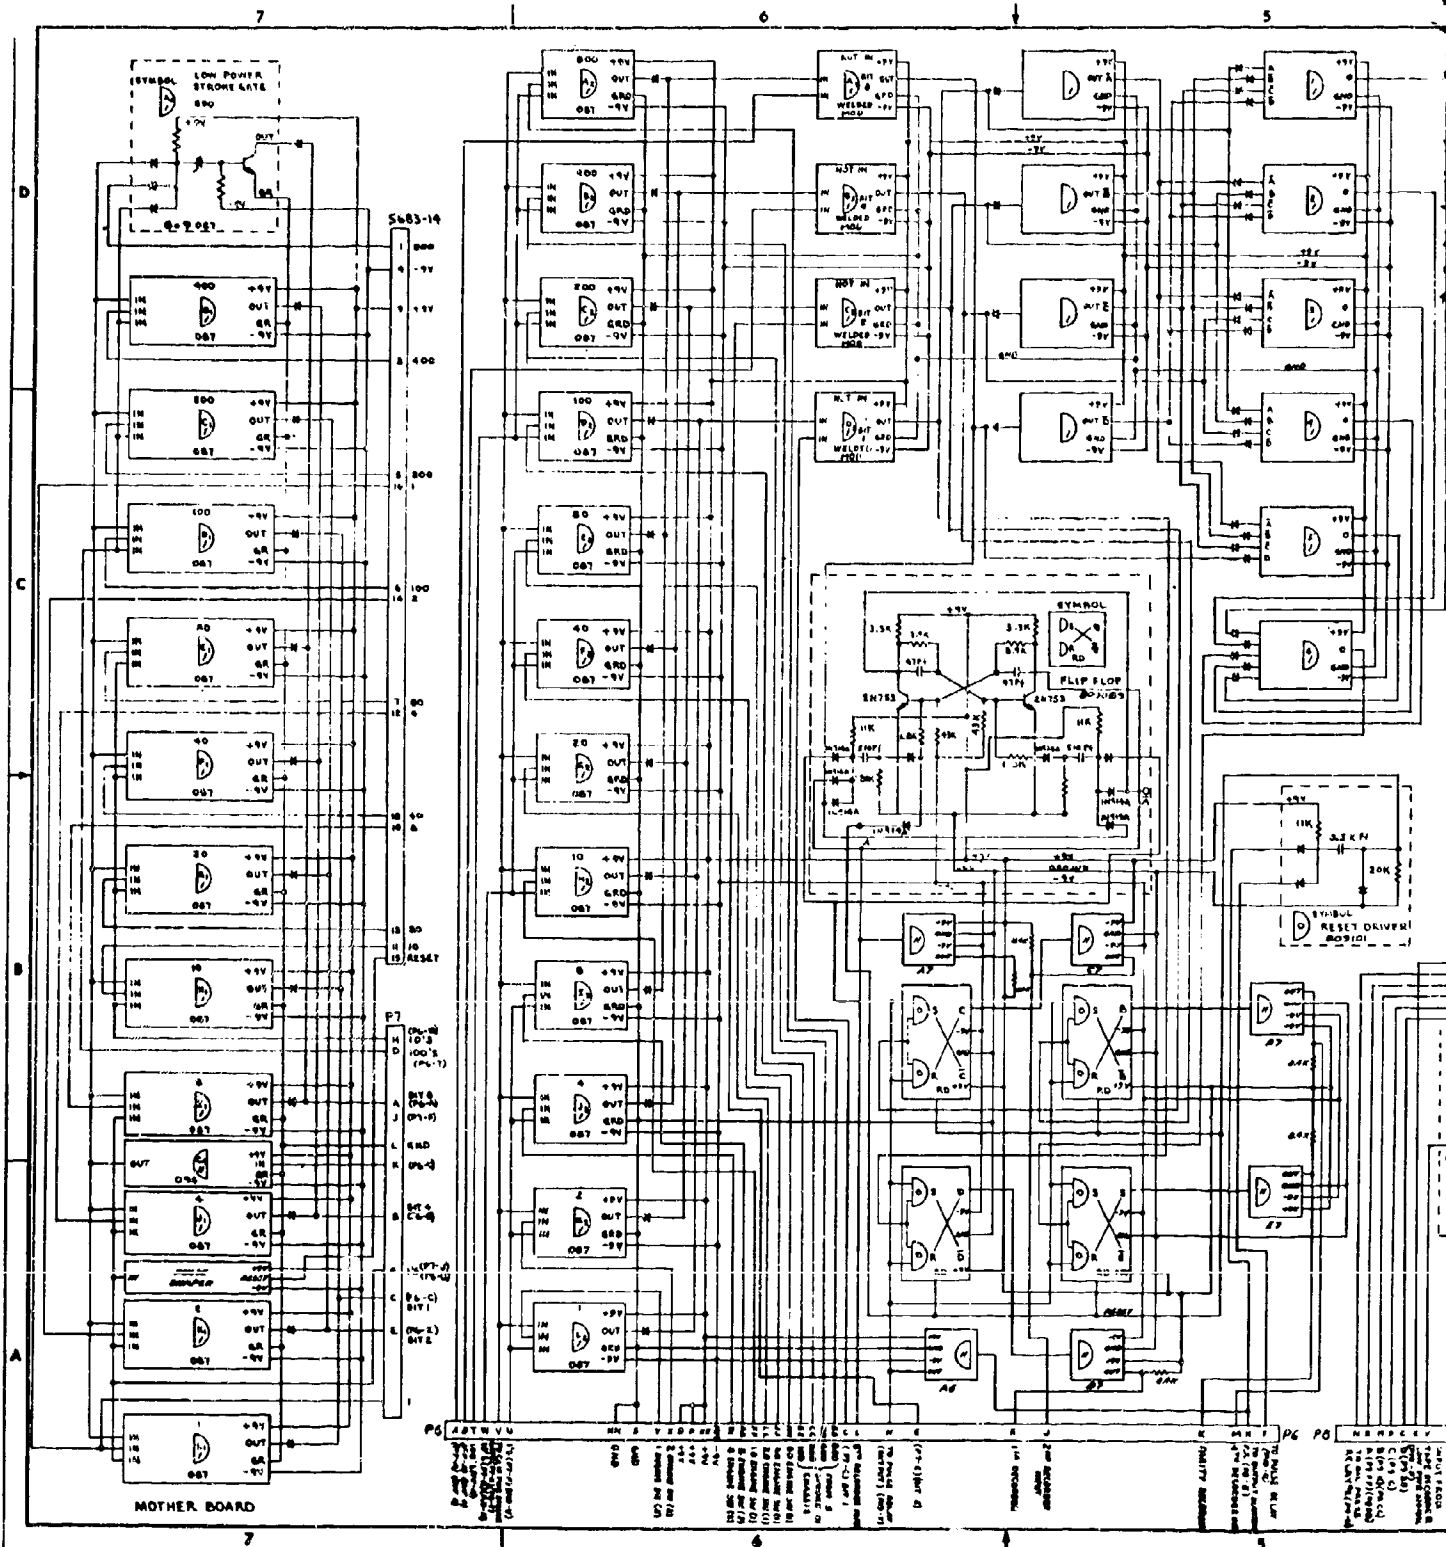

A

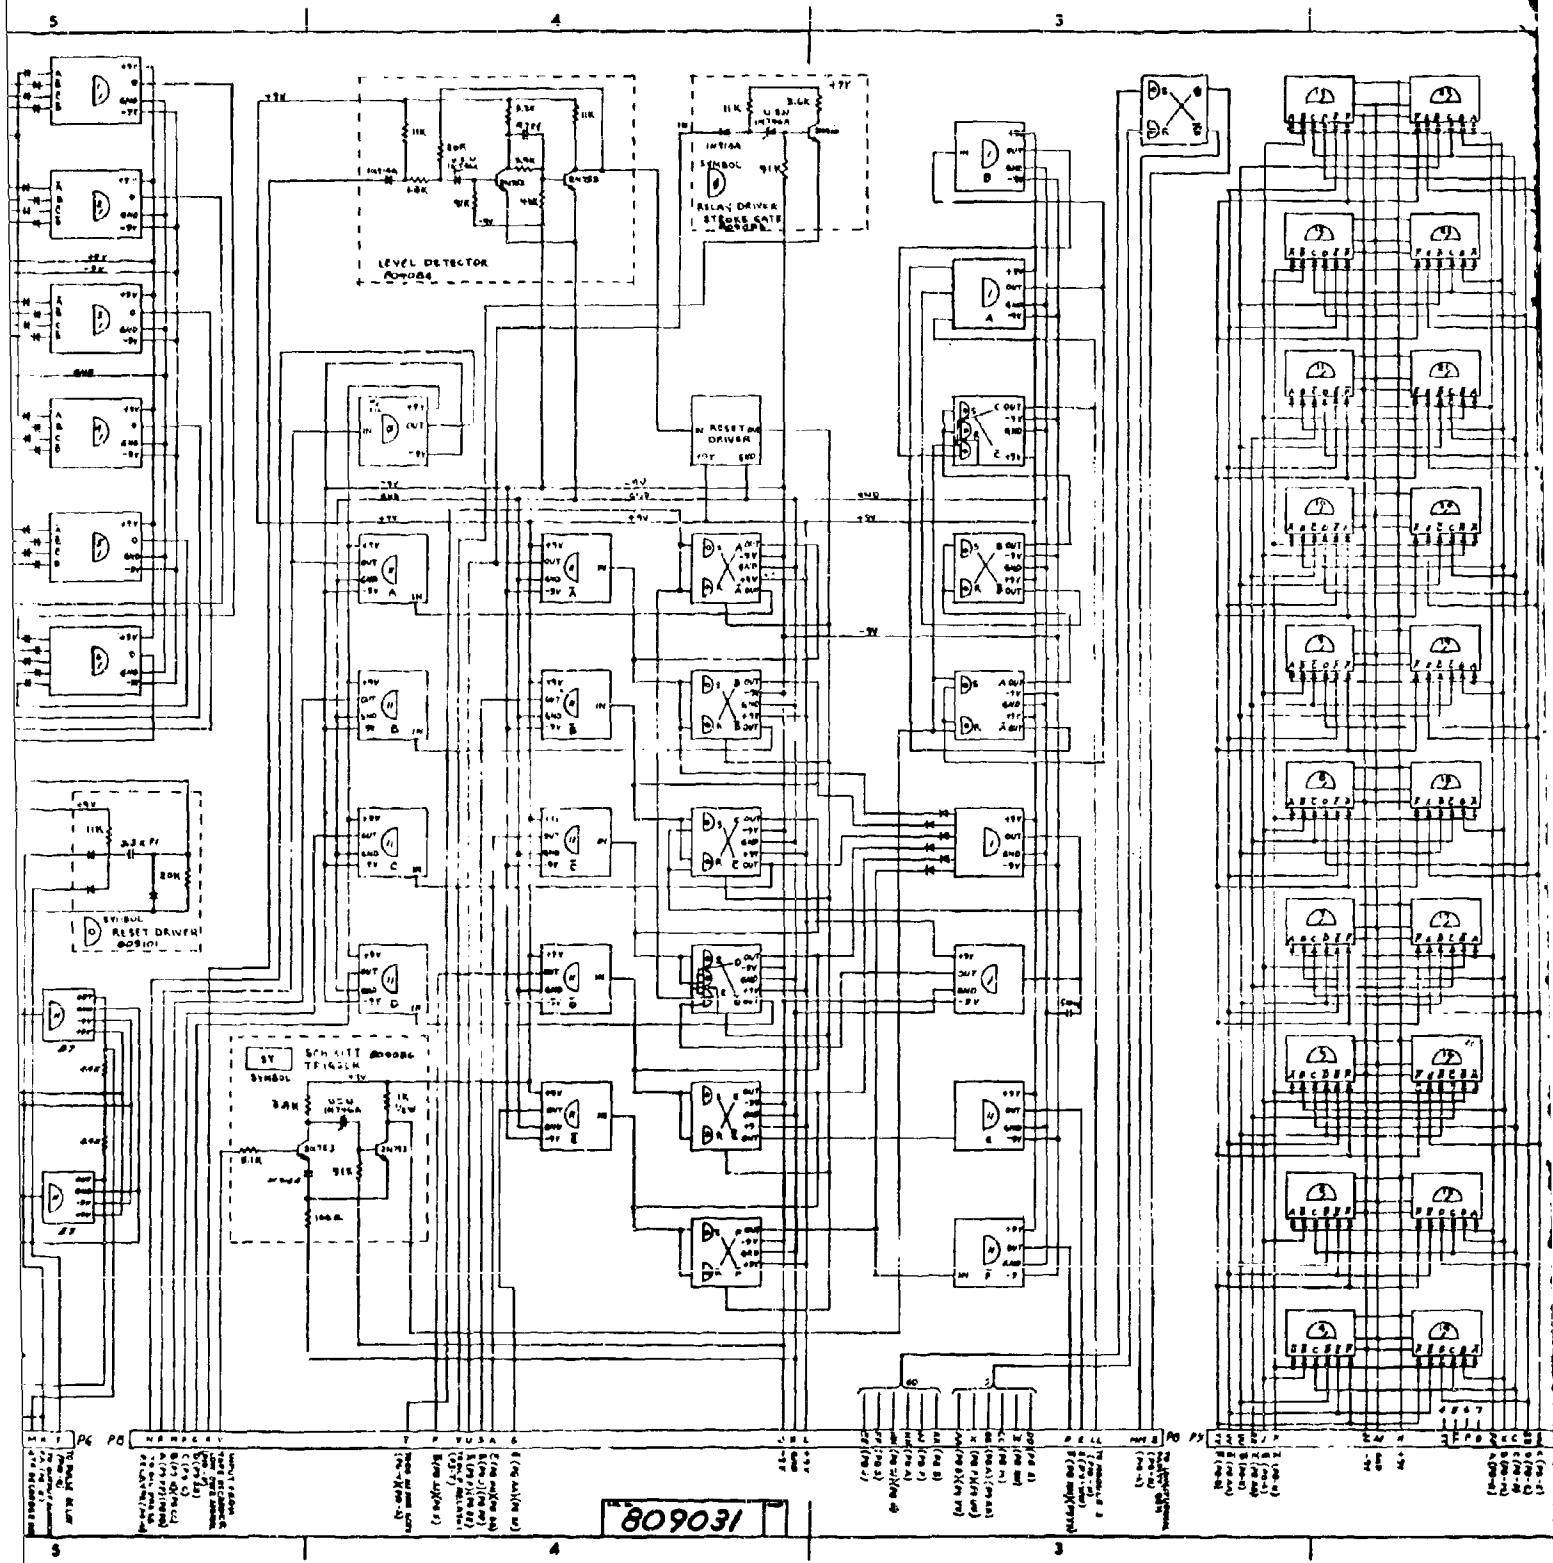


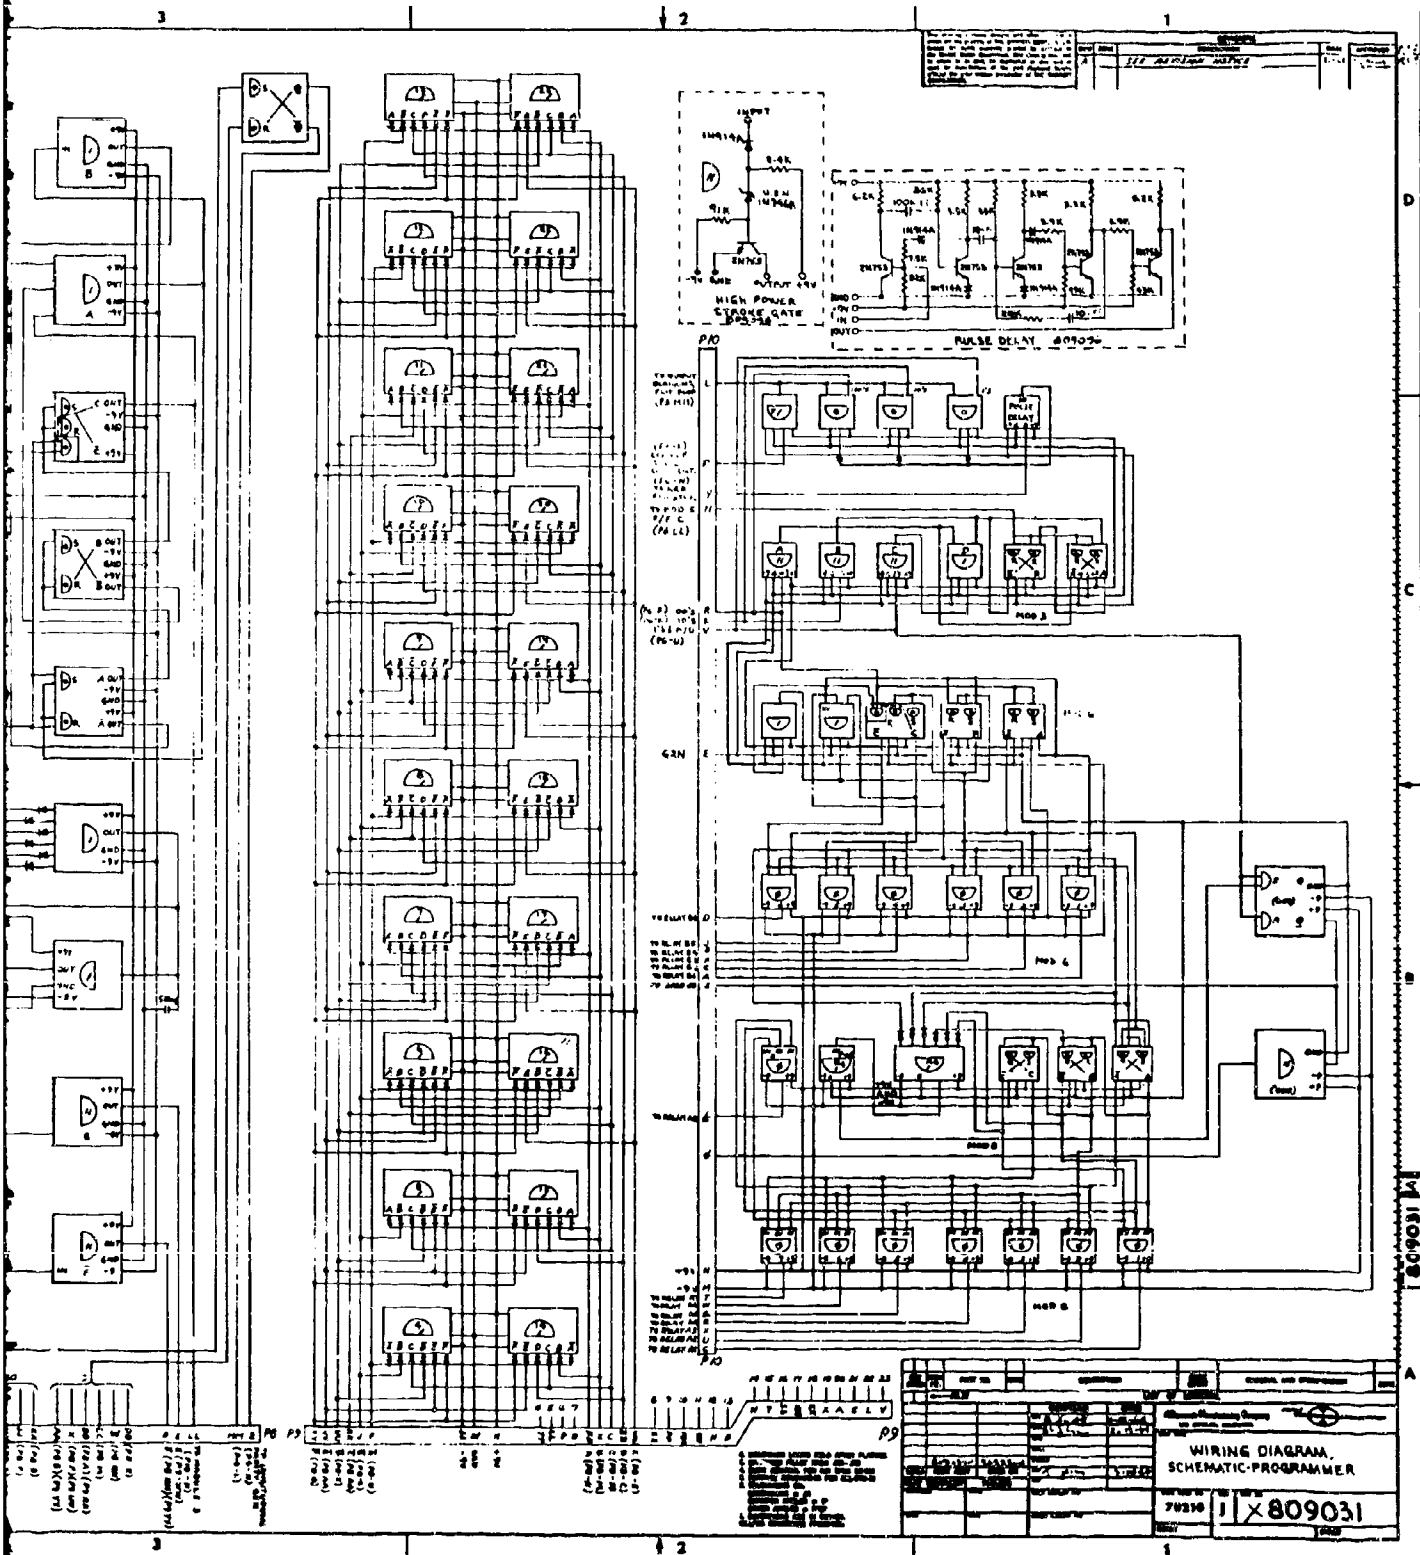

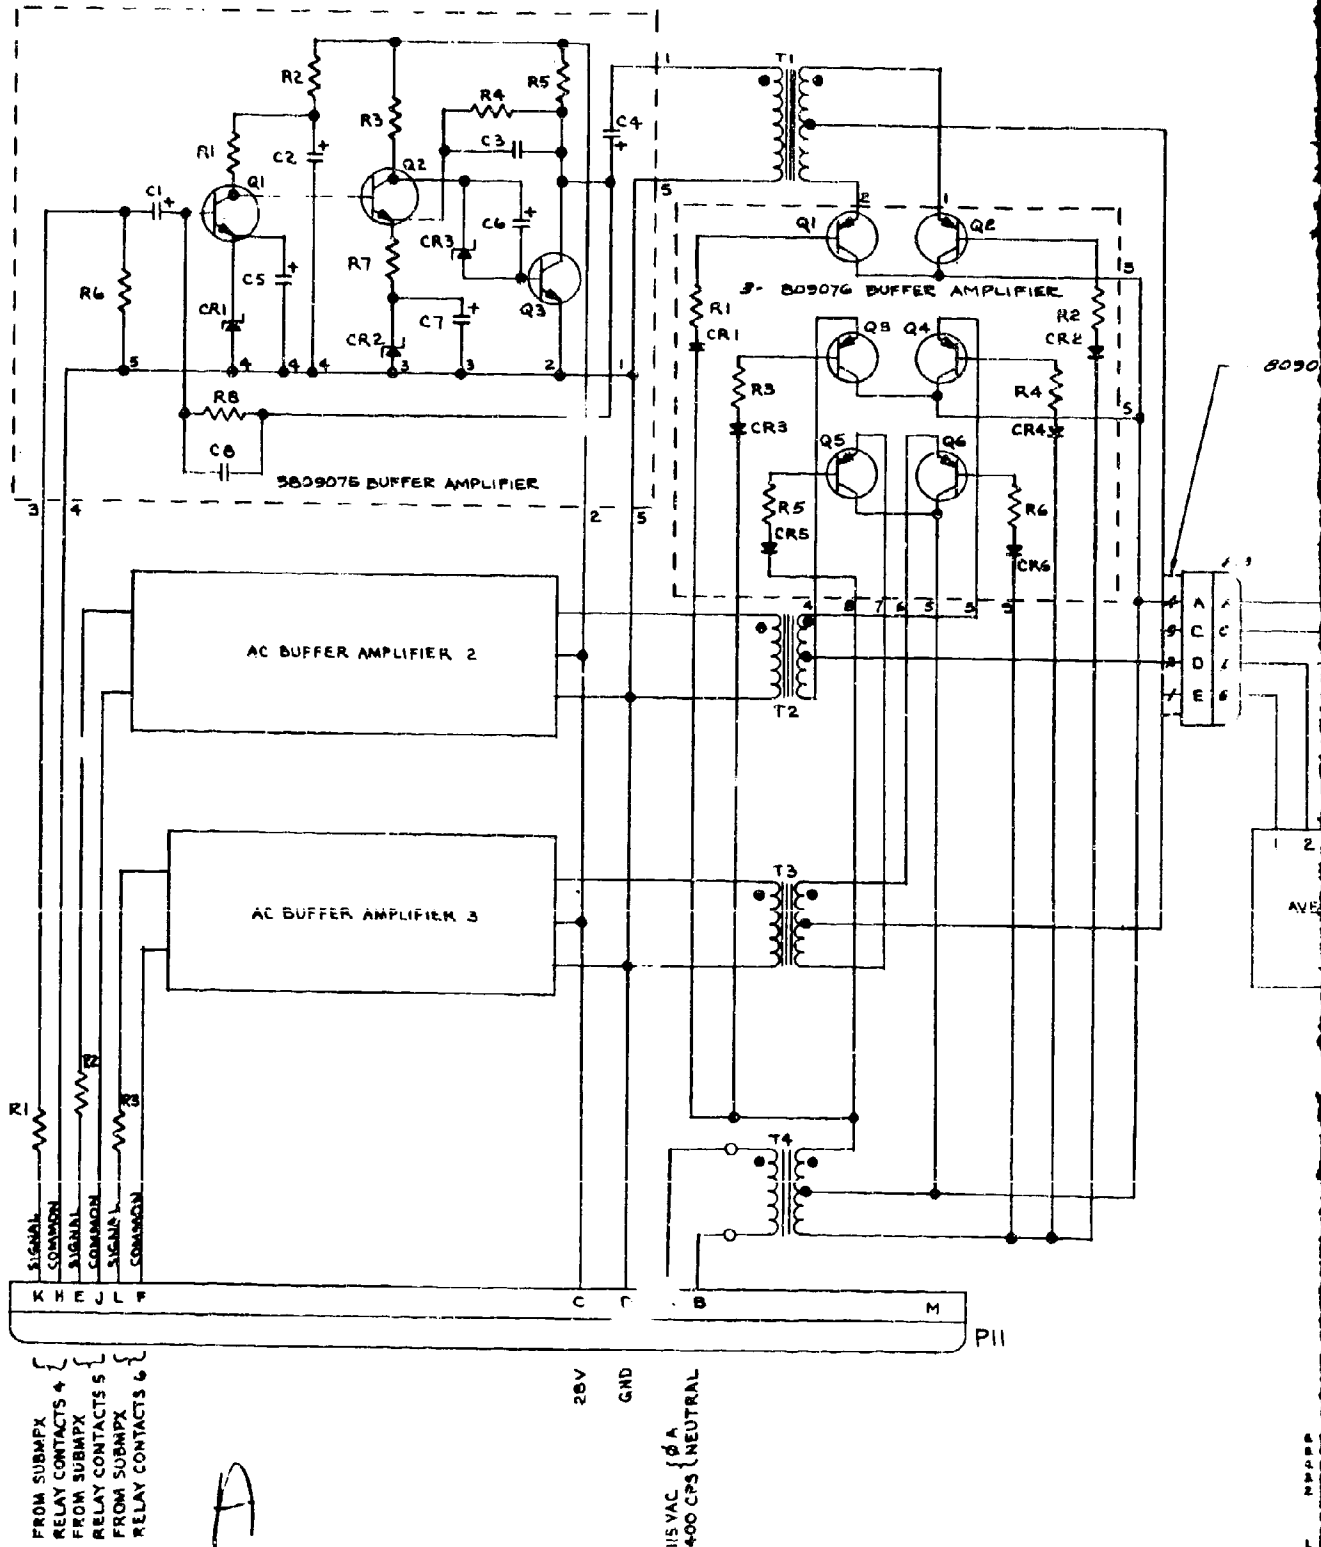





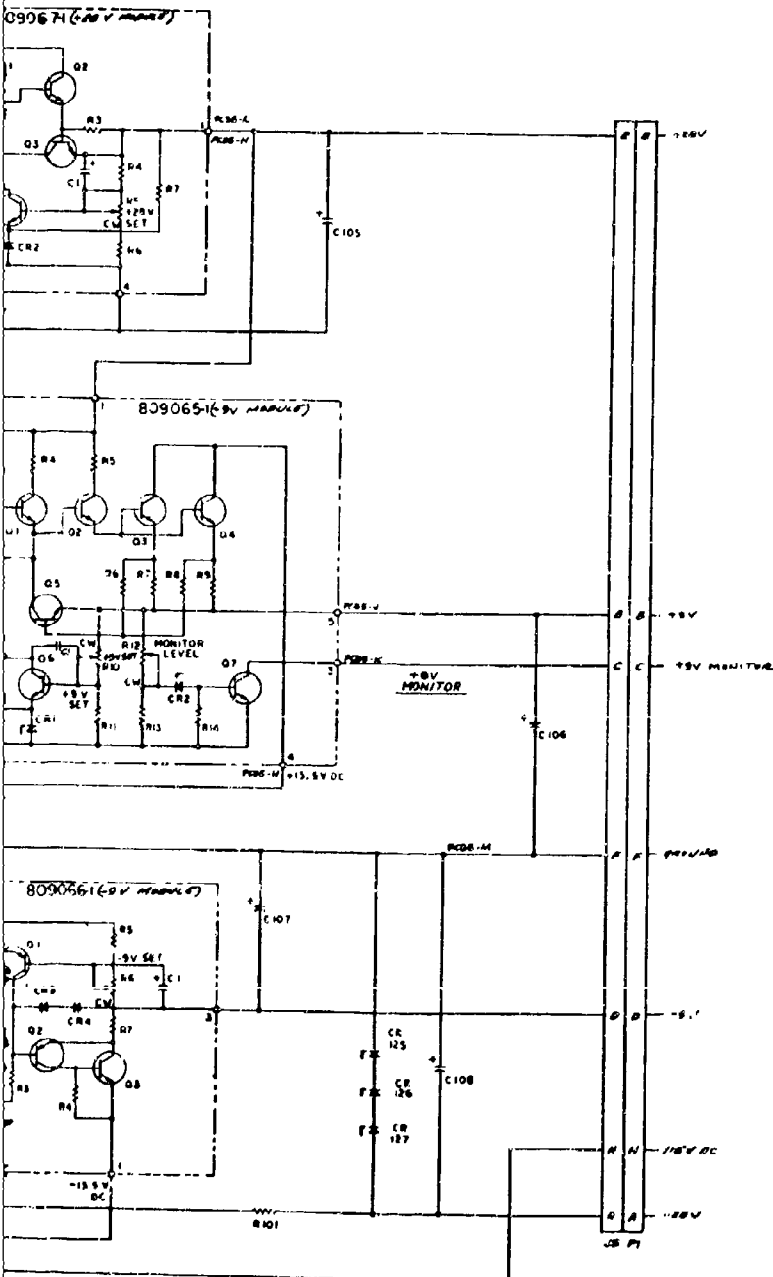

# 809067 - +28 V. CIRCUITS

Q1 - 2N910  
Q2 - 2N2593  
Q3 - 2N751  
Q4 - 2N2222

CR1 - 1036 D  
CR2 - IN3514

C1 - 15  $\mu$ F

R1 - 2.5 K 1/2 W RS-1A  
R2 - 3.9 K 1/2 W RS-1A  
R3 - 1.5 K 1/2 W RS-1A  
R4 - 4.7 K 1/2 W RS-1A  
R5 - 20 K POT  
R6 - 1.5 K 1/2 W RS-1A  
R7 - 6.2 K 1/2 W RS-1A

PA 56947 HEAT SINK

# 809065 - +9 V. CIRCUITS

Q1 - 2N2222  
Q2 - 2N2222  
Q3 - 2N2222  
Q4 - 2N2222  
Q5 - 2N2222  
Q6 - 2N2222  
Q7 - 2N2222

CR1 - IN3514  
CR2 - IN3514

C1 - 100  $\mu$ F 50 VDC

R1 - 2.2 K 1/2 W RS-1A  
R2 - 4.7 K 1/2 W RS-1A  
R3 - 10 K 1/2 W RS-1A  
R4 - 4.7 K 1/2 W RS-1A  
R5 - 200  $\Omega$  1/2 W RS-1A  
R6 - 100  $\Omega$  1/2 W RS-1A  
R7 - 0.75  $\Omega$  1/2 W RS-1A  
R8 - 100  $\Omega$  1/2 W RS-1A  
R9 - 0.75  $\Omega$  1/2 W RS-1A  
R10 - 100  $\Omega$  1/2 W RS-1A  
R11 - 1.5 K 1/2 W RS-1A  
R12 - 1.5 K 1/2 W RS-1A  
R13 - 1.5 K 1/2 W RS-1A  
R14 - 1.5 K 1/2 W RS-1A

TX BP-03 038-1 DISSIPATOR  
TX BP-03 037-1 DISSIPATOR  
PA 56946 MOUNTING PLATE

# 809066 - -9 V. CIRCUITS

Q1 - 2N2207  
Q2 - 2N2207  
Q3 - 2N2207

CR1 - 1010 A  
CR2 - IN3514  
CR3 - IN3514  
CR4 - IN3514

C1 - 0.15  $\mu$ F

R1 - 2 K 1/2 W RS-1A  
R2 - 2.2 K 1/2 W RS-1A  
R3 - 4.7 K 1/2 W RS-1A  
R4 - 1 K 1/2 W RS-1A  
R5 - 1.1 K 1/2 W RS-1A  
R6 - 300  $\Omega$  1/2 W RS-1A  
R7 - 1.5 K 1/2 W RS-1A

# INTER-CONNECTING CIRCUITRY

T1 - TRANSFORMER, POWER

CR101 - IN3758

CR102 - IN3758

CR103 - IN3758

CR104 - IN3758

CR105 - IN3758

CR106 - IN3758

CR107 - IN3758

CR108 - IN3758

CR109 - IN3758

CR110 - IN3758

CR111 - IN3758

CR112 - IN3758

CR113 - IN3758

CR114 - IN3758

CR115 - IN3758

CR116 - IN3758

CR117 - IN3758

CR118 - IN3758

CR119 - IN3758

CR120 - IN3758

CR121 - IN3758

CR122 - IN3758

CR123 - IN3758

CR124 - IN3758

CR125 - IN3758

CR126 - IN3758

CR127 - IN3758

CR128 - IN3758

CR129 - IN3758

CR130 - IN3758

CR131 - IN3758

CR132 - IN3758

CR133 - IN3758

CR134 - IN3758

CR135 - IN3758

CR136 - IN3758

CR137 - IN3758

CR138 - IN3758

CR139 - IN3758

CR140 - IN3758

CR141 - IN3758

CR142 - IN3758

CR143 - IN3758

CR144 - IN3758

CR145 - IN3758

CR146 - IN3758

CR147 - IN3758

CR148 - IN3758

CR149 - IN3758

CR150 - IN3758

CR151 - IN3758

CR152 - IN3758

CR153 - IN3758

CR154 - IN3758


CR155 - IN3758

CR156 - IN3758

CR157 - IN3758

CR158 - IN3758




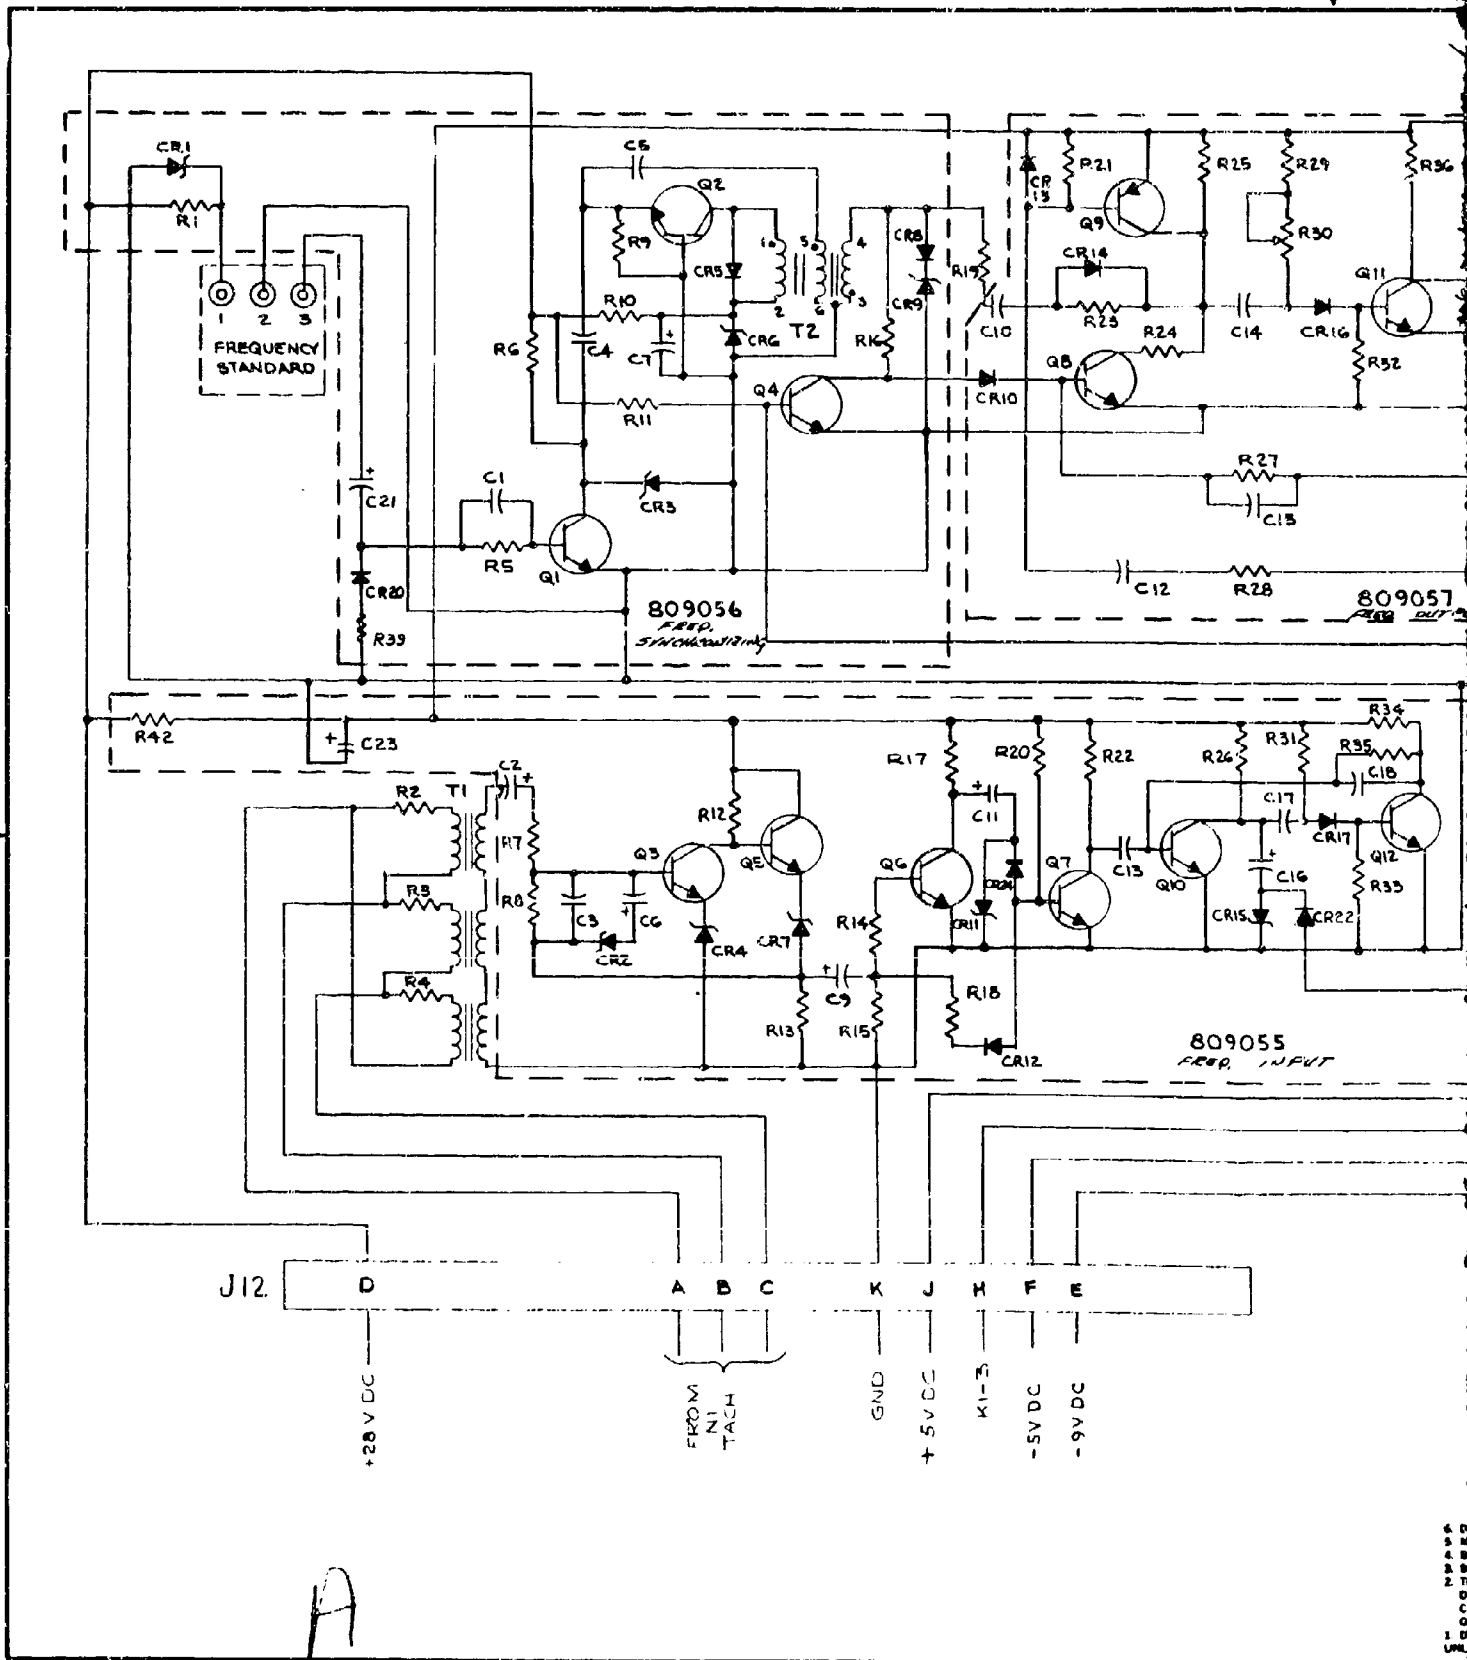


This drawing contains designs and other information which are the property of THE QUALITY CORPORATION. Except for rights expressly granted by contract to the United States Government, this drawing, any part, in whole or in part, be duplicated or distributed or used in manufacture of the part without the express written permission of THE QUALITY CORPORATION.

# REVISIONS

SYM	DESCRIPTION	DATE	APPROVED

R9C

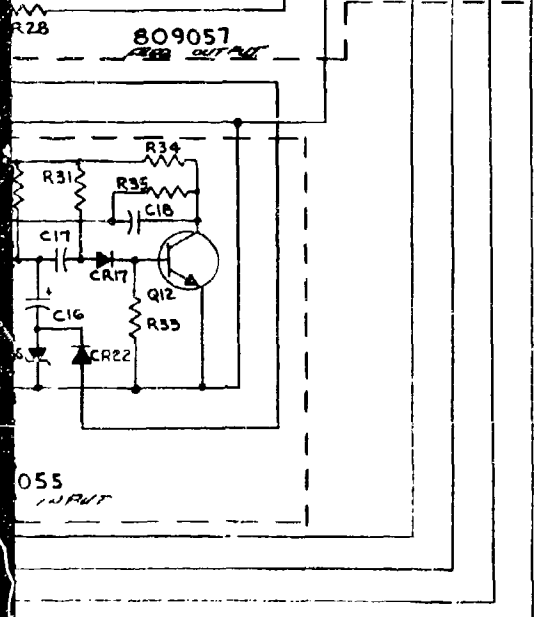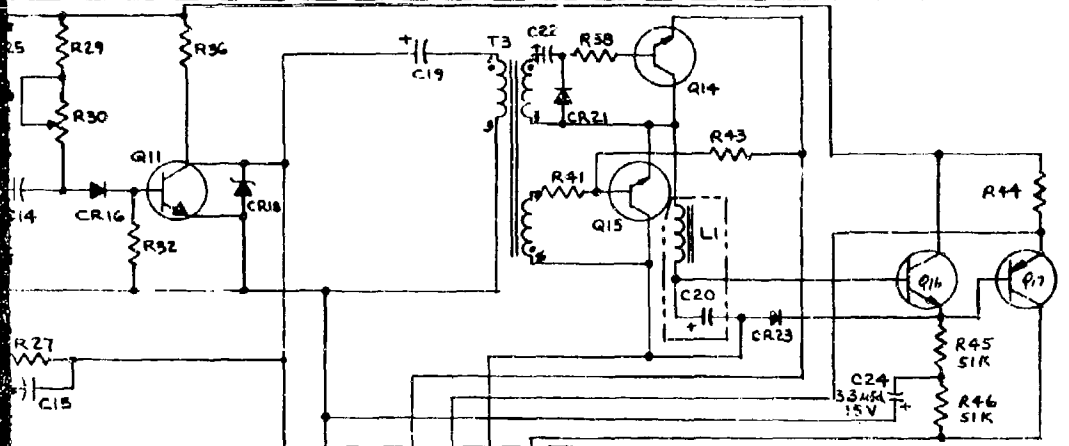


## COMPONENT LIST


C1 = 470 pfd CT100-471M	CR16 = 1N457	R9 = RL07AD102J (1K)
C2 = 22 pfd 15V150DCE6*005B2	CR17 = 1N457	R10 = MS35043-111 (10K)
C3 = .001 pfd CT100-102M	CR18 = 1N758A	R11 = RL07AD513J (51K)
C4 = .0022 pfd CT10	<del>CR19 = 1N752A</del>	R12 = RL07AD203J (20K)
C5 = .0022 Mfd CT10	CR20 = 1N457	R13 = MS35043-98 (3K)
C6 = 1 mfd 85V 150D105K0015A2	CR21 = 1N457	R14 = RL07AD202J (2K)
C7 = 1 mfd 35V 150D105K0020A2	CR22 = 1N457	R15 = RL07AD302J (3K)
<del>C8 = 3.3 mfd 15V150D226*0015B2</del>	CR23 =	R16 = RL07AD202J (2K)
C9 = 22 pfd 15V150D226*0015B2	CR24 = 1N457	R17 = MS35043-111 (10K)
C10 = 470 pfd CT100-471M	L1 = 14758	R18 = RL07AD102J (1K)
C11 = .058 mfd 100V63K0015A2		R19 = MS35043-111
C12 = .0047 pfd CT10		R20 = RL07AD513J (51K)
C13 = .0047 pfd 35VDC CT10	Q1 = 2N2221	R21 = RL07AD204J (200K)
C14 = .010 mfd 200V BALCO TYPE P35	Q2 = 2N2221	R22 = MS35043-111 (10K)
C15 = 100 pfd CT100-101M	Q3 = 2N2221	R23 = MS35043-122 (30K)
C16 = 1 mfd 35V 150D105K0035A2	Q4 = 2N2221	R24 = RN60E1001F (1K)
C17 = .01 mfd CT100	Q5 = 2N2221	R25 = RN60E1002F (10K)
C18 = 100 pfd CT100-101M	Q6 = 2N2221	R26 = MS35043-98 (3K)
C19 = .02 mfd 150D105K0015A2	Q7 = 2N2221	R27 = RL07AD513J (51K)
C20 = 10 mfd 10V150D06C2070F2	Q8 = 2N2221	R28 = RL07AD113J (11K)
C21 = 1 mfd 35VDC	Q9 = 2N2221	R29 = RN60E2322F ( )
C22 = 6.8 mfd 6VDC CS13AB68K	Q10 = 2N2221	R30 = 50-2-1-502 (5K)
C23 = 6.8 mfd 35VDC CS13AF68K	Q11 = 2N2221	R31 = RL07AD513J (51K)
C24 = 3.3 mfd 15V	Q12 = 2N2221	R32 = RL07AD204J (200K)
CR1 = 1N759A	Q13 = 2N2221	R33 = RL07AD104J (100K)
CR2 = 1N752A	<del>Q14 = 2N2221</del>	R34 = MS35043-104 (5.1K)
CR3 = 1N752A	Q14 = 2N2432	R35 = RL07AD513J (51K)
CR4 = 1N752A	Q15 = 2N2432	R36 = MS35043-99 (2.4K)
CR5 = 1N645	Q16 = 2N2221	<del>R37 = MS35043-104 (5.1K)</del>
CR6 = 1N758A	Q17 = 2N2907	R38 = RL07AD392J (3.9K)
CR7 = 1N752A		R39 = RL07AD103J (10K)
CR8 = 1N914A	R1 = MS35043-94 (2K)	R40 = RL07AD512J (5.1K)
CR9 = 1N749A	R2 = 621-002-9171 (2000-3)3W	R41 = RL07AD392J (3.9K)
CR10 = 1N914A	R3 = 621-002-9171	R42 = MS35043-10 (200K)
CR11 = 1N749A	R4 = 621-002-9171	<del>R43 = RL07AD203J (20K)</del>
CR12 = 1N457	R5 = RL07AD103J (10K)	<del>R44 = RL07AD513J (51K)</del>
CR13 = 1N457	R6 = MS35043-104 (5.1K)	
CR14 = 1N914A	R7 = RL07AD103J (10K)	T1 = 14735
CR15 = 1N749A	R8 = RL07AD104J (100K)	T2 = PIP-3 (UTC)
		T3 = DIT 278 (UTC)

QTY	REQD	ITEM NO.	PART NO.	SYM	DESCRIPTION	CODE	MATERIAL AND SPECIFICATION
<p>ASSY</p> <p>LIST OF MATERIAL</p> <p>APPROVED BY: <i>[Signature]</i> DATE: 12/10/61</p> <p>WILLING DIAGRAM SCHEMATIC</p> <p>FREQUENCY TO DIRECT CURRENT</p> <p>70210 D X 809051</p> <p>SCALE: SHEET</p>							


6. DIMENSION: MITS HELD AFTER PLATING.  
 5. MACHINED: FILET RADI: .001-.003  
 4. SURF: CONTROL PER AIR SPEC. 90-483  
 3. SURFACE: ROUGHNESS PER MM STD-20  
 2. TOLERANCES: ON:  
 DIMENSIONS: ± .01  
 CHAMFER ANGLES: ± 5°  
 OTHER ANGLES: ± 90°  
 1. DIMENSIONS: ARE IN INCHES.  
 UNLESS OTHERWISE SPECIFIED.

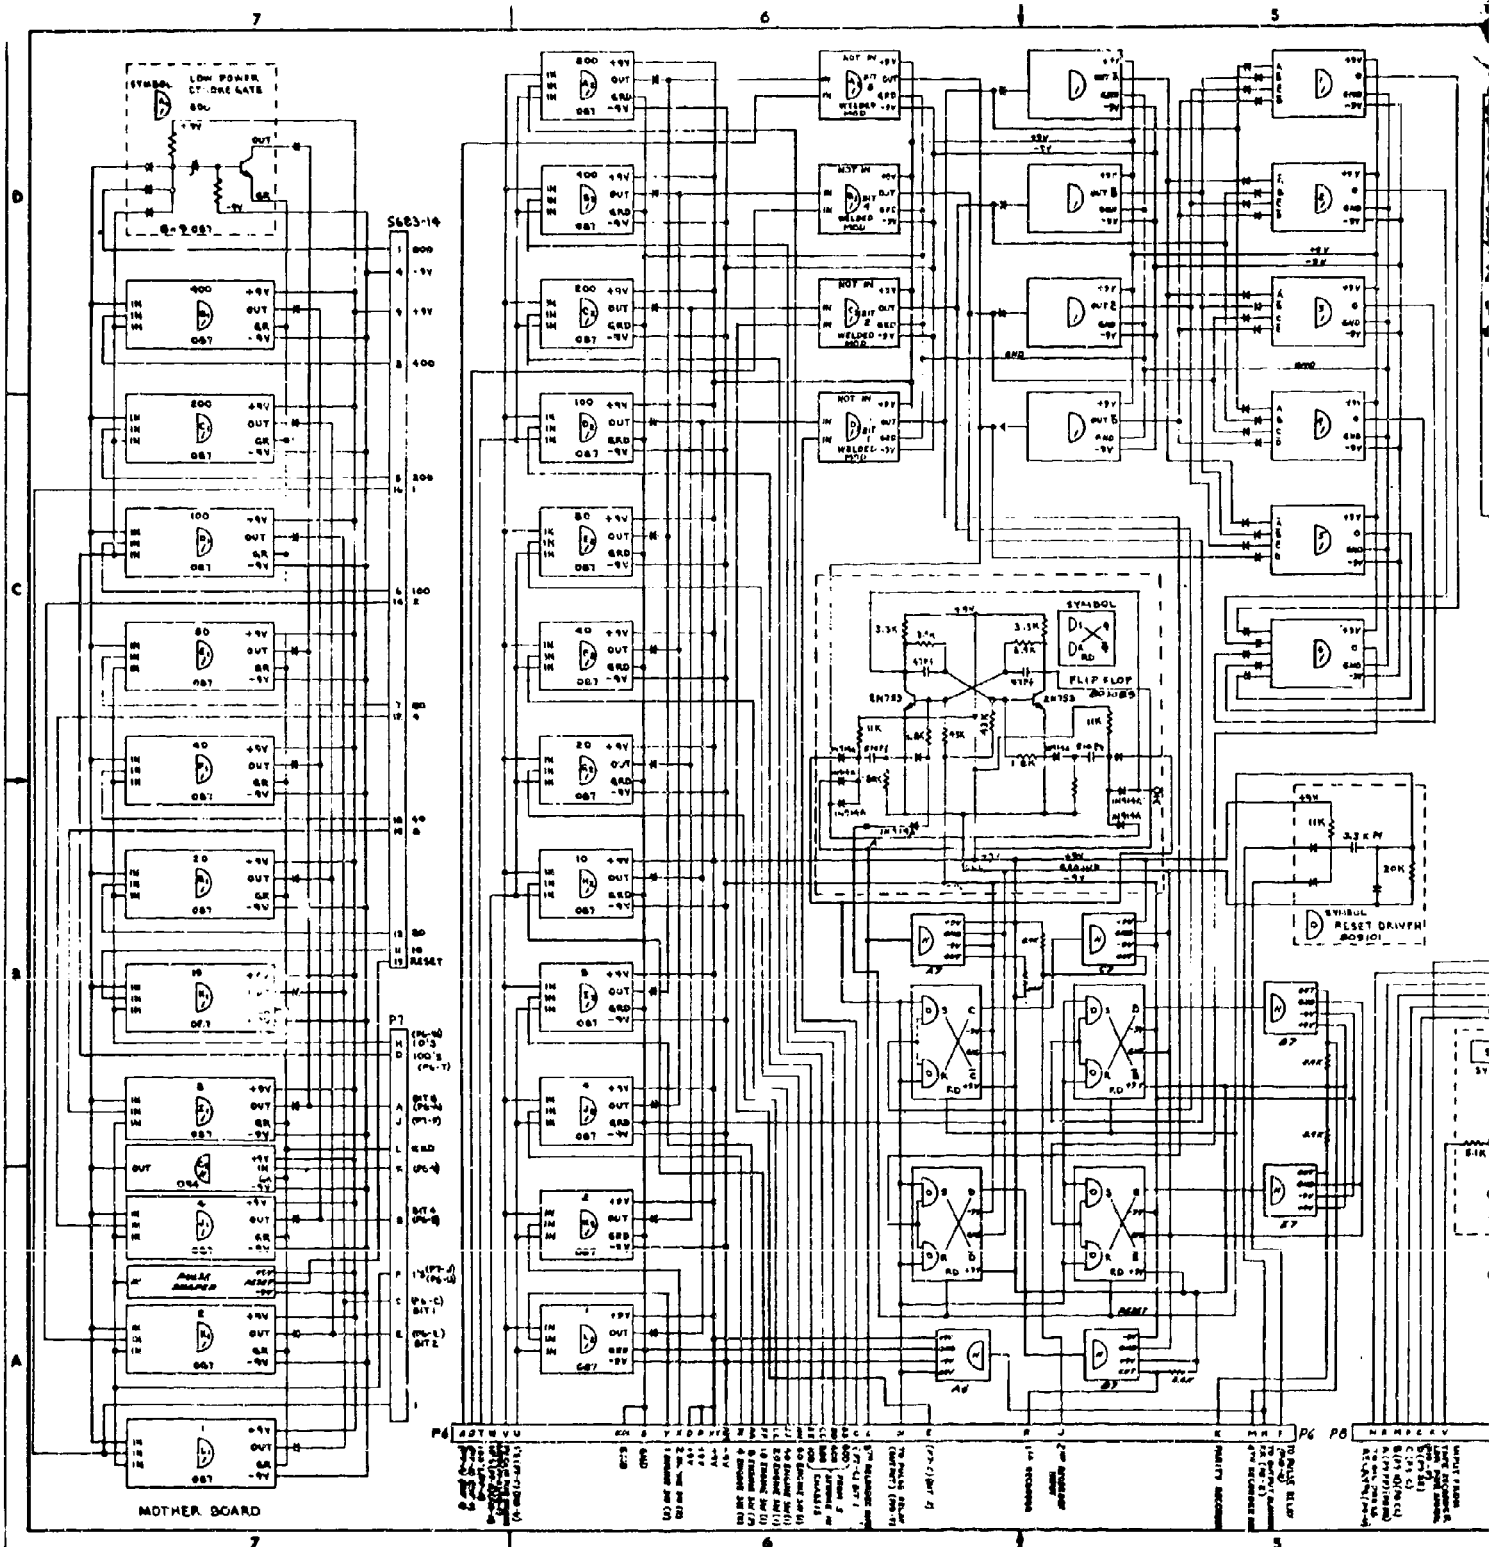

A

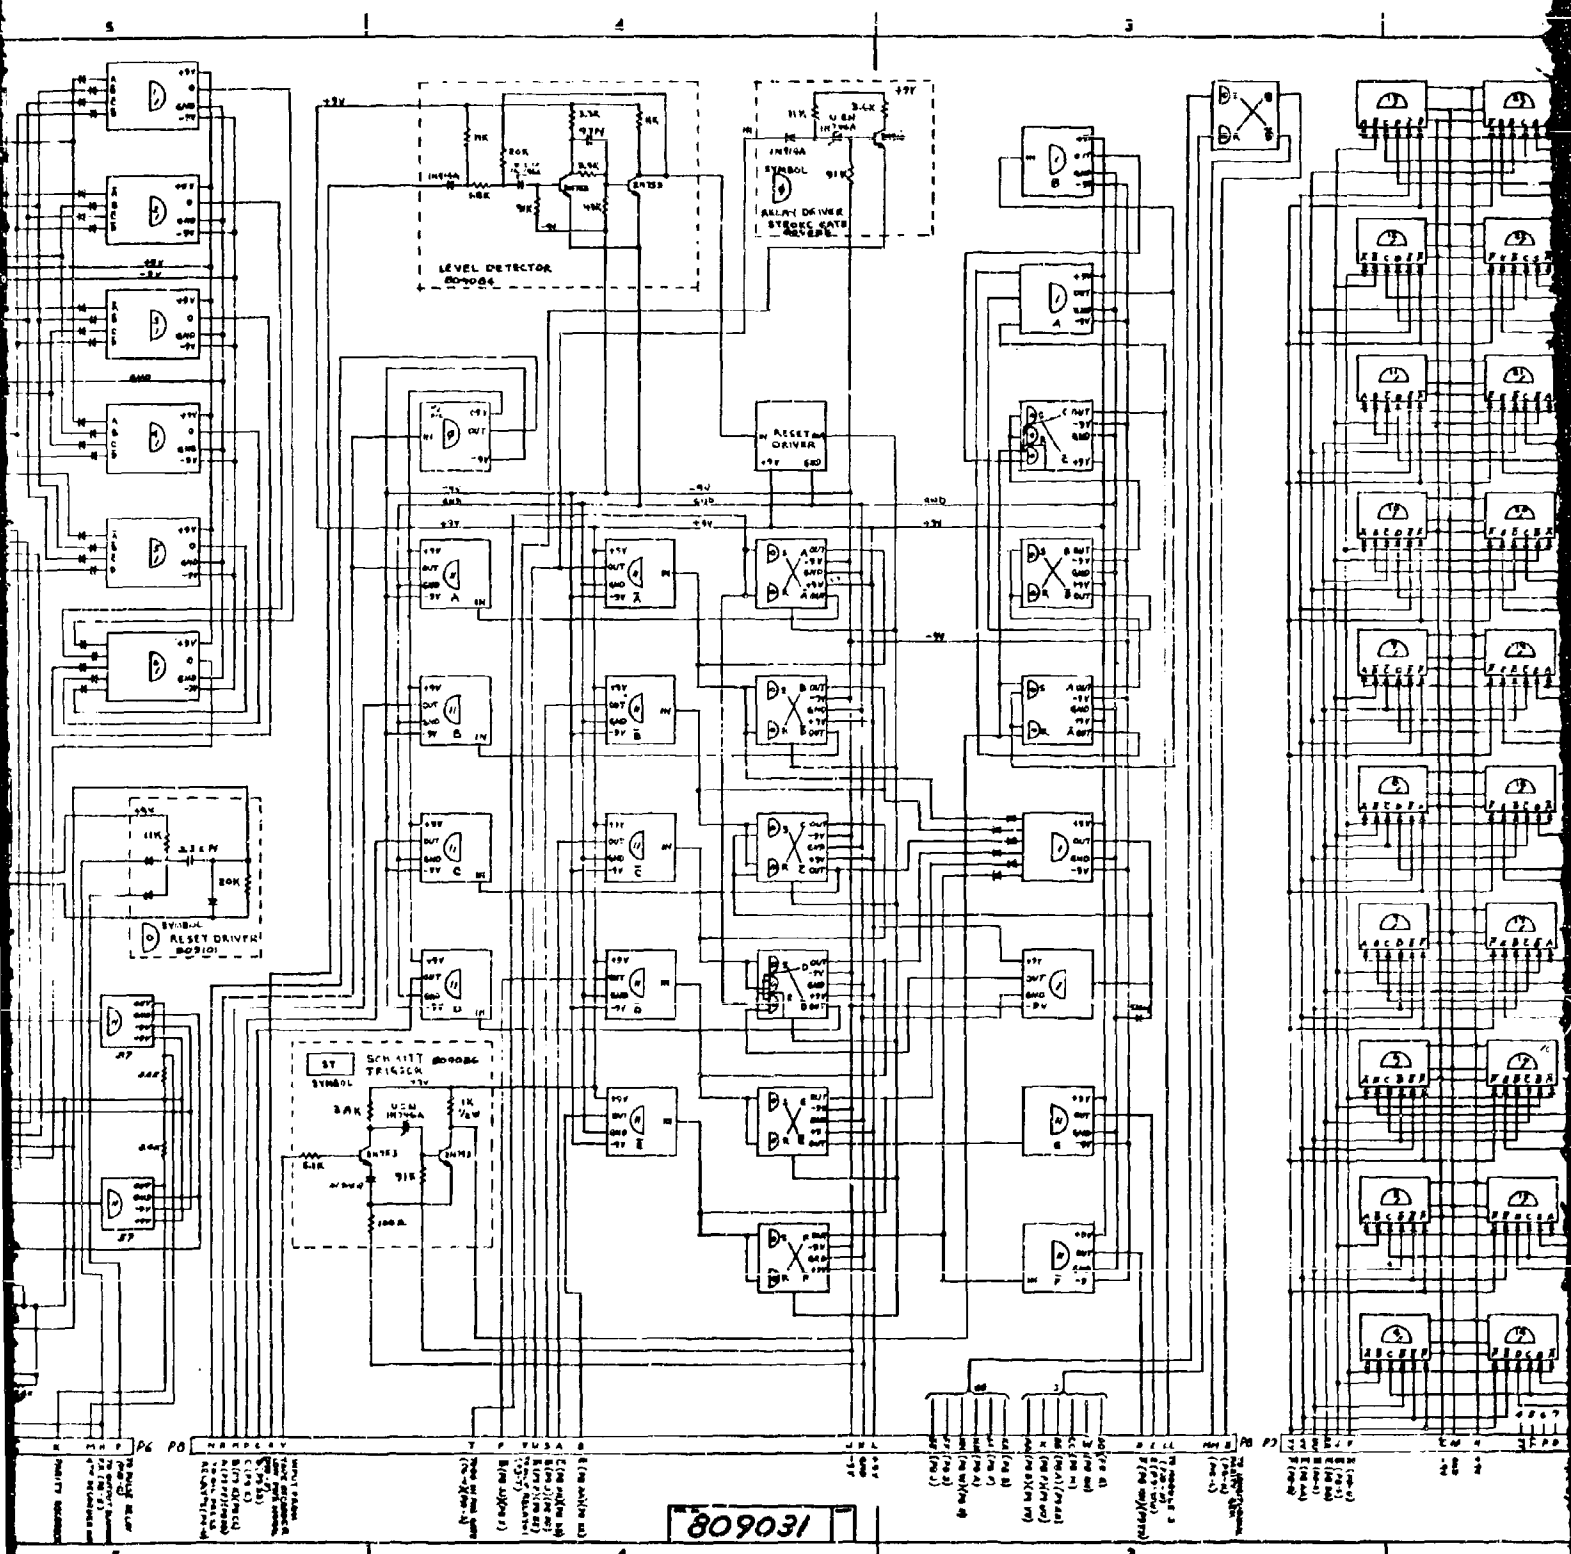

B

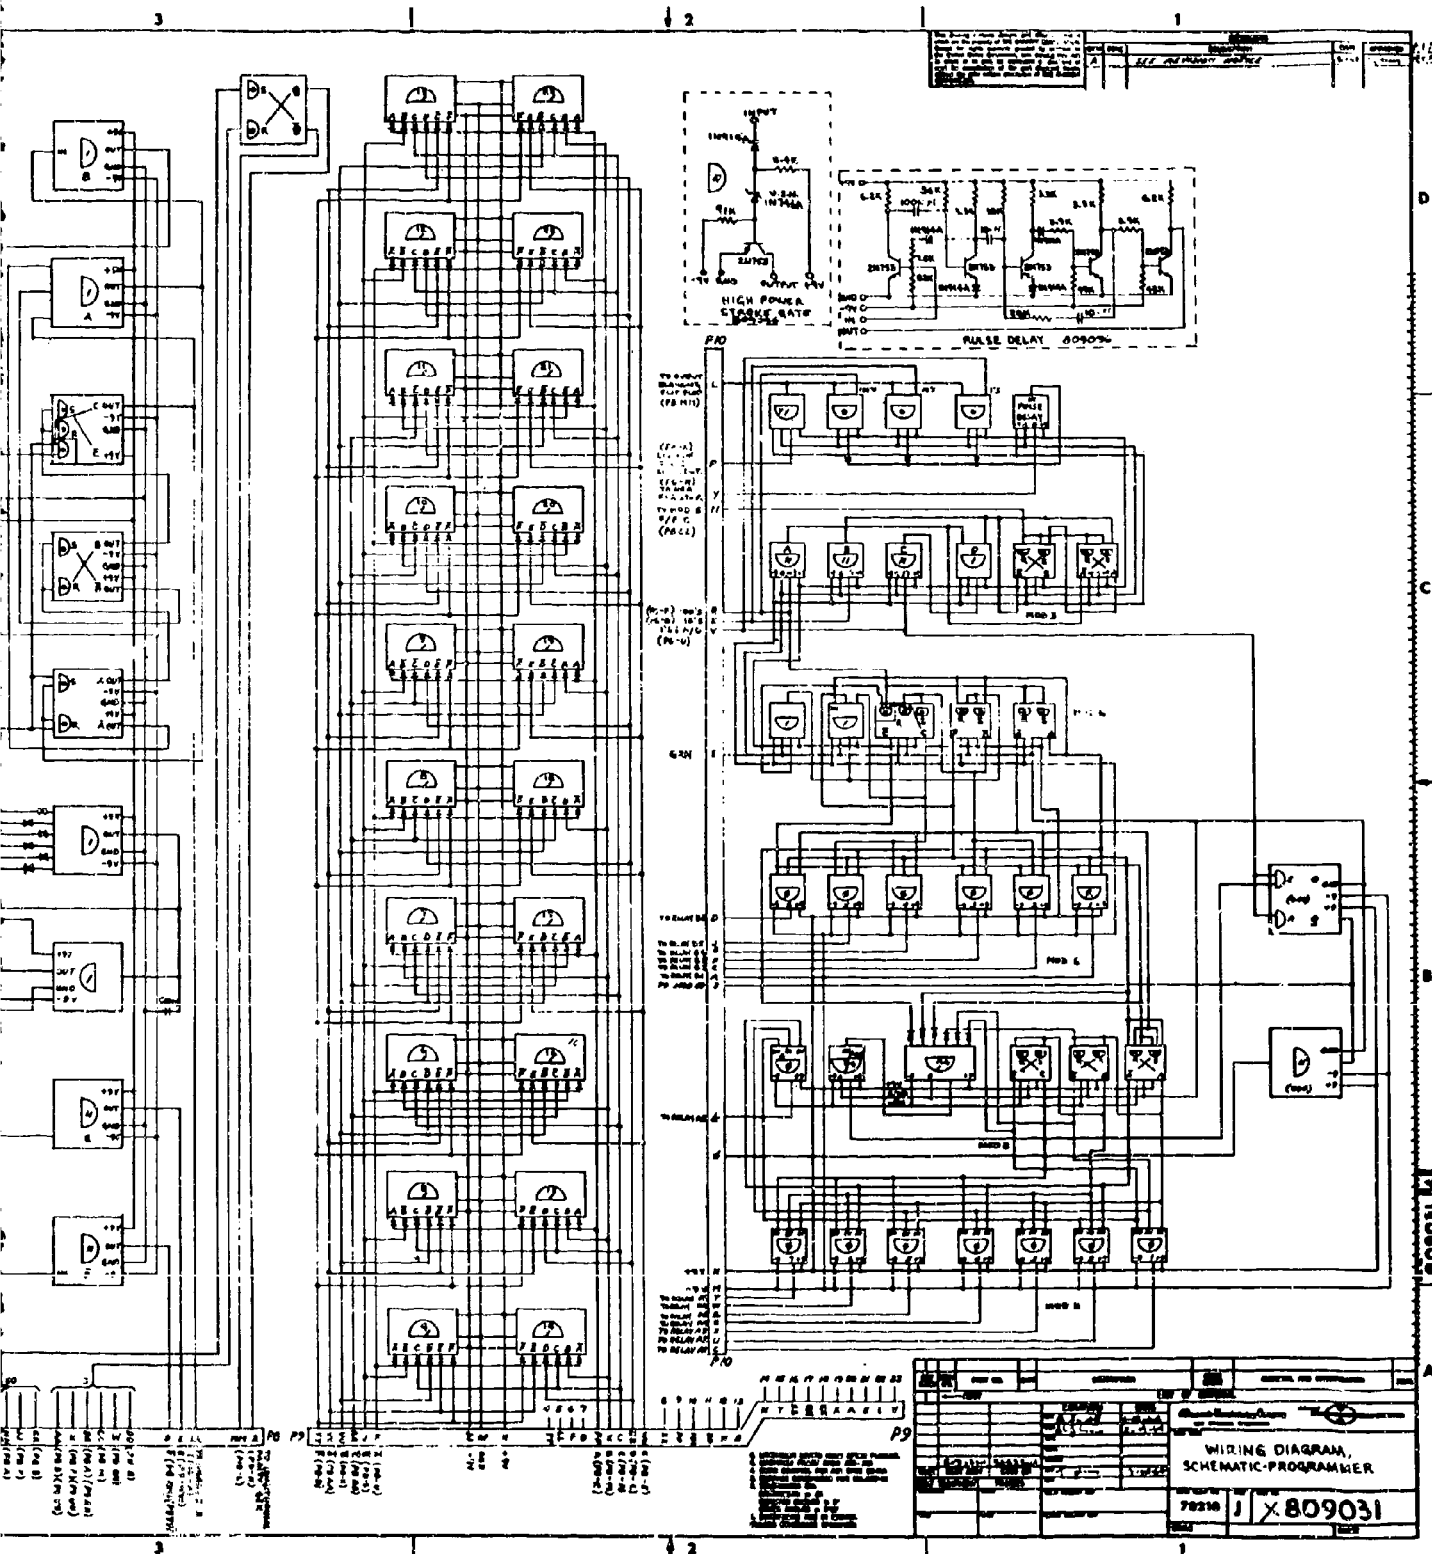

Schematic 898-308 for the Data Recorder System  
EMR-2, P/N 538956, is available from Elgin  
Research and Development, Division of Elgin  
National Watch Company, Elgin, Illinois,  
Drawing 898-308 Project 20898.

## APPENDIX II

### CIRCUIT SCHEMATICS FOR F-4C ENGINE ANALYZER SYSTEM

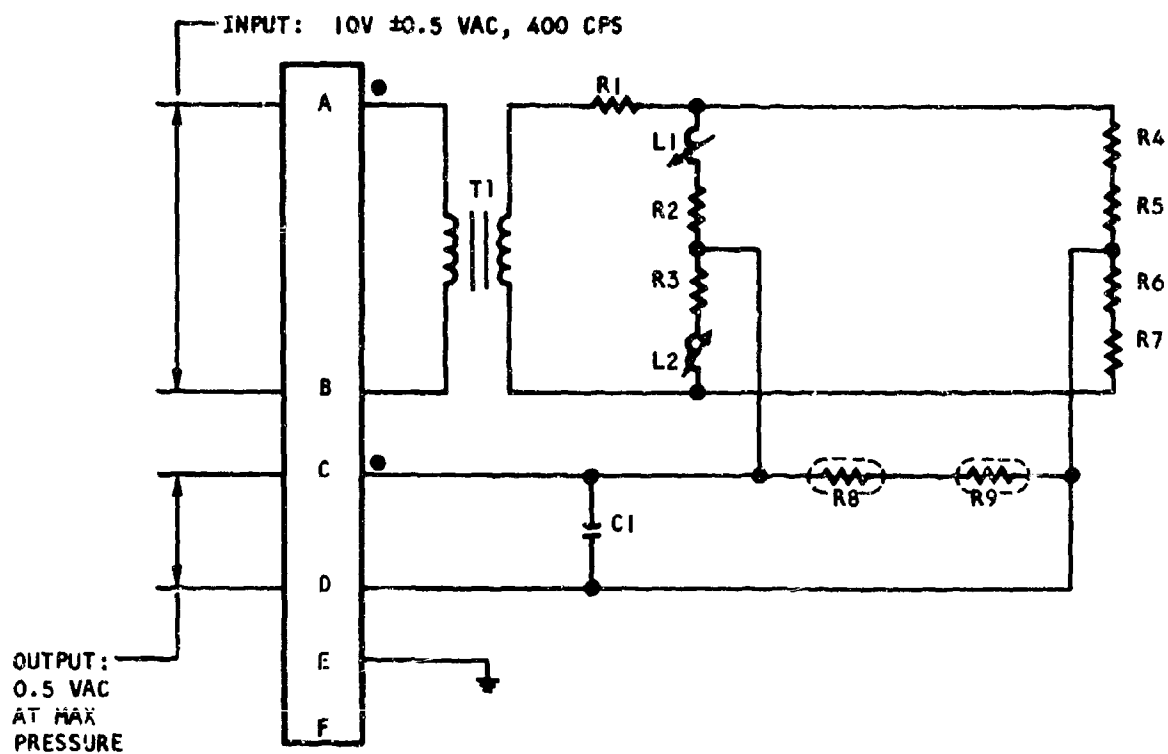


Figure 30. Compressor Discharge Pressure Transducer (P/N 538947-1) Circuit Schematic





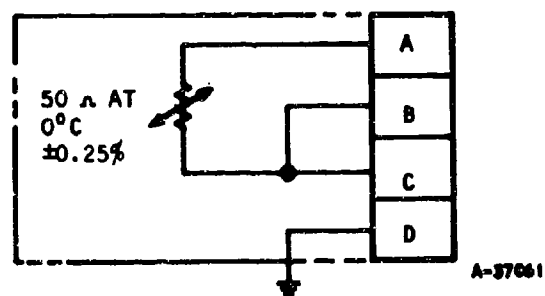


Figure 31. Compressor Discharge Temperature Transducer  
(P/N 538952) Circuit Schematic

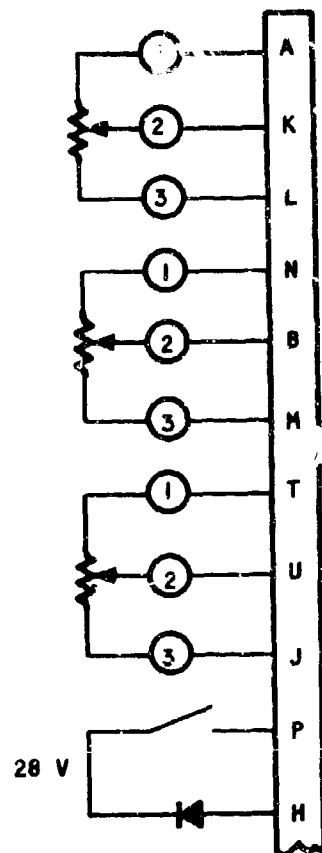

A-8707.8


Figure 32. Compressor Inlet Pressure Transducer (P/N 538362-1-1) Circuit Schematic

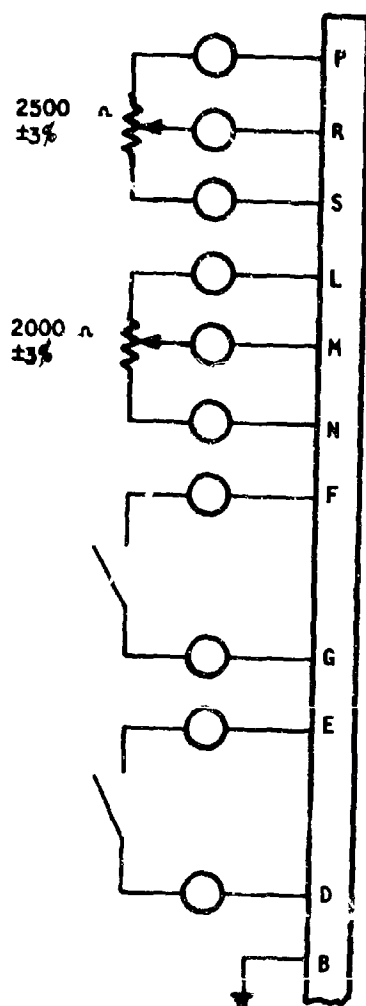

NOTE: Unit is a modified  
MS-24569-1 Indicator


A-37063

Figure 33. Exhaust Gas Temperature Transducer  
(P/N 538382) Circuit Schematic

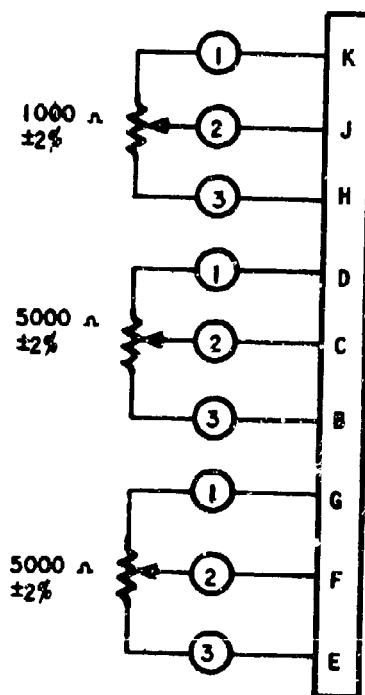


A-37834

Figure 34. Exhaust Nozzle Area Transducer (P/N 538440-i-i)  
Circuit Schematic

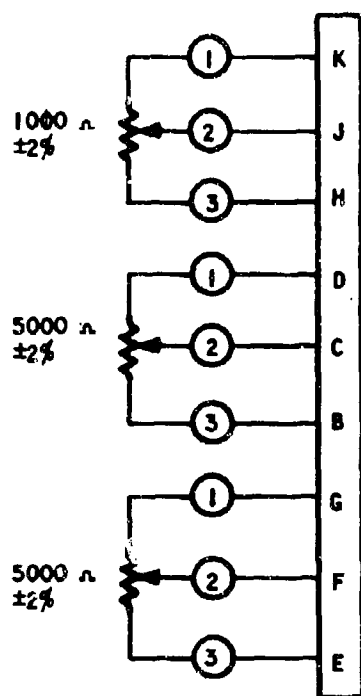

A-37884

Figure 35. Inlet Guide Vane Transducer (P/N 5384'2-1-1)  
Circuit Schematic

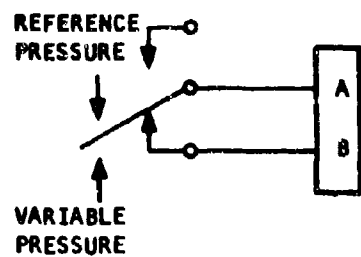

A-37067

Figure 36. Oil Pressure Switch (P/N 538957)  
Circuit Schematic


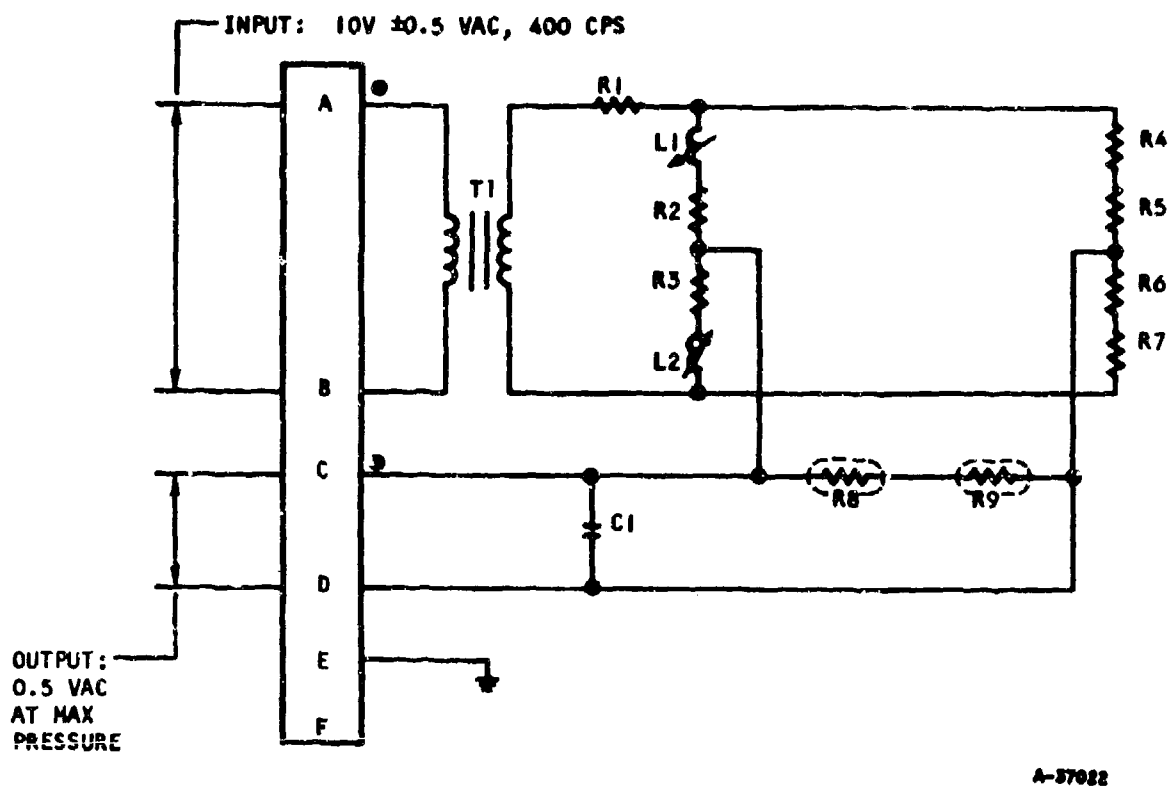



Figure 37. Oil Sump Pressure Transducer  
(P/N 538947-3) Circuit Schematic



A-37000

Figure 38. Oil Temperature Switch  
(P/N 538948) Circuit Schematic

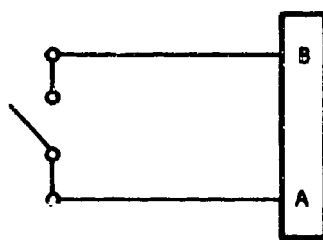

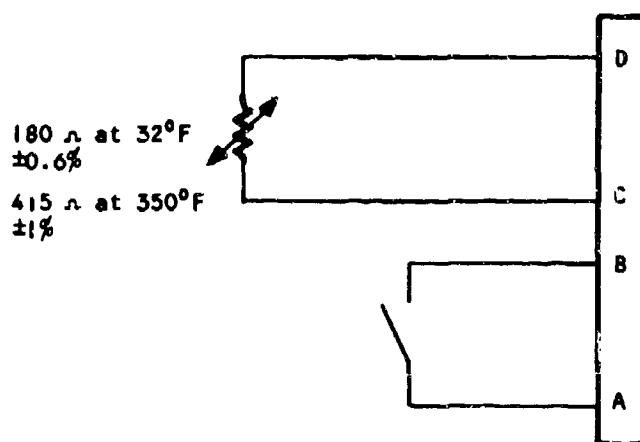

A-37086

Figure 39. Oil Temperature Transducer (P/N 202187-1)  
 Circuit Schematic


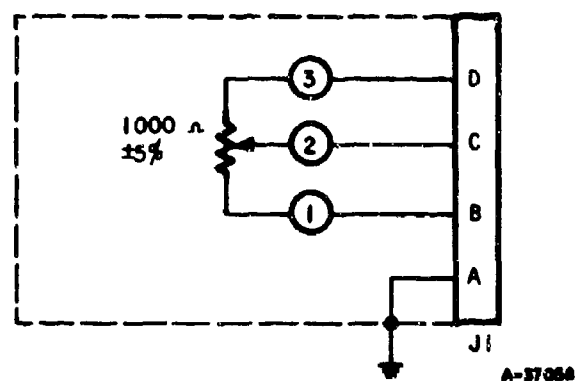


Figure 40. Power Level Angle Transducer  
(P/N 538444-1-1) Circuit Schematic




NOT REPRODUCIBLE

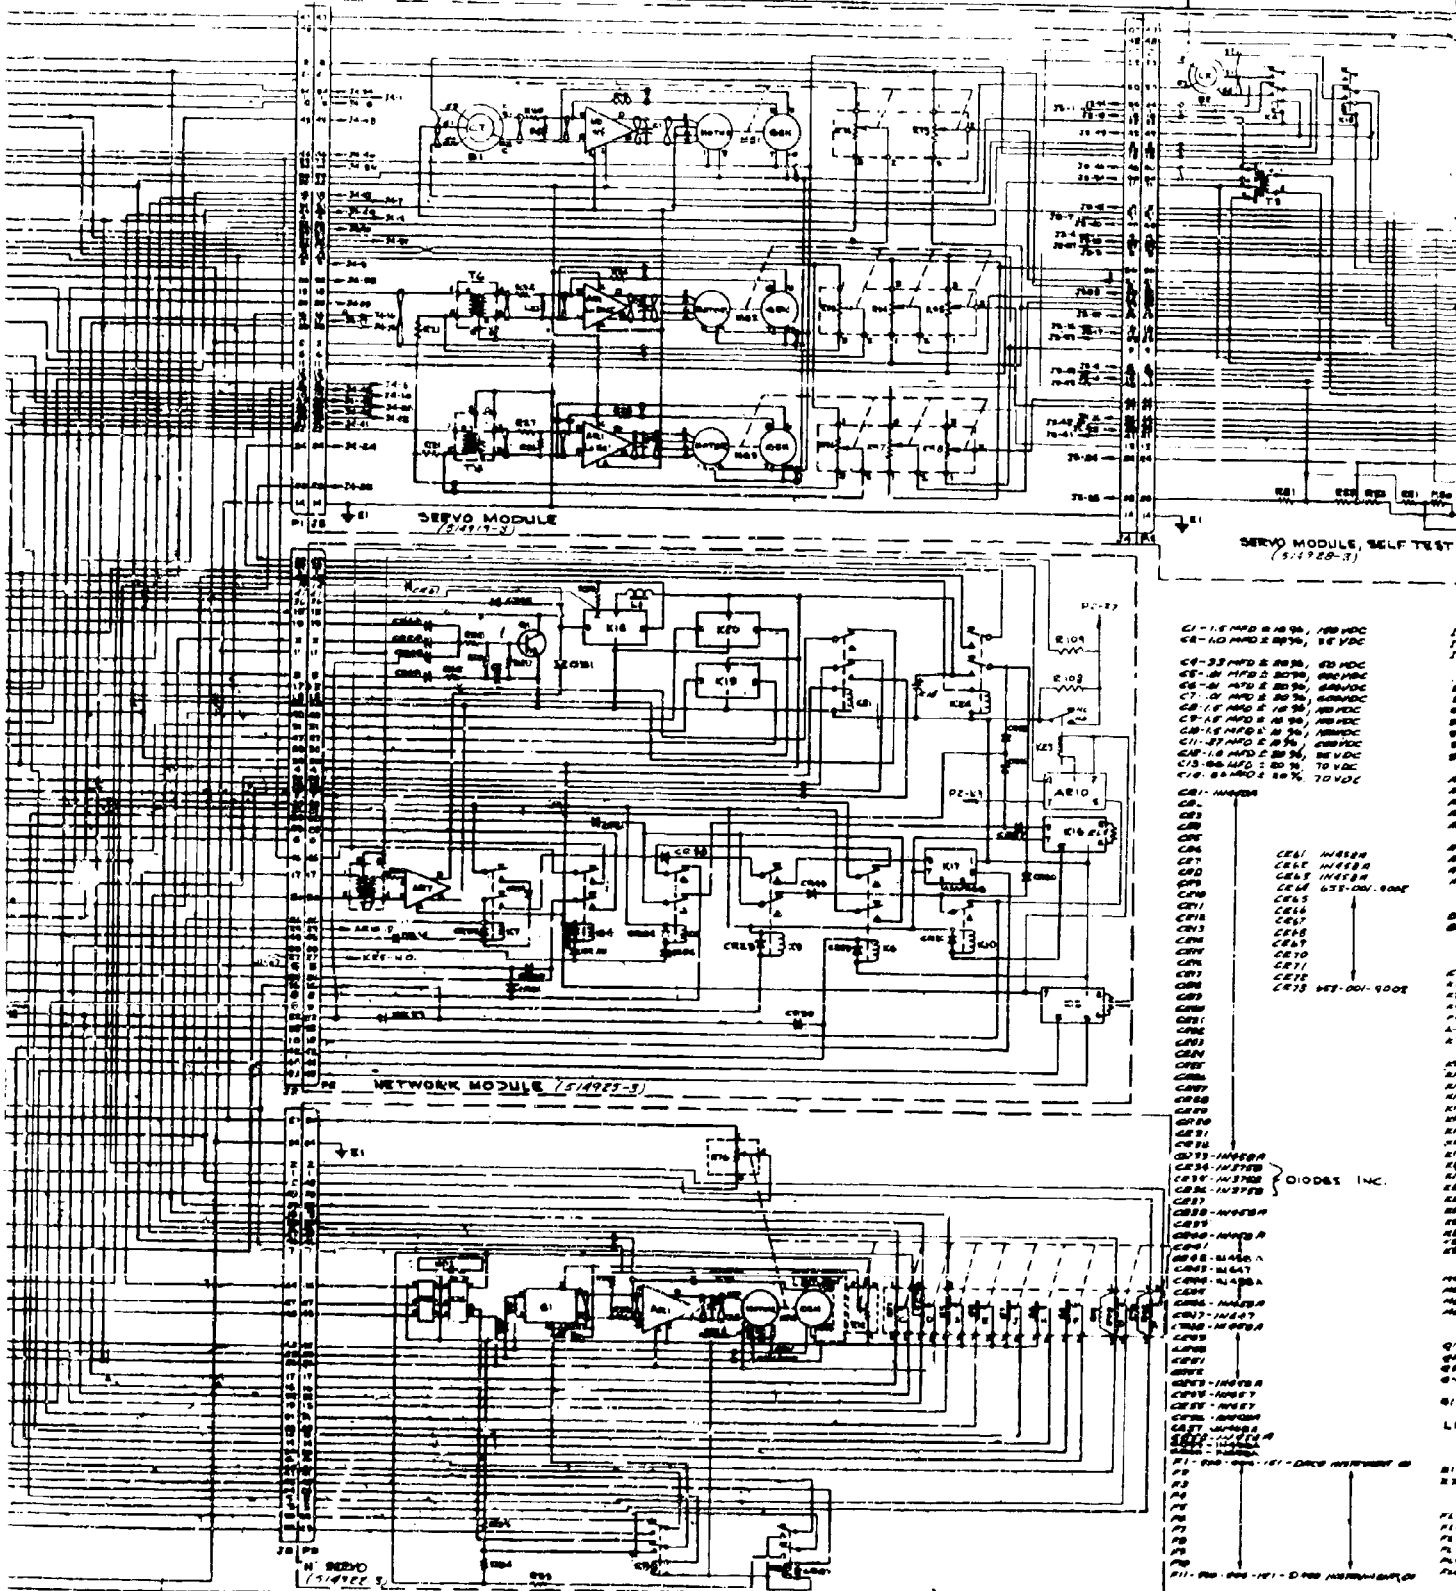

13

NOT REPRODUCIBLE

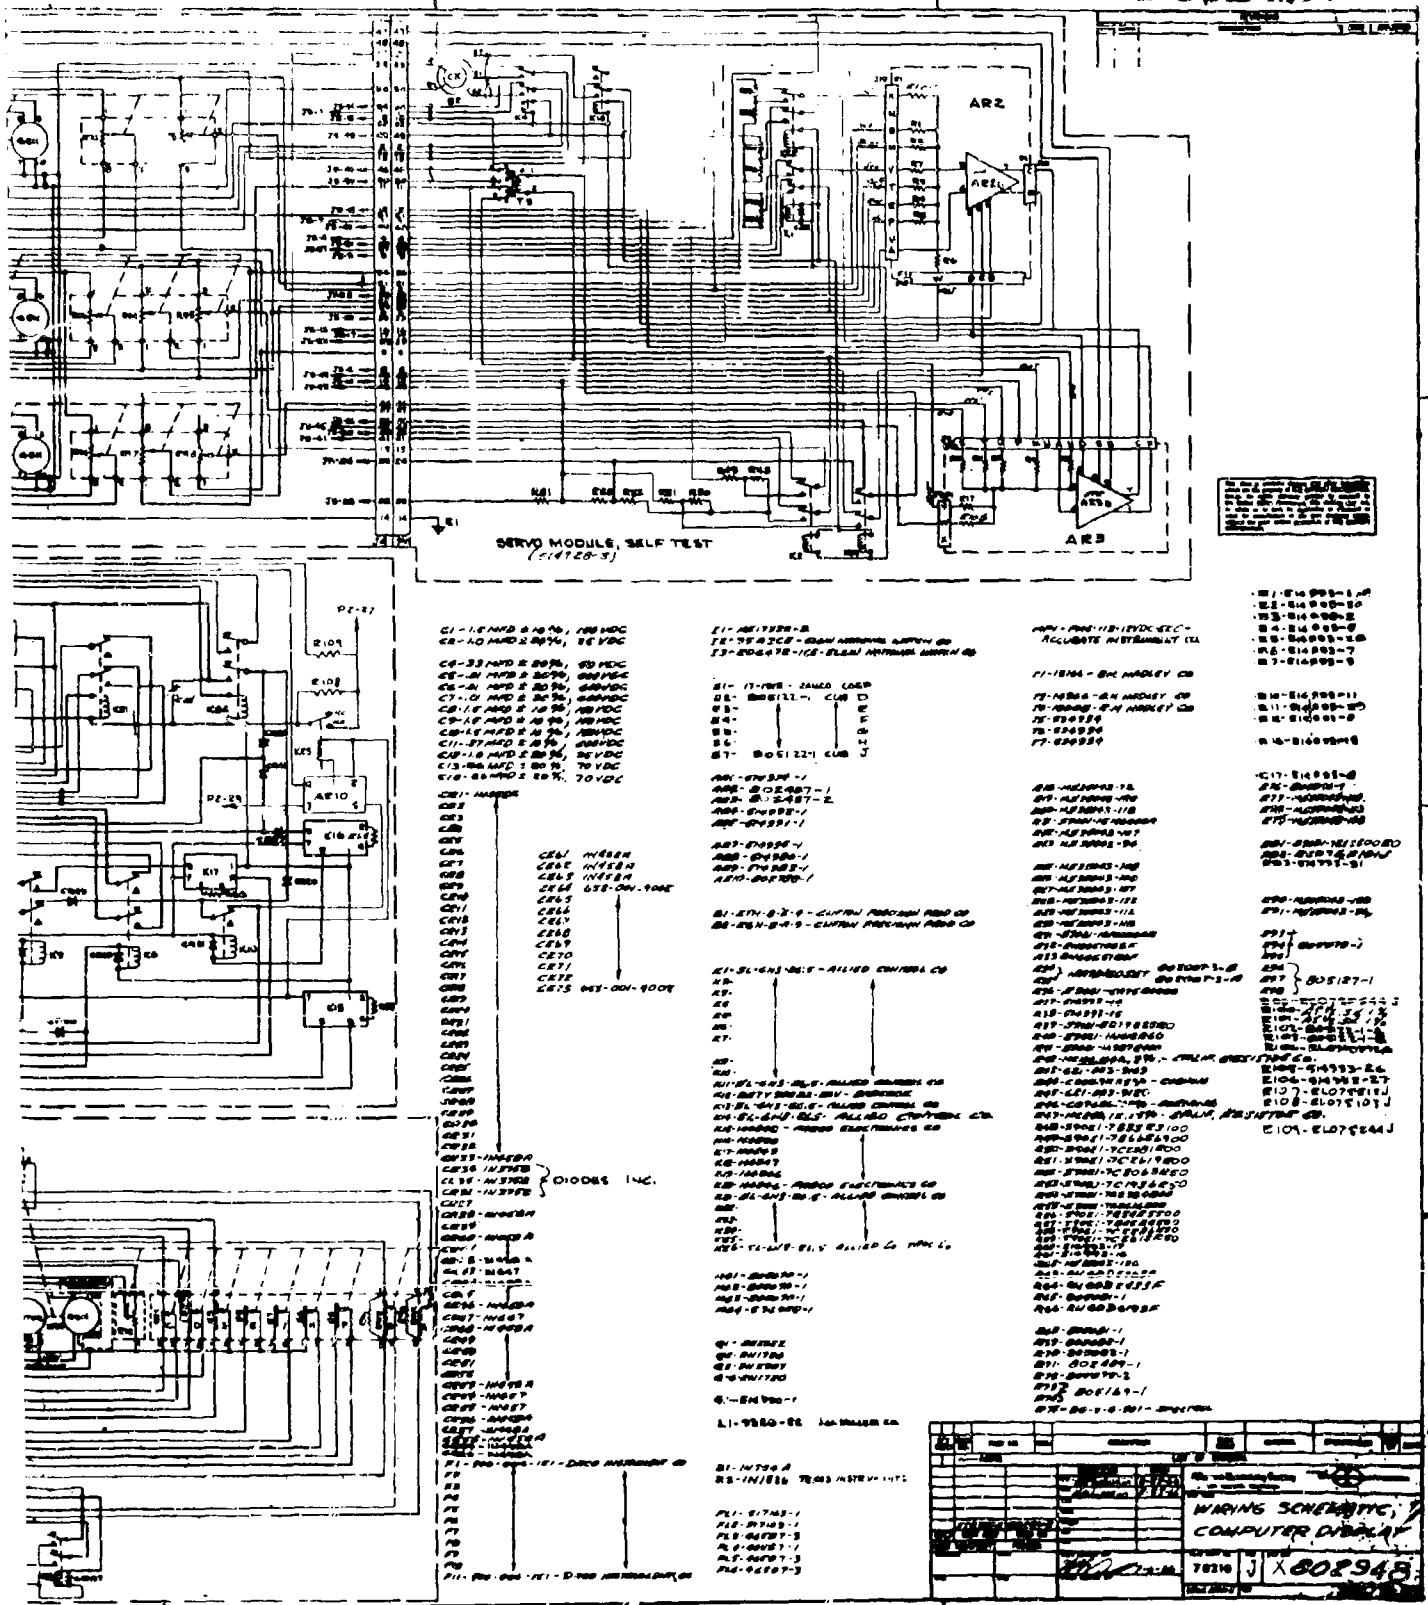

## 10

10



A

NOT REP.

NEB (Cont.)		
COUNT	PAGE NO.	REMARKS
608	Page No. 50	NO OF PAGES FOR DISTRIBUTION AND FOR RECORDING PURPOSE
637	Page No. 51	
638	Page No. 52	NO. SUPPLY CODE NO. 111

A-9 COMPONENT LIST		
NUMBER	PARTY AND	REMARKS
1	COVER SHEET	
2	TABLE OF CONTENTS	
3	COVER LETTER	REF BY MEMPHIS, MISSISSIPPI, MS.
4	COVER LETTER	REF. SUPPLY CONTRACT
5	COVER LETTER	
6	COVER LETTER	
7	COVER LETTER	
8	COVER LETTER	
9	COVER LETTER	
10	COVER LETTER	
11	COVER LETTER	
12	COVER LETTER	
13	COVER LETTER	
14	COVER LETTER	
15	COVER LETTER	
16	COVER LETTER	
17	COVER LETTER	
18	COVER LETTER	
19	COVER LETTER	
20	COVER LETTER	
21	COVER LETTER	
22	COVER LETTER	
23	COVER LETTER	
24	COVER LETTER	
25	COVER LETTER	
26	COVER LETTER	
27	COVER LETTER	
28	COVER LETTER	
29	COVER LETTER	
30	COVER LETTER	
31	COVER LETTER	
32	COVER LETTER	
33	COVER LETTER	
34	COVER LETTER	
35	COVER LETTER	
36	COVER LETTER	
37	COVER LETTER	
38	COVER LETTER	
39	COVER LETTER	
40	COVER LETTER	
41	COVER LETTER	
42	COVER LETTER	
43	COVER LETTER	
44	COVER LETTER	
45	COVER LETTER	
46	COVER LETTER	
47	COVER LETTER	
48	COVER LETTER	
49	COVER LETTER	
50	COVER LETTER	
51	COVER LETTER	
52	COVER LETTER	
53	COVER LETTER	
54	COVER LETTER	
55	COVER LETTER	
56	COVER LETTER	
57	COVER LETTER	
58	COVER LETTER	
59	COVER LETTER	
60	COVER LETTER	
61	COVER LETTER	
62	COVER LETTER	
63	COVER LETTER	
64	COVER LETTER	
65	COVER LETTER	
66	COVER LETTER	
67	COVER LETTER	
68	COVER LETTER	
69	COVER LETTER	
70	COVER LETTER	
71	COVER LETTER	
72	COVER LETTER	
73	COVER LETTER	
74	COVER LETTER	
75	COVER LETTER	
76	COVER LETTER	
77	COVER LETTER	
78	COVER LETTER	
79	COVER LETTER	
80	COVER LETTER	
81	COVER LETTER	
82	COVER LETTER	
83	COVER LETTER	
84	COVER LETTER	
85	COVER LETTER	
86	COVER LETTER	
87	COVER LETTER	
88	COVER LETTER	
89	COVER LETTER	
90	COVER LETTER	
91	COVER LETTER	
92	COVER LETTER	
93	COVER LETTER	
94	COVER LETTER	
95	COVER LETTER	
96	COVER LETTER	
97	COVER LETTER	
98	COVER LETTER	
99	COVER LETTER	
100	COVER LETTER	

91 COMPONENT LIST		
COMPONENT	PART NO.	REMARKS
1	100-100-100	
2	100-100-100	
3	100-100-100	
4	100-100-100	
5	100-100-100	
6	100-100-100	
7	100-100-100	
8	100-100-100	
9	100-100-100	
10	100-100-100	
11	100-100-100	
12	100-100-100	
13	100-100-100	
14	100-100-100	
15	100-100-100	
16	100-100-100	
17	100-100-100	
18	100-100-100	
19	100-100-100	
20	100-100-100	
21	100-100-100	
22	100-100-100	
23	100-100-100	
24	100-100-100	
25	100-100-100	
26	100-100-100	
27	100-100-100	
28	100-100-100	
29	100-100-100	
30	100-100-100	
31	100-100-100	
32	100-100-100	
33	100-100-100	
34	100-100-100	
35	100-100-100	
36	100-100-100	
37	100-100-100	
38	100-100-100	
39	100-100-100	
40	100-100-100	
41	100-100-100	
42	100-100-100	
43	100-100-100	
44	100-100-100	
45	100-100-100	
46	100-100-100	
47	100-100-100	
48	100-100-100	
49	100-100-100	
50	100-100-100	
51	100-100-100	
52	100-100-100	
53	100-100-100	
54	100-100-100	
55	100-100-100	
56	100-100-100	
57	100-100-100	
58	100-100-100	
59	100-100-100	
60	100-100-100	
61	100-100-100	
62	100-100-100	
63	100-100-100	
64	100-100-100	
65	100-100-100	
66	100-100-100	
67	100-100-100	
68	100-100-100	
69	100-100-100	
70	100-100-100	
71	100-100-100	
72	100-100-100	
73	100-100-100	
74	100-100-100	
75	100-100-100	
76	100-100-100	
77	100-100-100	
78	100-100-100	
79	100-100-100	
80	100-100-100	
81	100-100-100	
82	100-100-100	
83	100-100-100	
84	100-100-100	
85	100-100-100	
86	100-100-100	
87	100-100-100	
88	100-100-100	
89	100-100-100	
90	100-100-100	
91	100-100-100	
92	100-100-100	
93	100-100-100	
94	100-100-100	
95	100-100-100	
96	100-100-100	
97	100-100-100	
98	100-100-100	
99	100-100-100	
100	100-100-100	

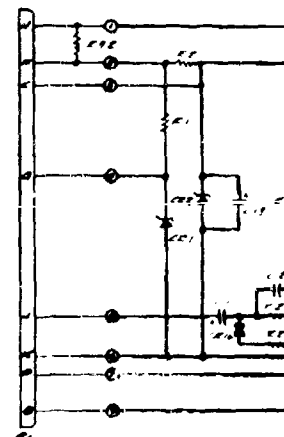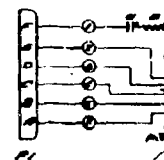
[illegible]

X 802948 2


B

REPRODUCIBLE


NOT REPRODUCIBLE

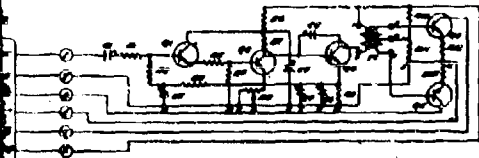


AS1 SCHEMATIC DIAGRAM (EM4934-1)  
(SERVO AMP)

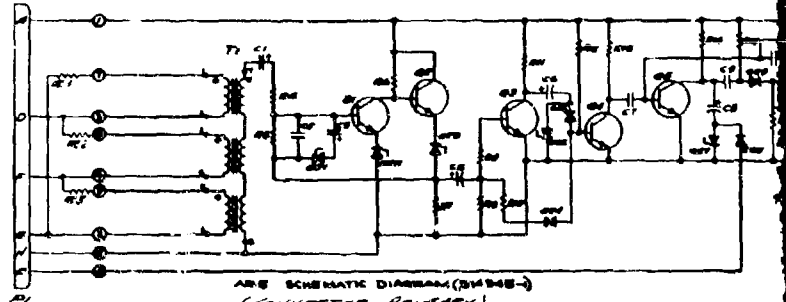


AS2 SCHEMATIC DIAGRAM (EM4935-1)  
(CONVERTER PRIMARY)

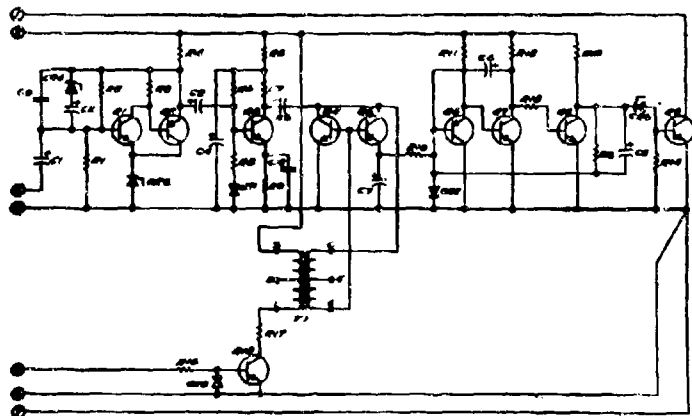


AS3, AS4 SCHEMATIC DIAGRAM (EM4936-1)  
(TRIGGER)

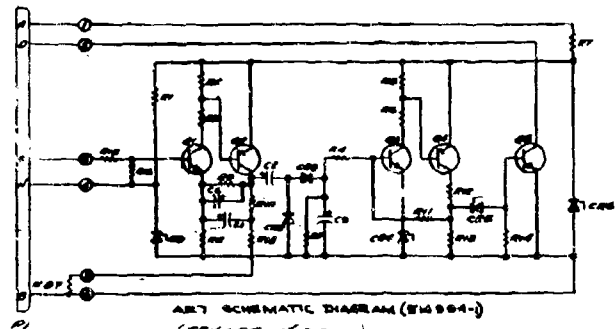

AS7 SCHEMATIC DIAGRAM (EM4937-1)  
(TRIGGER MOD.)

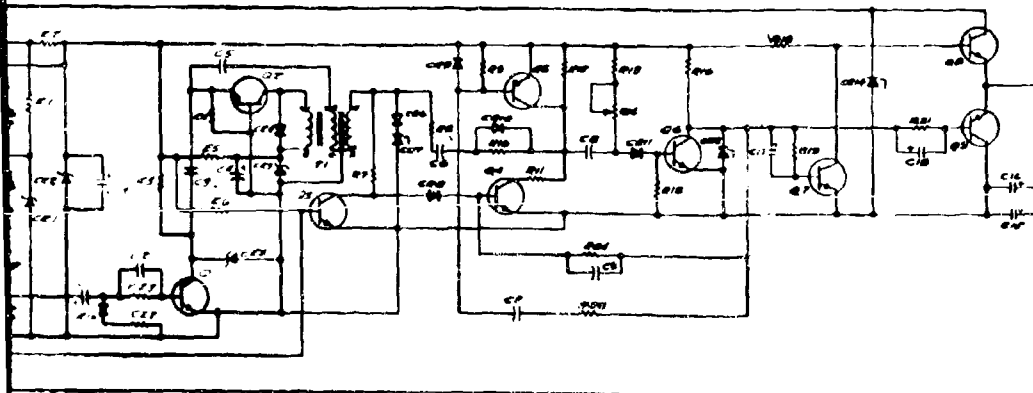

AS14 SCHEMATIC DIAGRAM (EM4940-1)  
(CONVERTER SECONDARY)

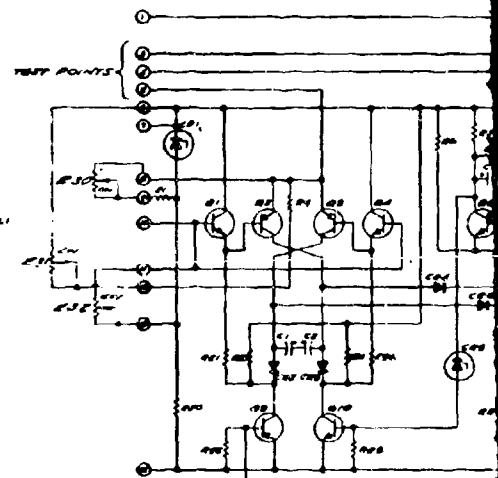

AS5 SCHEMATIC DIAGRAM (NSF)



8029





# DUPLICATE

REVISION	DATE	BY	APP'D
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			
22			
23			
24			
25			
26			
27			
28			
29			
30			
31			
32			
33			
34			
35			
36			
37			
38			
39			
40			
41			
42			
43			
44			
45			
46			
47			
48			
49			
50			
51			
52			
53			
54			
55			
56			
57			
58			
59			
60			
61			
62			
63			
64			
65			
66			
67			
68			
69			
70			
71			
72			
73			
74			
75			
76			
77			
78			
79			
80			
81			
82			
83			
84			
85			
86			
87			
88			
89			
90			
91			
92			
93			
94			
95			
96			
97			
98			
99			
100			


SEE SHEET 1 OF 2 FOR CONTROLLING DRAWING CHANGES

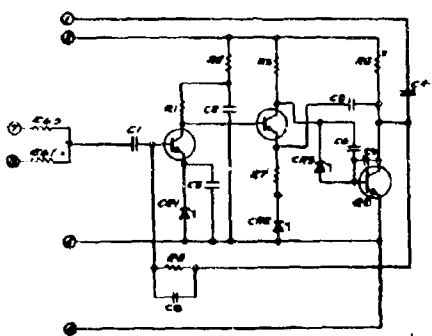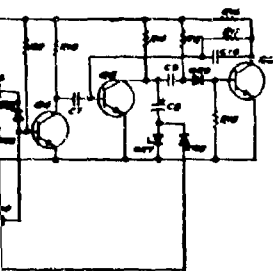


AB 9 SCHEMATIC DIAGRAM (802945-1)  
(BUFFER)

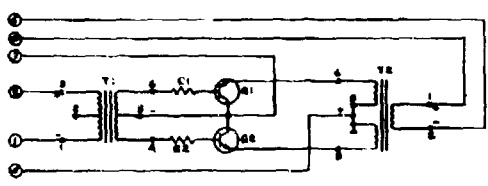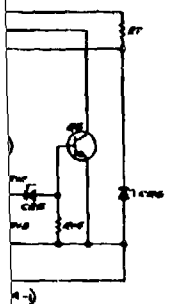

BI SCHEMATIC DIAGRAM (848944-)  
(CONTROL)

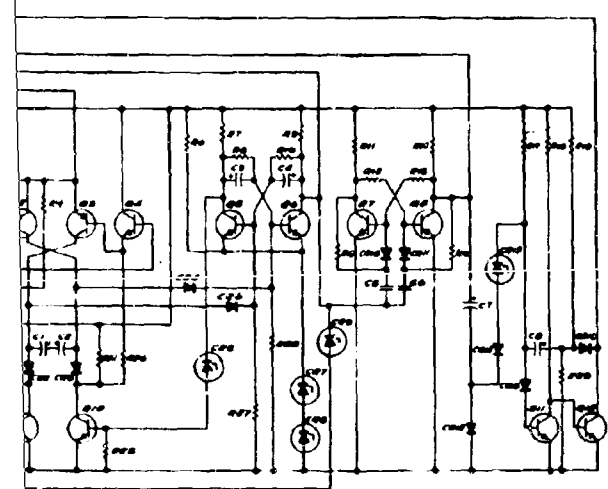



BD SCHEMATIC DIAGRAM (848944-)  
(DISPLAY)

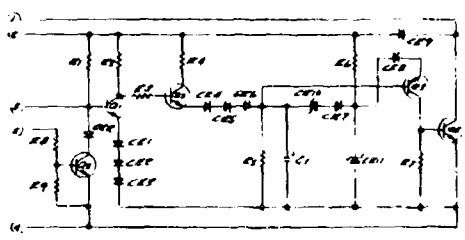

BE SCHEMATIC DIAGRAM (802946-1)  
(TIMING)


802948 1

REV	DATE	BY	APP'D	DESCRIPTION
1				WIRING SCHEMATIC COMPUTER DISPLAY
2				
3				
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				
26				
27				
28				
29				
30				
31				
32				
33				
34				
35				
36				
37				
38				
39				
40				
41				
42				
43				
44				
45				
46				
47				
48				
49				
50				
51				
52				
53				
54				
55				
56				
57				
58				
59				
60				
61				
62				
63				
64				
65				
66				
67				
68				
69				
70				
71				
72				
73				
74				
75				
76				
77				
78				
79				
80				
81				
82				
83				
84				
85				
86				
87				
88				
89				
90				
91				
92				
93				
94				
95				
96				
97				
98				
99				
100				

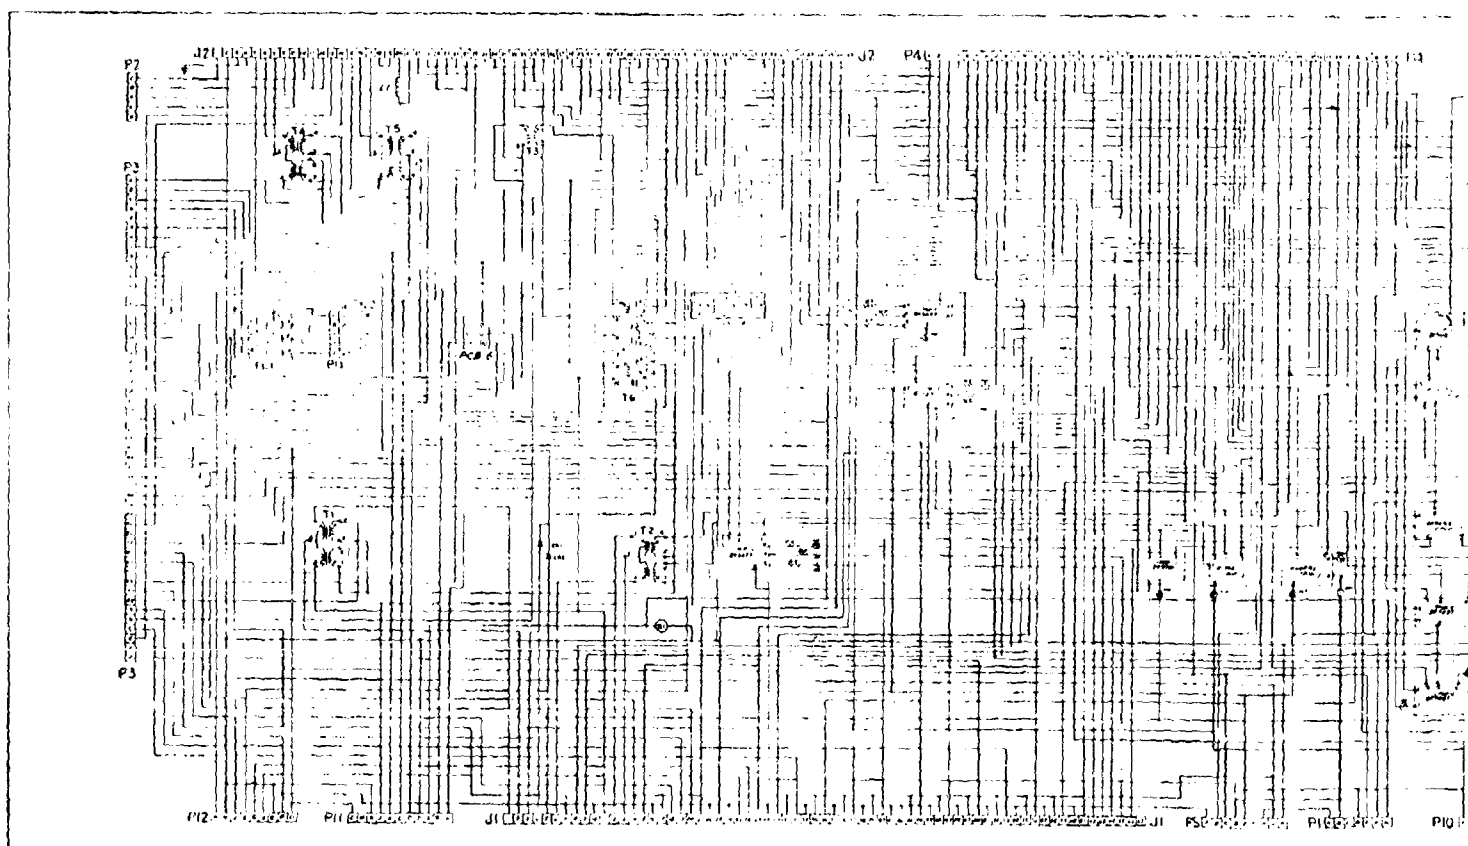


A

IBLE



(NOT REPRODUCIBLE)


NOT

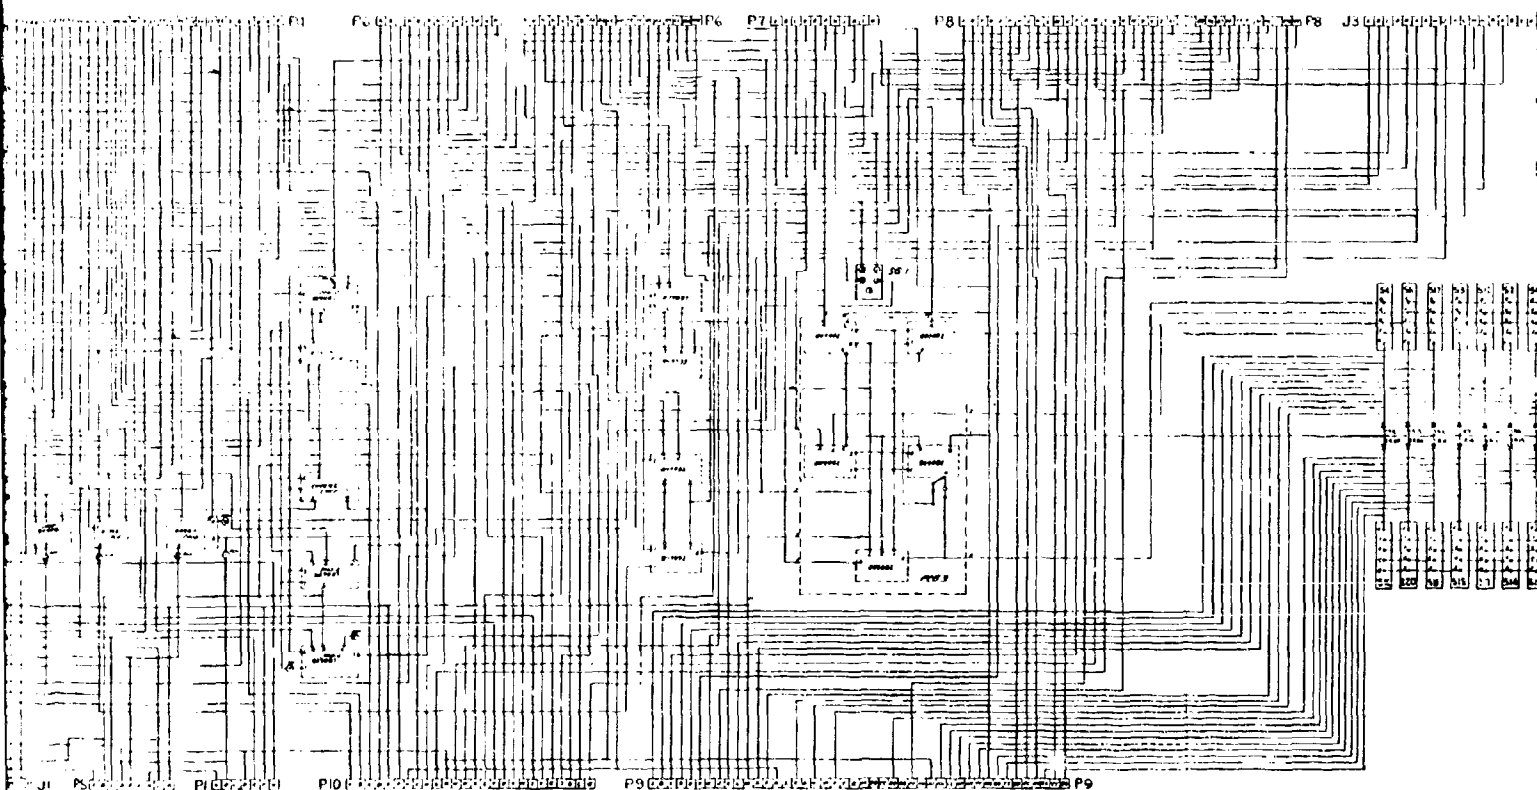


B

DUCIBLE

NOT REPRODUCIBLE

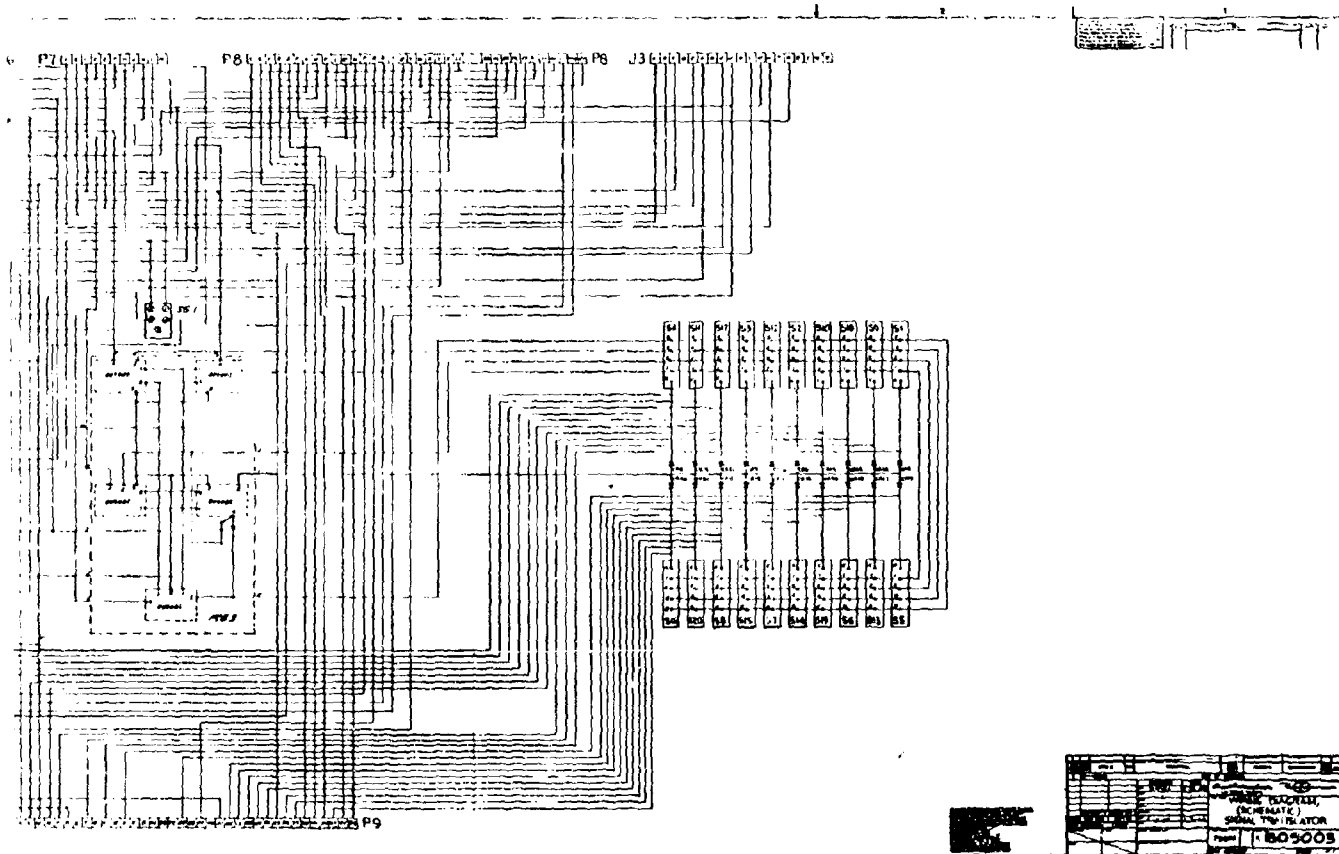

C

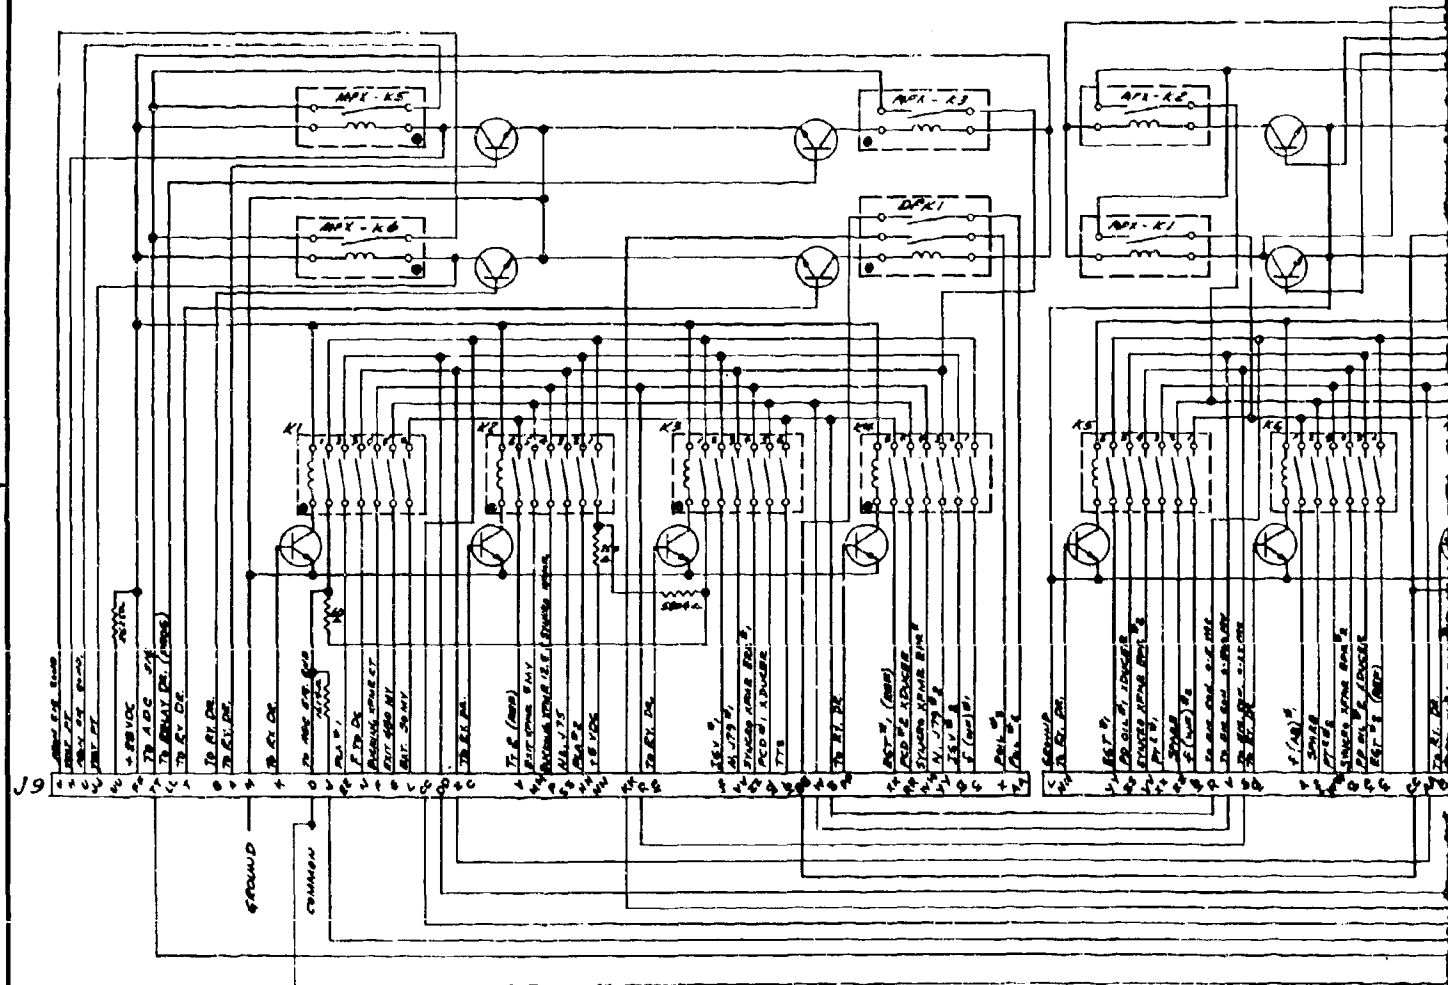


A

This drawing contains design and other information which are the property of THE SPERRY CORPORATION. Except for rights expressly granted by contract to the United States Government, this drawing may not, in whole or in part, be duplicated or disclosed or used for manufacture of the part described herein, without the prior written permission of THE SPERRY CORPORATION.

REVISIONS			
SYM	DESCRIPTION	DATE	APPROVED
A	SEE REVISION NOTICE	2-19-67	J. J. J.

RSC  
RSE

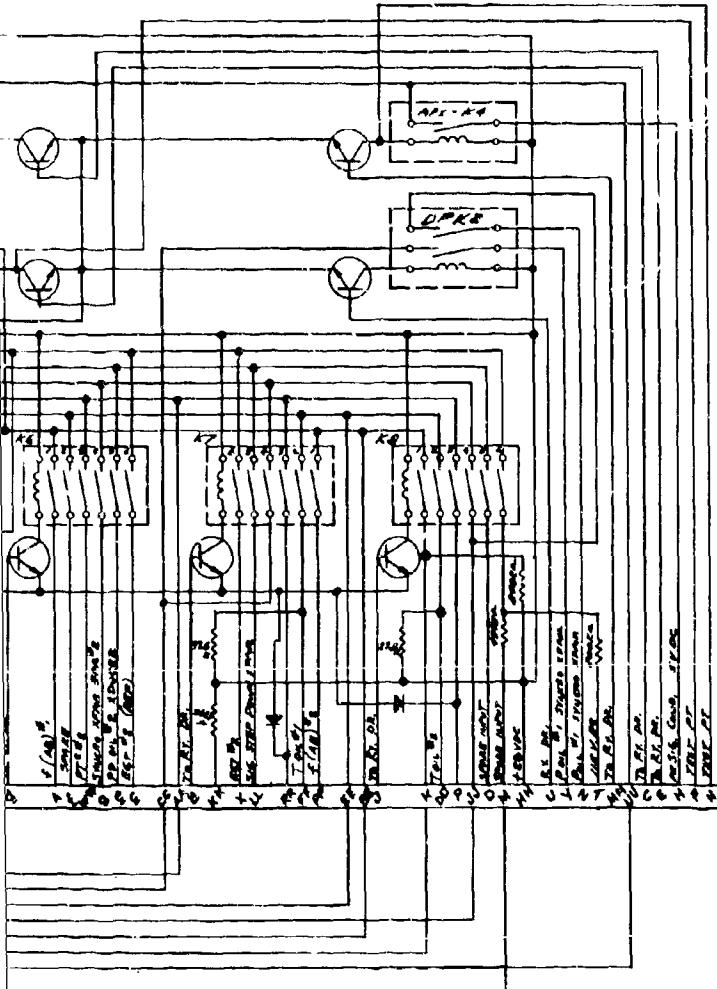


J10

B

16809079

ALL PARTS MUST BE USED WITH PLATING  
AND TREATMENT AS SPECIFIED IN  
THE DRAWING.


QTY	REQD	ITEM NO.	PART NO.	SYM	DESCRIPTION	CODE IDENT	MATERIAL	SPECIFICATION	UNIT WT
← ASSYS									
					LIST OF MATERIAL				
					APPROVED: DATE: 2-11-67 BY: DATE: 2-15-67 FOR: DATE: 2-15-67 WIRING DIAGRAM, SCHEMATIC RELAYS				
RECD: NEXT ASSY: USED ON: HEAT TREATMENT: PROCESS: DATE: PART: DATE:					70210 D X 809079 SCALE: 1/2" = 1" WT SHEET 1 OF 1				

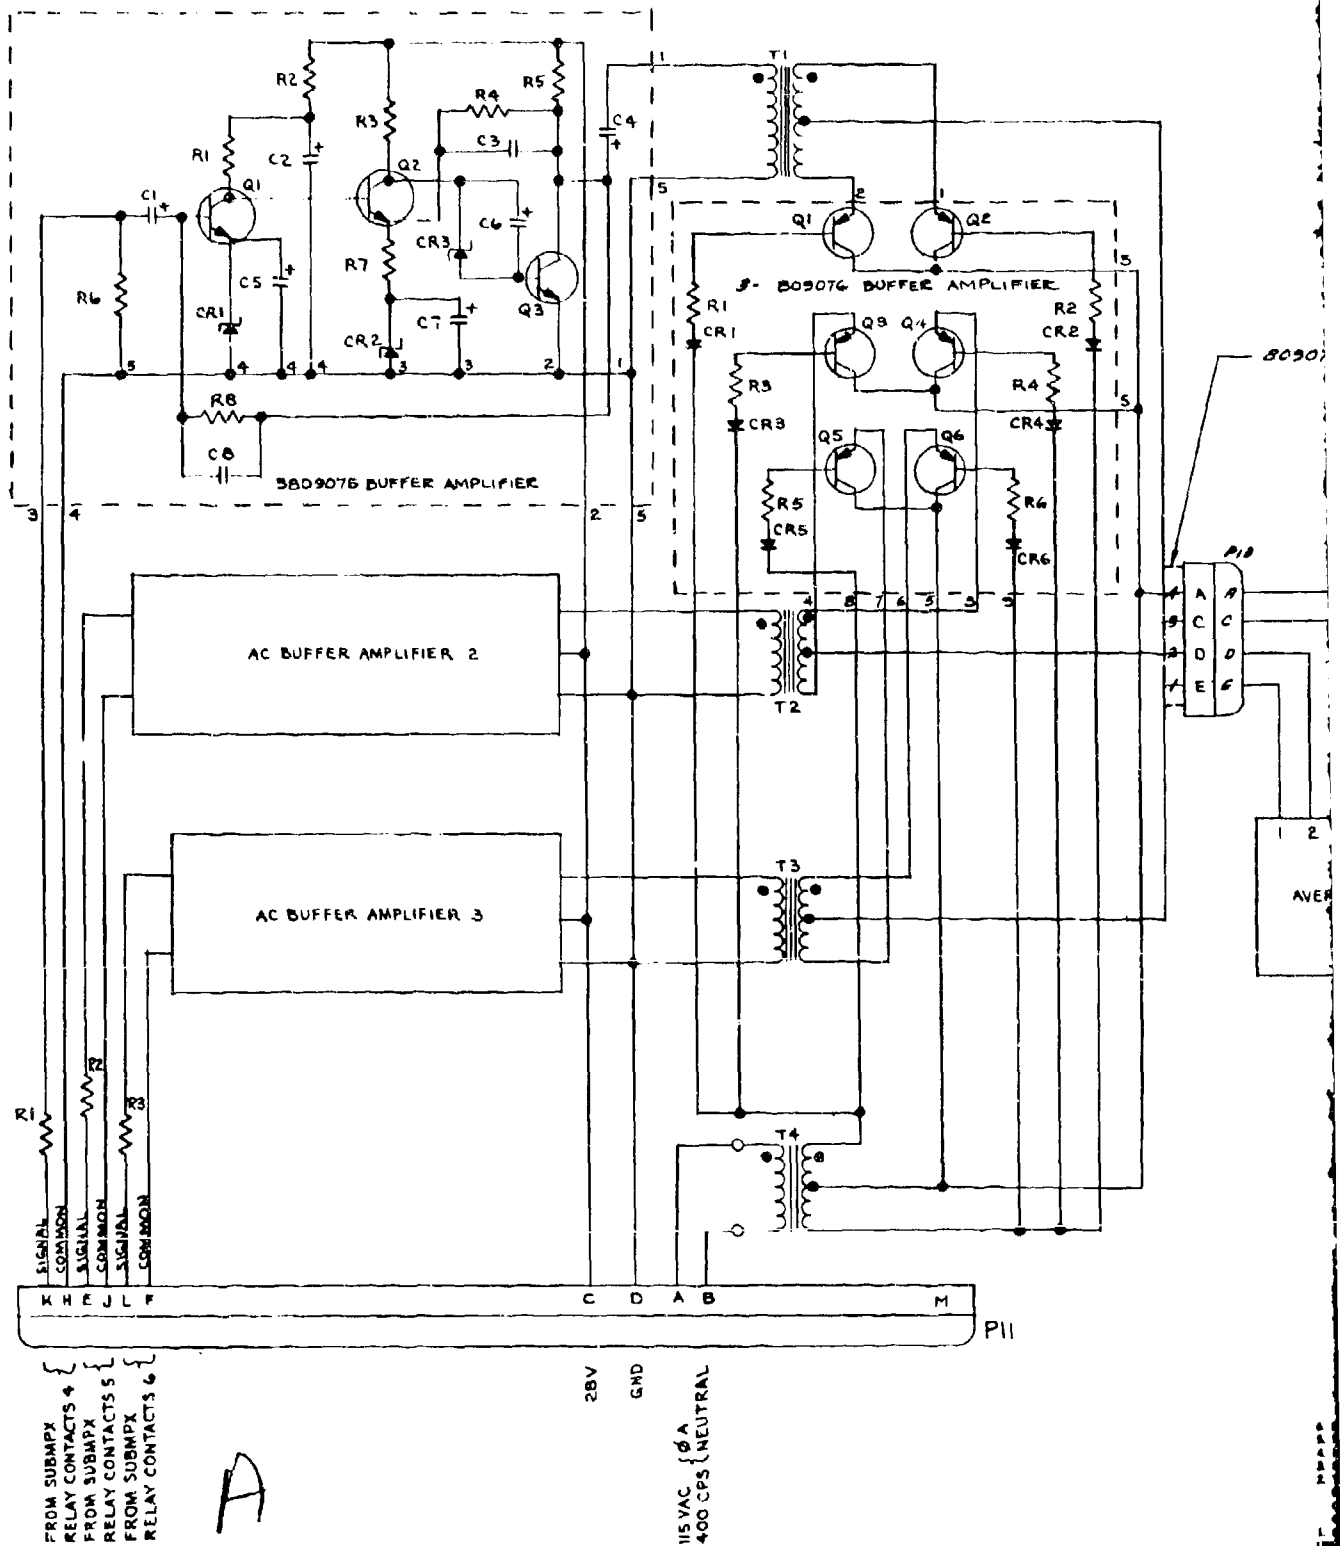

REVISIONS			
DATE	DESCRIPTION	DATE	APPROVAL
A	SEE REVISION NOTICE	3-7-64	T. J. [Signature]
B	SEE REVISION NOTICE	3-14-64	T. J. [Signature]

RYE  
 RYE  
 RYE

805072.1 85 9D

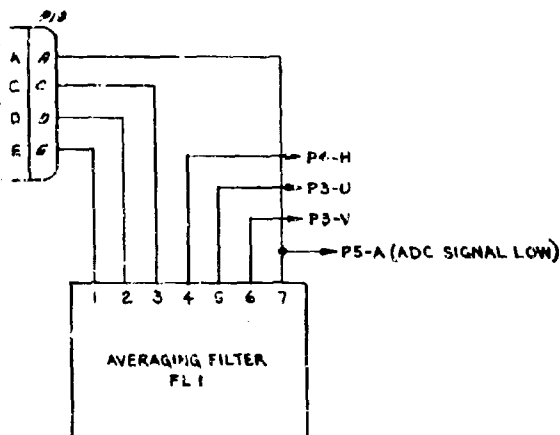

## COMPONENT LIST

809075 AMPLIFIER

C1 = CS1BAD220K  
C2 = C613AF010K  
C3 = CT10D-S11K GULTON  
C4 = C613AF220M  
C5 = C613AD3R5M  
C6 = CS13AF010K  
C7 = C613AE150M  
C8 = CT10D-100K GULTON

CR1 = IN 713A  
CR2 = IN 717A  
CR3 = IN 720A

Q1 = 2N910  
Q2 = 2N910  
Q3 = 2N910

R1 - RLO7AD104J  
R2 - RLO7AD333J  
R3 - RLO7AD623J  
R4 - RLO7AD313J  
R5 - RLO7AD752J  
R6 - RLO7AD104J  
R7 - RLO7AD510J  
R8 - RN6SE2003F

FL12 LP 431 R (PYYB 441)

809076 AMPLIFIER

CR1- IN 645  
CR2- IN 645  
CR3- IN 645  
CR4- IN 645  
CR5- IN 645  
CR6- IN 645

Q1 - 2N2336  
Q2 - 2N2336  
Q3 - 2N2336  
Q4 - 2N2336

R1 - RLO7AD 223J  
R2 - RLO7AD 223J  
R3 - RLO7AD 223J  
R4 - RLO7AD 223J  
R5 - RLO7AD 223J  
R6 - RLO7AD 223J

R1 = RN65E1004 FMIL-R-10509/2  
R2 = RN65E2002 FMIL-R 2509/2  
R3 = RN65E2008 FMIL-R 0809/2

JI - MMII-22 PGDS CONTINENTAL


T1 = 15030 HADLEY  
T2 = 15030 HADLEY  
T3 = 15030 HADLEY  
T4 = 15031 HADLEY


 $\beta$ 

6. DIMENSIONS UNLESS WELD AFTER PLATING.  
6. UNWELDED FILLET RAC.1 300-205  
6. FULL CONTROL PER AIR 307-3040  
2. SURFACE FINISHES PER 300-STD-30  
2. TOLERANCES ON:  
DIMS/INCH  $\pm .01$   
CHAMFER ANGLES  $\pm 5^\circ$   
OTHER ANGLES  $\pm 5^\circ$   
1. DIMENSIONS ARE IN INCHES.  
UNLESS OTHERWISE SPECIFIED.

[illegible]



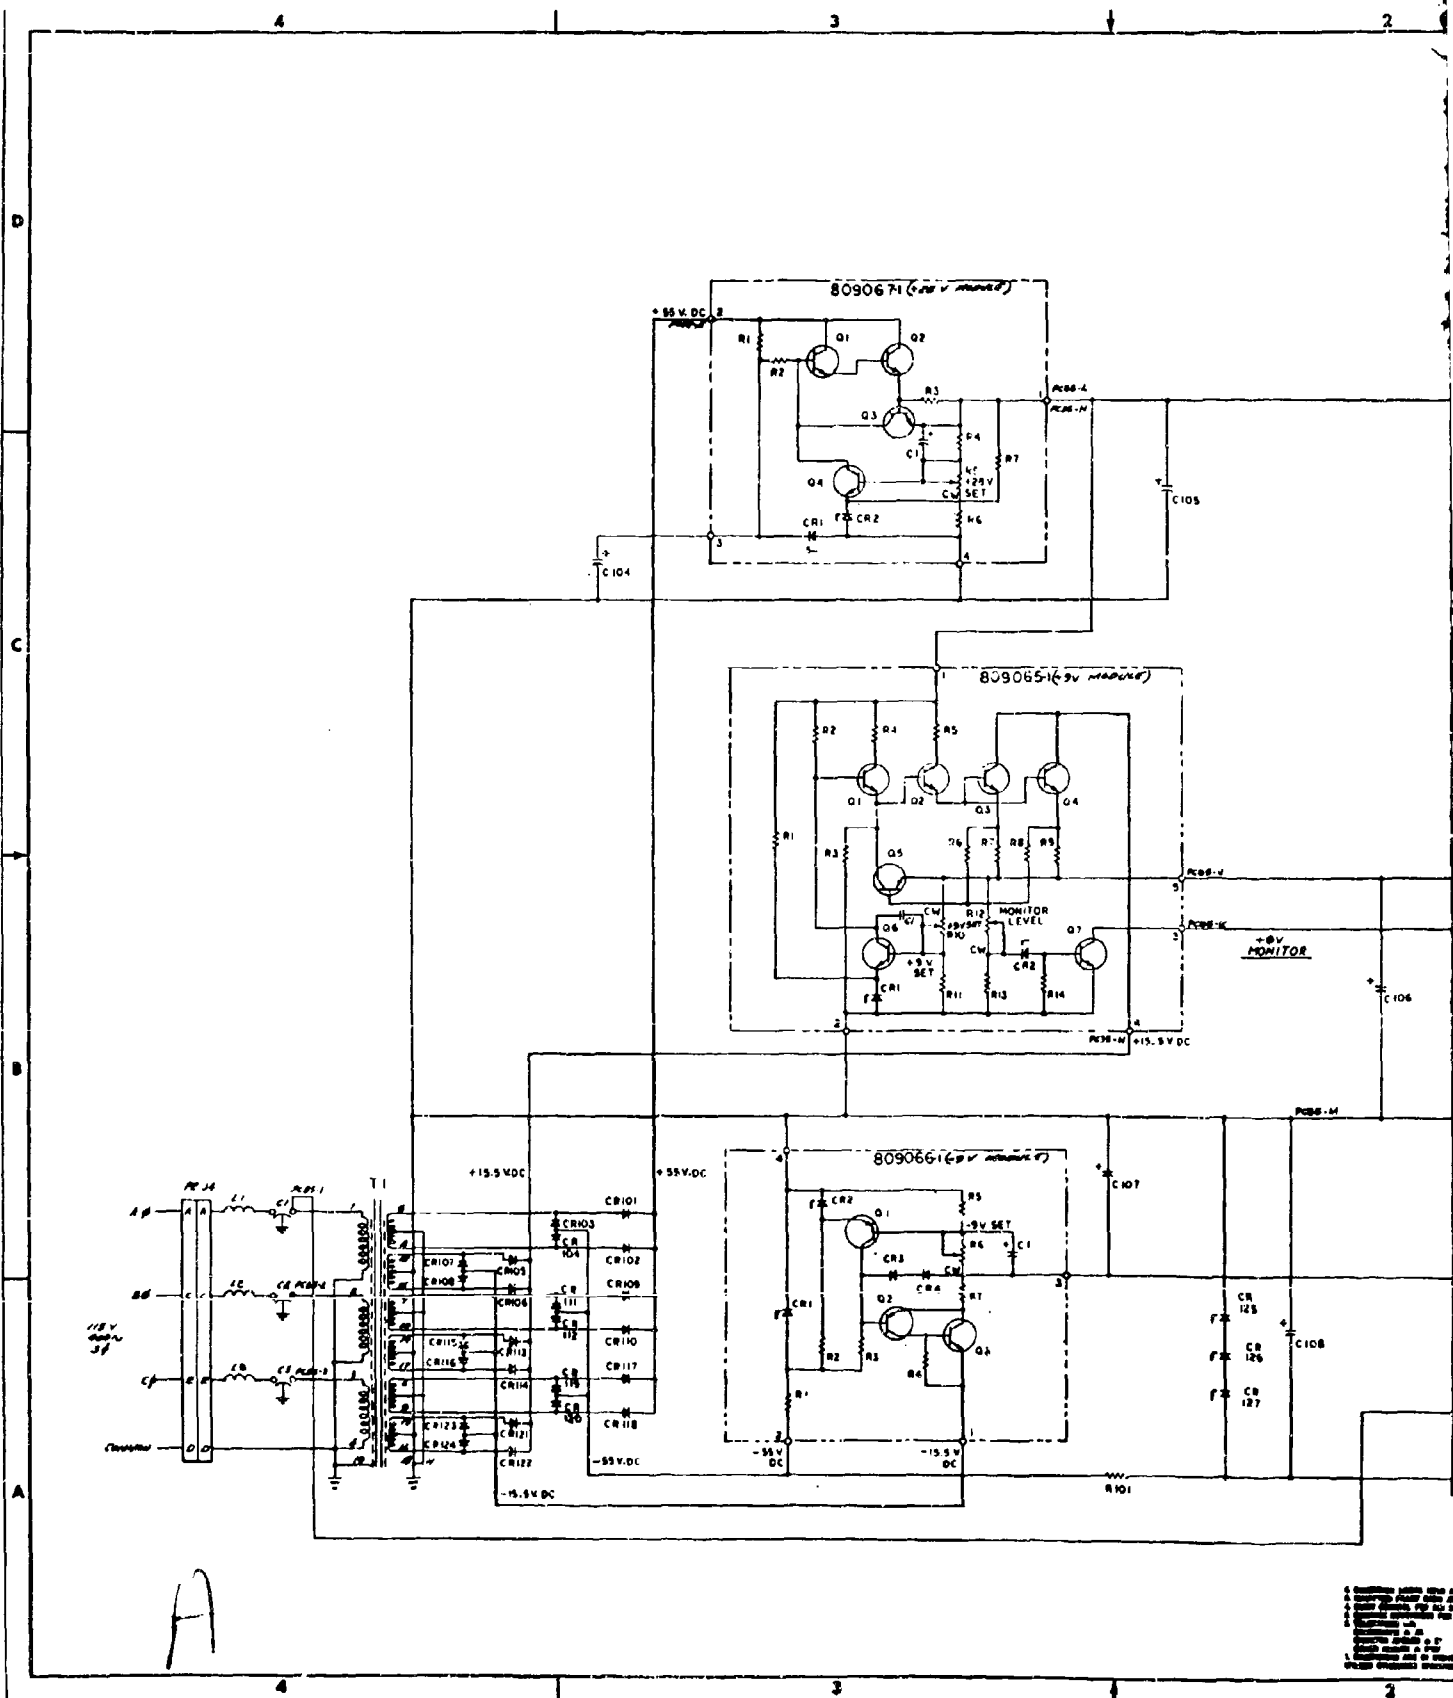

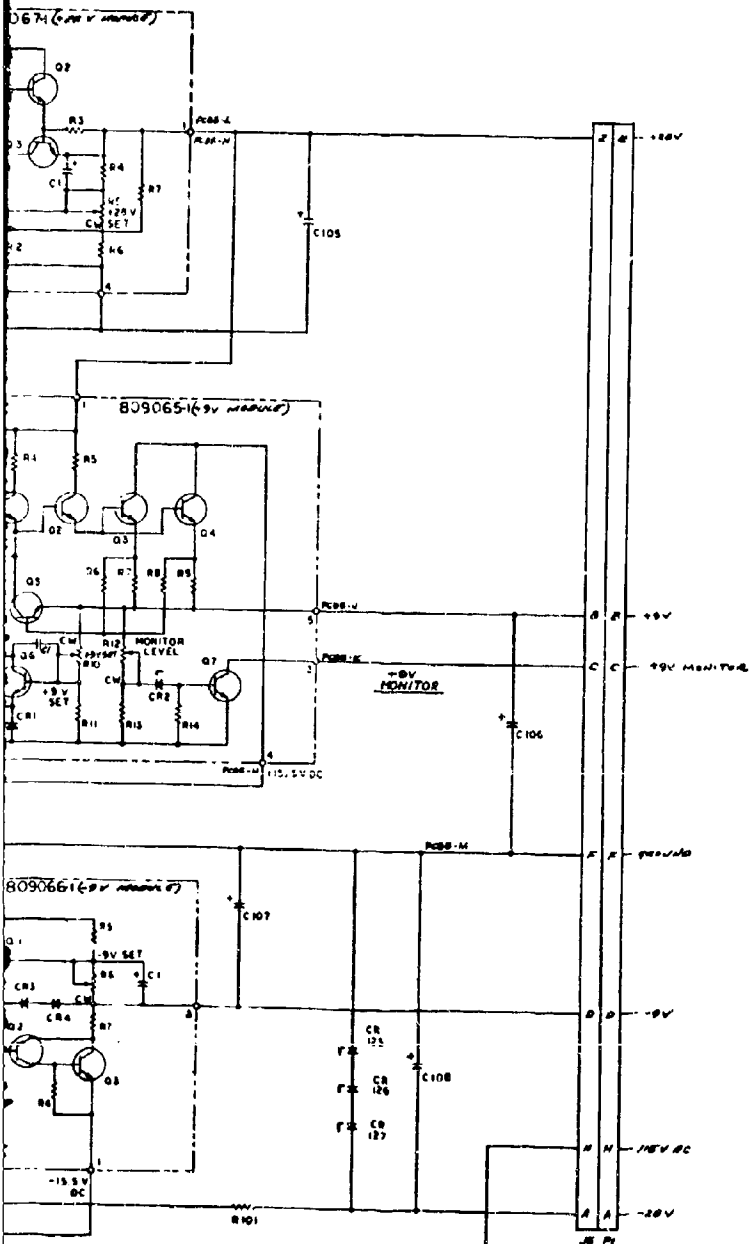

# 809067 - +28 V. CIRCUITS

Q1 - 2N910  
Q2 - 2N2933  
Q3 - 2N731  
Q4 - 2N2222

CR1 - 10346  
CR2 - 1N3514

C1 - 15  $\mu$ F

R1 - 2.5K 1/2W RS-1A  
R2 - 3.5K 1/2W RS-1A  
R3 - 1.5K 1/2W RS-1A  
R4 - 47K 1/2W RS-1A  
R5 - 20K 1/2W RS-1A  
R6 - 1.5K 1/2W RS-1A  
R7 - 6.2K 1/2W RS-1A

PA56947 HEAT SINK

# 809065 - +9V. CIRCUITS

Q1 - 2N2222  
Q2 - 2N2222  
Q3 - 2N2933  
Q4 - 2N2933  
Q5 - 2N2222  
Q6 - 2N731  
Q7 - 2N914

CR1 - 1N3514  
CR2 - 1N3514

C1 - .005  $\mu$ F 40V CT700-15K 50VDC

R1 - 2.2K 1/2W RS-1A  
R2 - 4.7K 1/2W RS-1A  
R3 - 10K 1/2W RS-1A  
R4 - 4.7K 1/2W RS-1A  
R5 - 100  $\Omega$  1/2W RS-1A  
R6 - 100  $\Omega$  1/2W RS-1A  
R7 - 0.75K 1/2W RS-1A  
R8 - 100  $\Omega$  1/2W RS-1A  
R9 - 0.75K 1/2W RS-1A  
R10 - 100  $\Omega$  1/2W RS-1A  
R11 - 1.5K 1/2W RS-1A  
R12 - 1.5K 1/2W RS-1A  
R13 - 1.5K 1/2W RS-1A  
R14 - 10K 1/2W RS-1A

TX 87-01 038-1 DISSIPATOR  
TX 87-02 037-1 DISSIPATOR  
PA 26146 DISSIPATING PLATE

# 809066 - -9V CIRCUITS

Q1 - 2N2933  
Q2 - 2N2933  
Q3 - 2N2933

CR1 - 10346  
CR2 - 1N3514  
CR3 - 1N3514  
CR4 - 1N3514

C1 - 0.1  $\mu$ F

R1 - 2K 1/2W RS-1A  
R2 - 2.2K 1/2W RS-1A  
R3 - 4.7K 1/2W RS-1A  
R4 - 1.5K 1/2W RS-1A  
R5 - 1.5K 1/2W RS-1A  
R6 - 1.5K 1/2W RS-1A  
R7 - 1.5K 1/2W RS-1A  
R8 - 1.5K 1/2W RS-1A  
R9 - 1.5K 1/2W RS-1A  
R10 - 1.5K 1/2W RS-1A  
R11 - 1.5K 1/2W RS-1A  
R12 - 1.5K 1/2W RS-1A  
R13 - 1.5K 1/2W RS-1A  
R14 - 1.5K 1/2W RS-1A

# INTER-CONNECTING CIRCUITRY T1 - TRANSFORMER, POWER

CR101 - 1N3758

CR102 - 1N3758

CR103 - 1N3758

CR104 - 1N3758

CR105 - 1N3758

CR106 - 1N3758

CR107 - 1N3758

CR108 - 1N3758

CR109 - 1N3758

CR110 - 1N3758

CR111 - 1N3758

CR112 - 1N3758

CR113 - 1N3758

CR114 - 1N3758

CR115 - 1N3758

CR116 - 1N3758

CR117 - 1N3758

CR118 - 1N3758

CR119 - 1N3758

CR120 - 1N3758

CR121 - 1N3758

CR122 - 1N3758

CR123 - 1N3758

CR124 - 1N3758

CR125 - 1N3758

CR126 - 1N3758

CR127 - 1N3758

CR128 - 1N3758

CR129 - 1N3758

CR130 - 1N3758

CR131 - 1N3758

CR132 - 1N3758

CR133 - 1N3758

CR134 - 1N3758

CR135 - 1N3758

CR136 - 1N3758

CR137 - 1N3758

CR138 - 1N3758

CR139 - 1N3758

CR140 - 1N3758

CR141 - 1N3758

CR142 - 1N3758

CR143 - 1N3758

CR144 - 1N3758

CR145 - 1N3758

CR146 - 1N3758

CR147 - 1N3758

CR148 - 1N3758

CR149 - 1N3758

CR150 - 1N3758

CR151 - 1N3758

CR152 - 1N3758

CR153 - 1N3758

CR154 - 1N3758

CR155 - 1N3758

CR156 - 1N3758

CR157 - 1N3758

CR158 - 1N3758

CR159 - 1N3758

CR160 - 1N3758

CR161 - 1N3758

CR162 - 1N3758

CR163 - 1N3758

CR164 - 1N3758

CR165 - 1N3758

CR166 - 1N3758

CR167 - 1N3758


CR168 - 1N3758

CR169 - 1N3758


CR170 - 1N3758

REV	DATE	DESCRIPTION	BY	CHKD
1	10/1/61	WIRING DIAGRAM - SCHEMATIC POWER SUPPLY		
2	10/1/61	WIRING DIAGRAM - SCHEMATIC POWER SUPPLY		
3	10/1/61	WIRING DIAGRAM - SCHEMATIC POWER SUPPLY		
4	10/1/61	WIRING DIAGRAM - SCHEMATIC POWER SUPPLY		
5	10/1/61	WIRING DIAGRAM - SCHEMATIC POWER SUPPLY		
6	10/1/61	WIRING DIAGRAM - SCHEMATIC POWER SUPPLY		
7	10/1/61	WIRING DIAGRAM - SCHEMATIC POWER SUPPLY		
8	10/1/61	WIRING DIAGRAM - SCHEMATIC POWER SUPPLY		
9	10/1/61	WIRING DIAGRAM - SCHEMATIC POWER SUPPLY		
10	10/1/61	WIRING DIAGRAM - SCHEMATIC POWER SUPPLY		


70210 E 809061

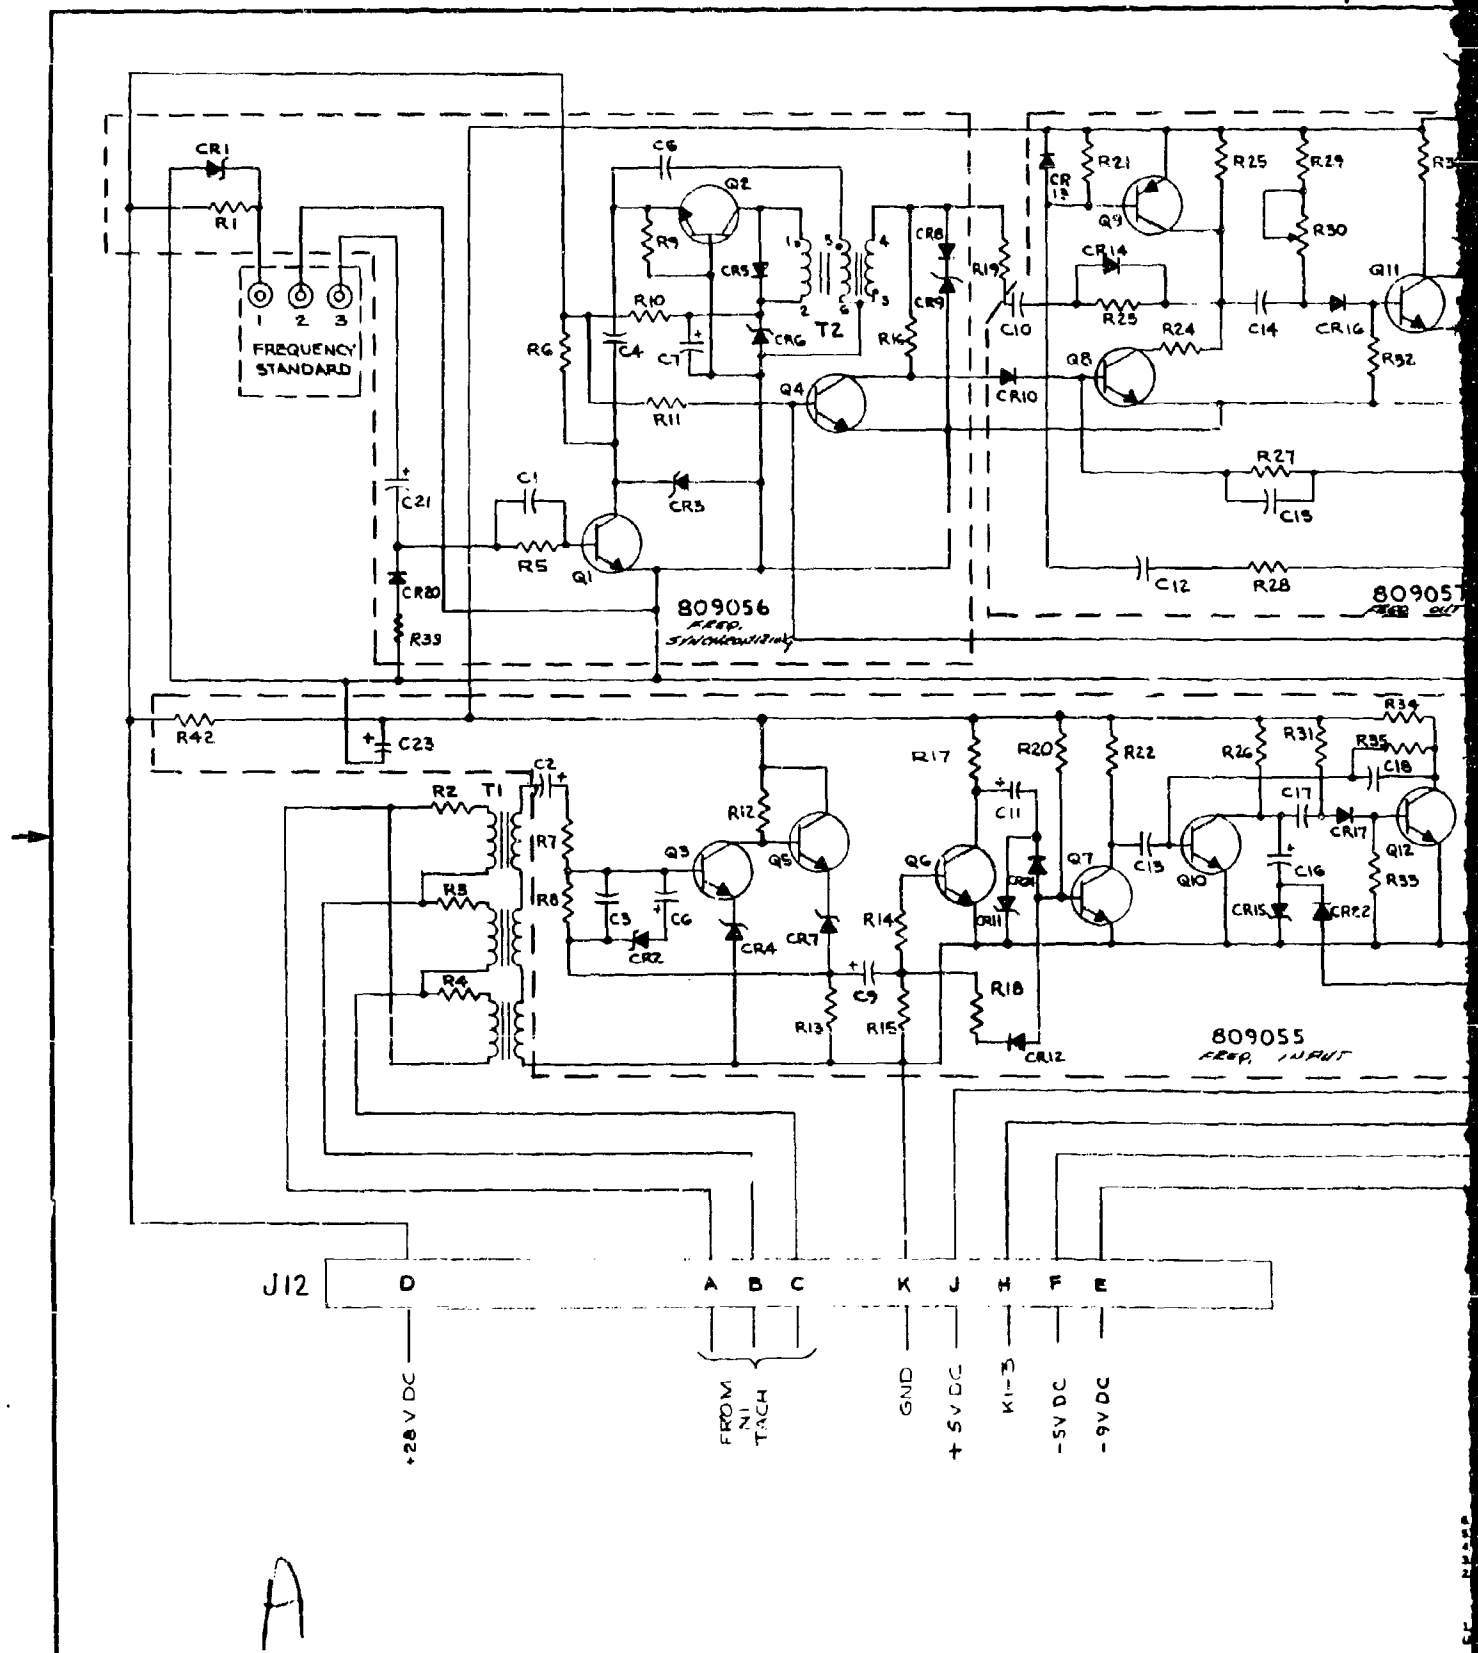



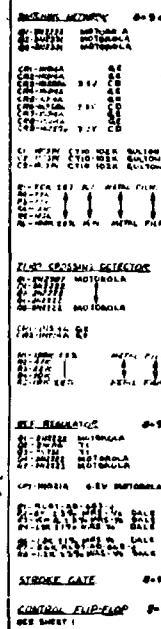


A



5

B

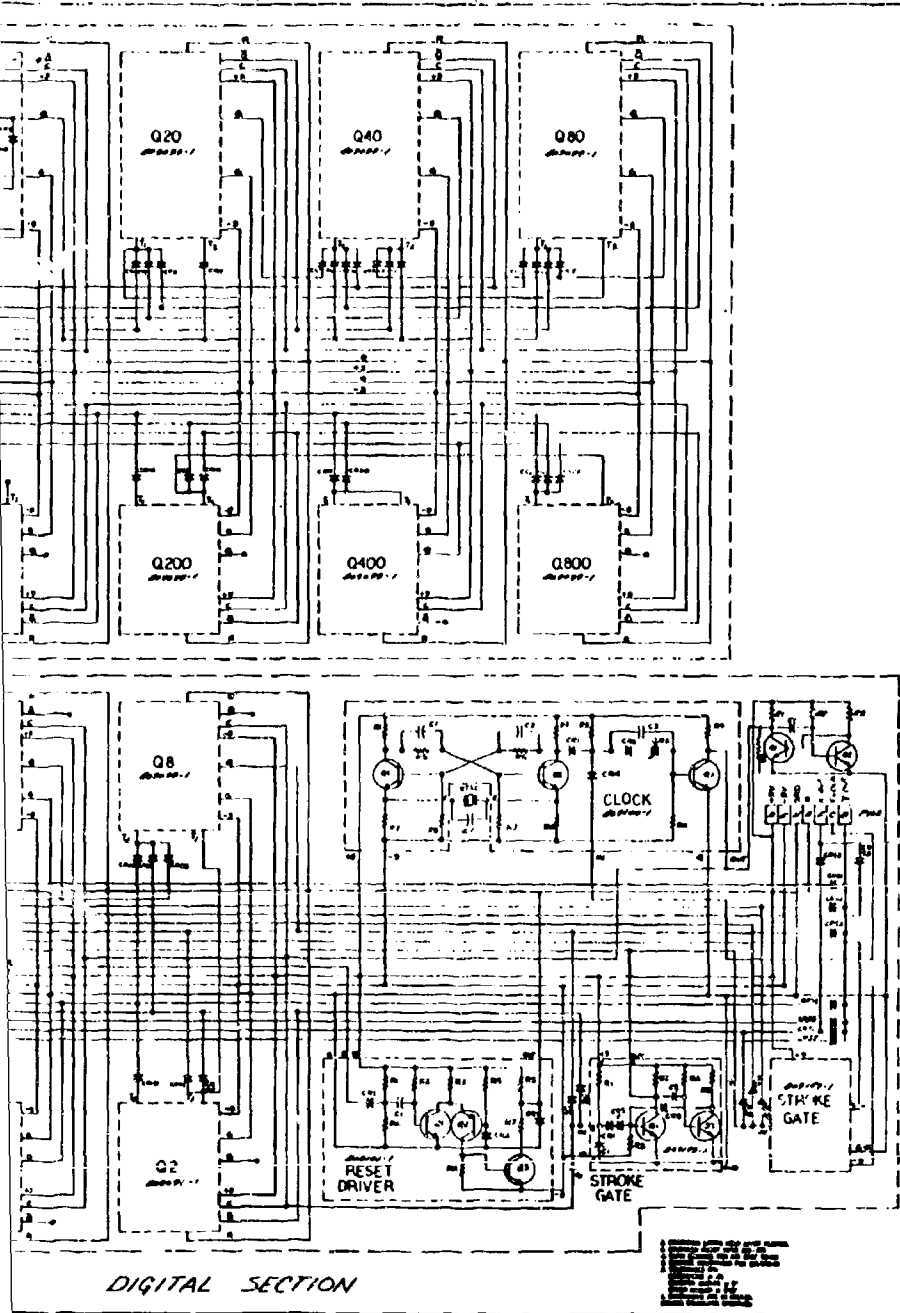

**Q20** (7410) 2N1001-1

**Q40** (7410) 2N1001-1

**Q80** (7410) 2N1001-1

**Q200** (7410) 2N1001-1

**Q400** (7410) 2N1001-1

**Q800** (7410) 2N1001-1

**Q2** (7410) 2N1001-1

**Q8** (7410) 2N1001-1

**Q20** (7410) 2N1001-1

**Q40** (7410) 2N1001-1

**Q80** (7410) 2N1001-1

**Q200** (7410) 2N1001-1

**Q400** (7410) 2N1001-1

**Q800** (7410) 2N1001-1

**Q2** (7410) 2N1001-1

**Q8** (7410) 2N1001-1

**RESET DRIVER** (7410) 2N1001-1

**STROKE GATE** (7410) 2N1001-1

**CLOCK** (7410) 2N1001-1

**Q20** (7410) 2N1001-1

**Q40** (7410) 2N1001-1

**Q80** (7410) 2N1001-1

**Q200** (7410) 2N1001-1


**Q400** (7410) 2N1001-1

**Q800** (7410) 2N1001-1

**Q2** (7410) 2N1001-1


**Q8** (7410) 2N1001-1

C

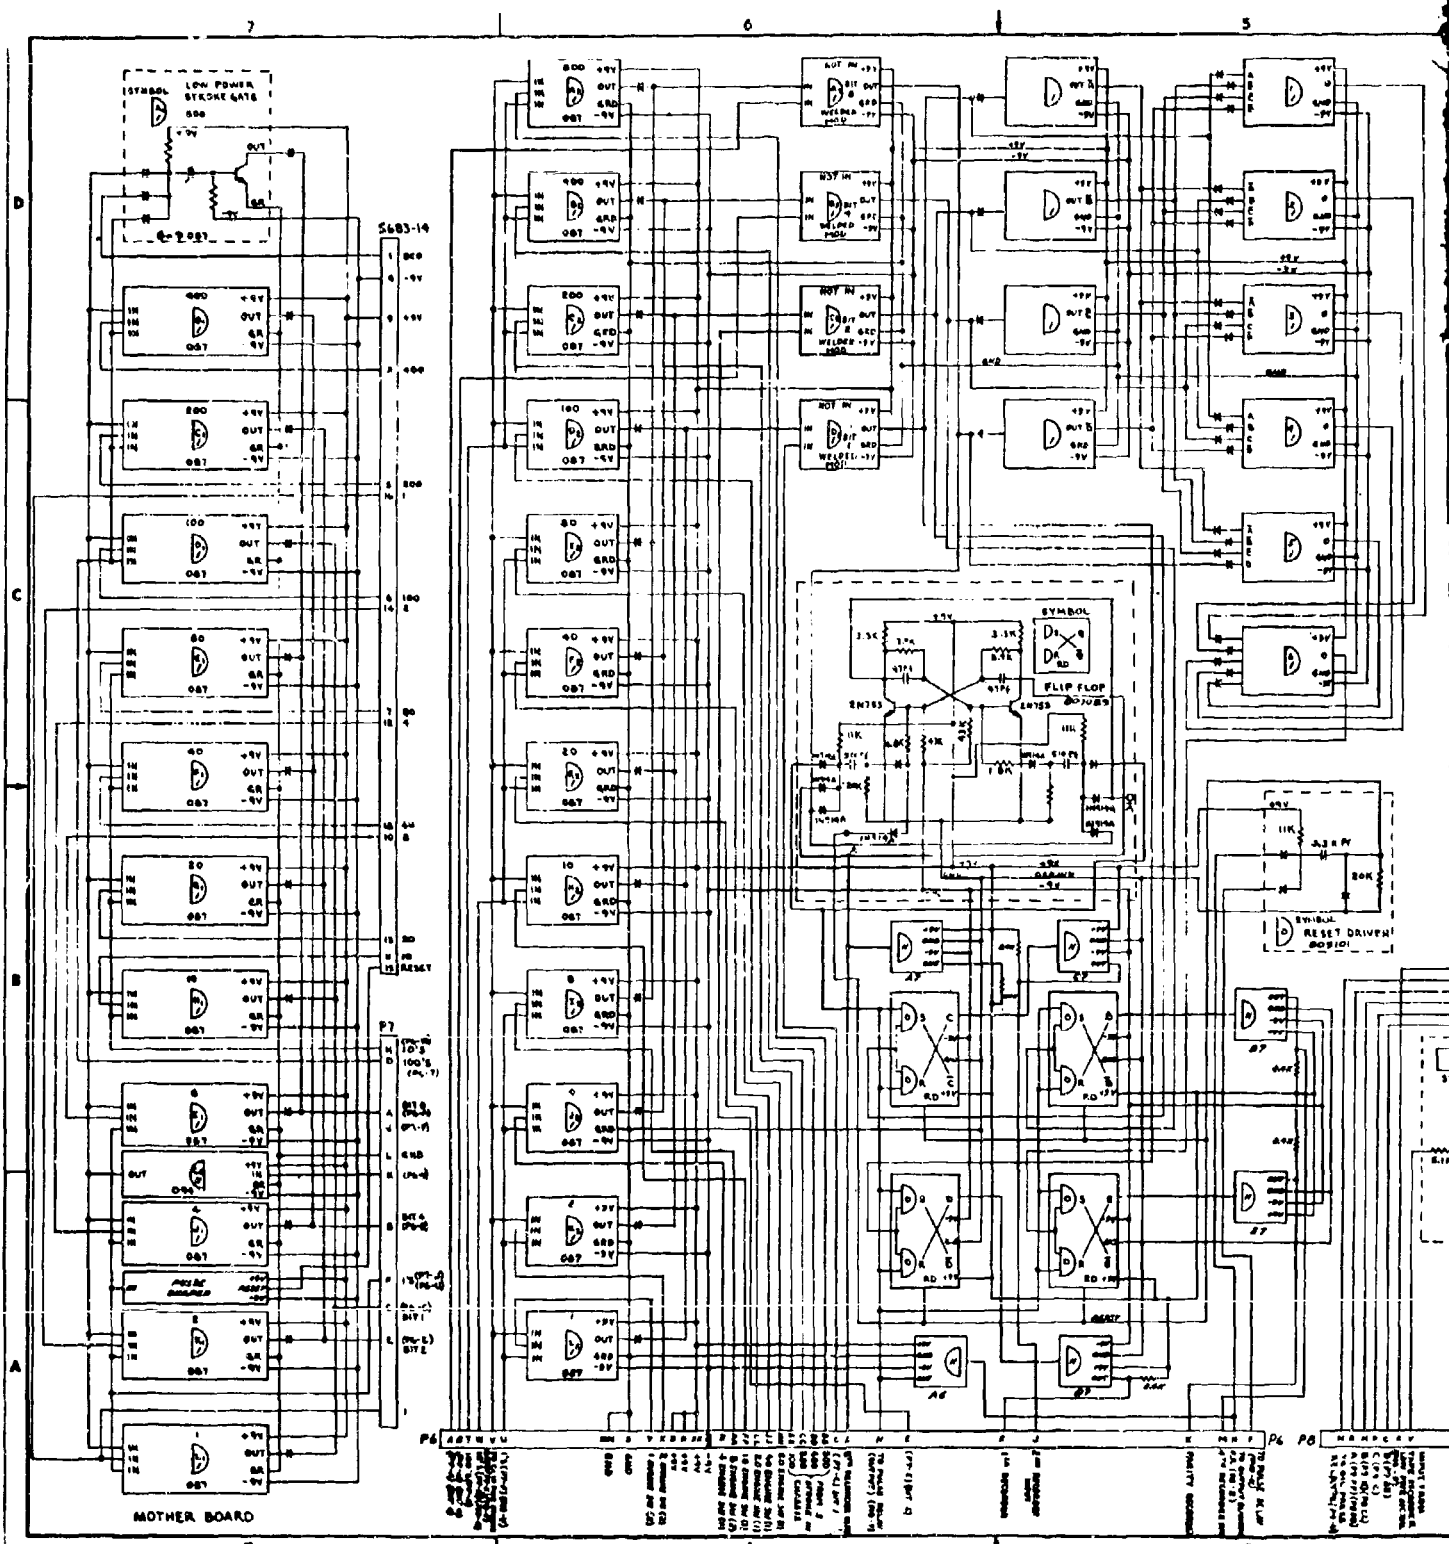


A



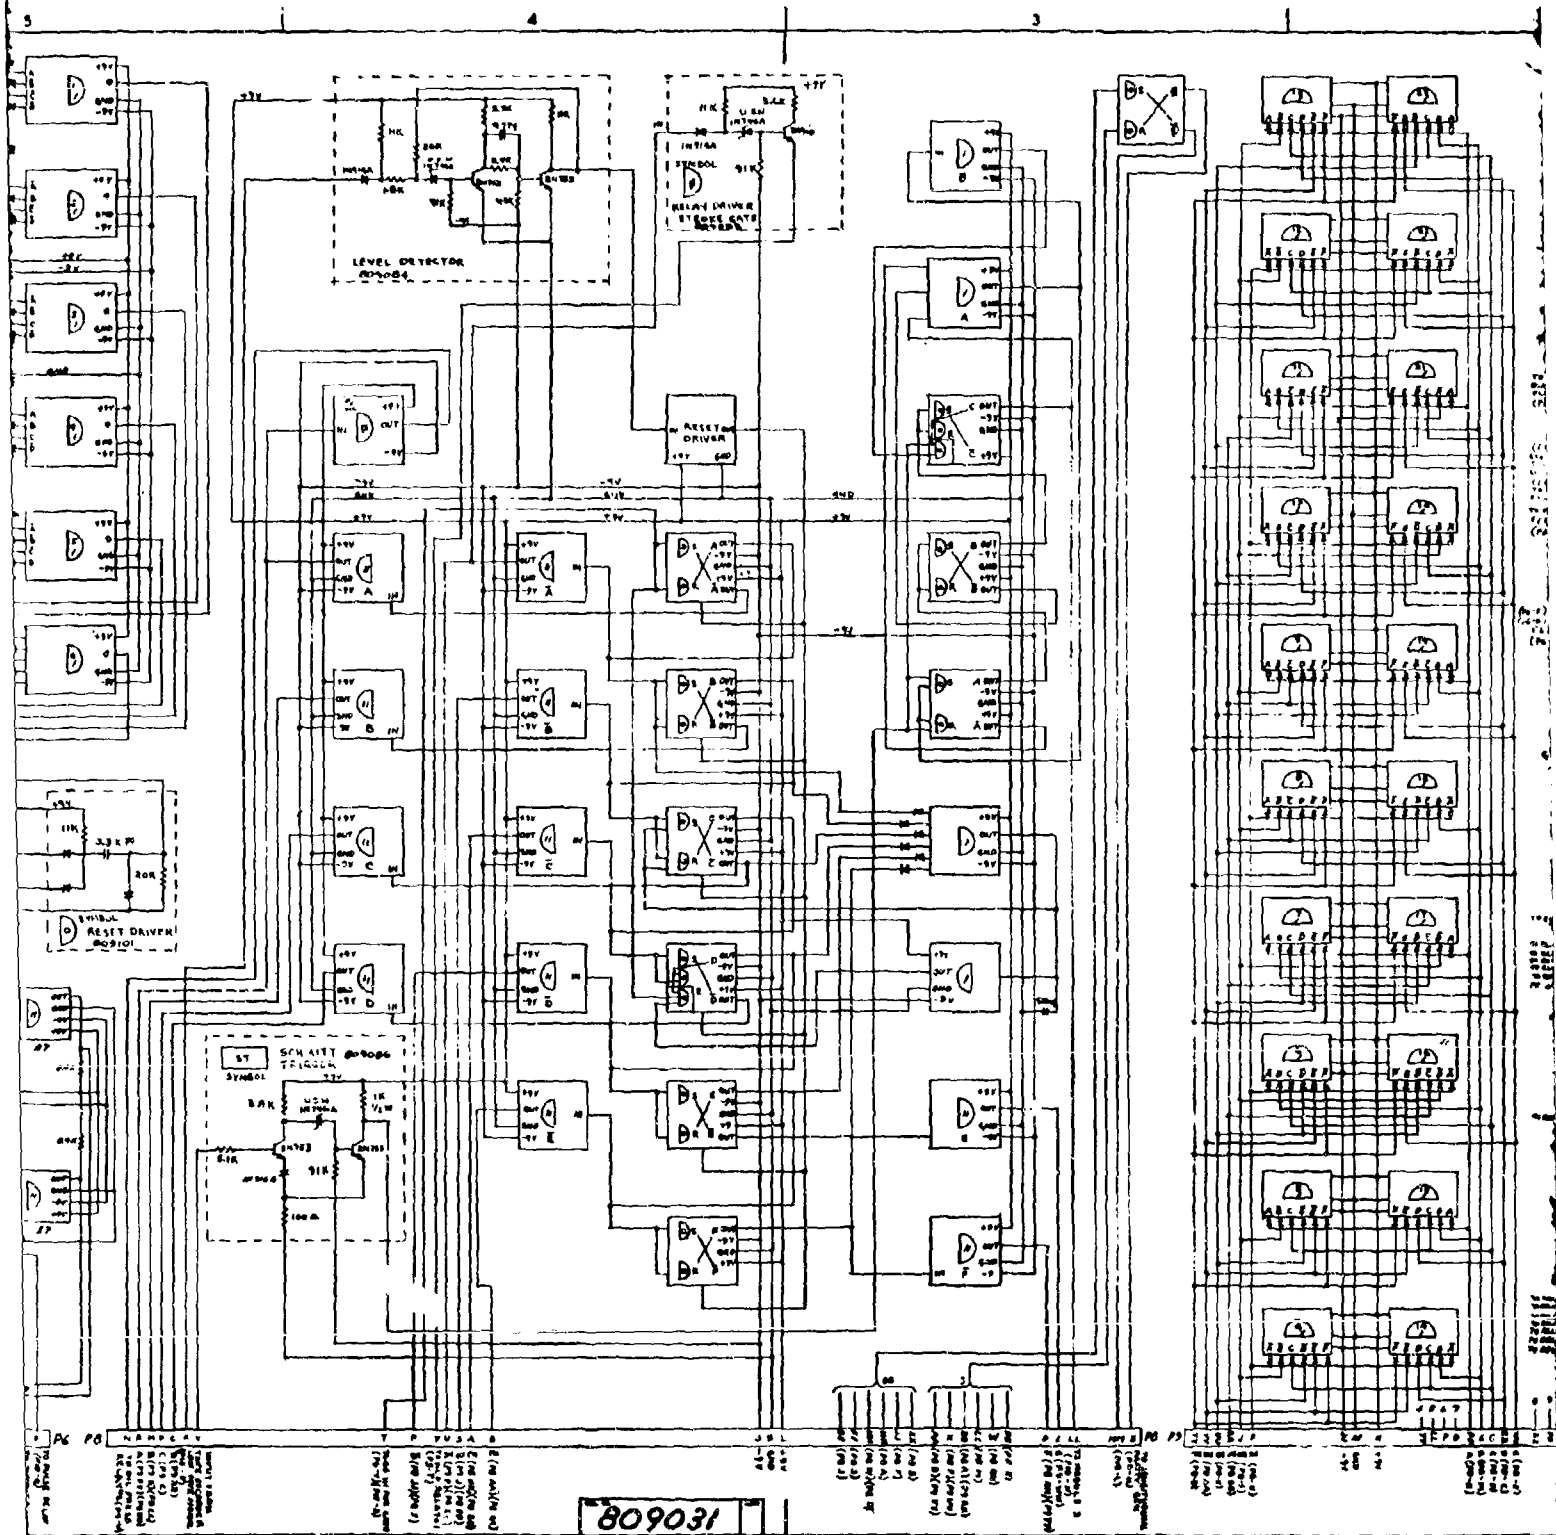

B

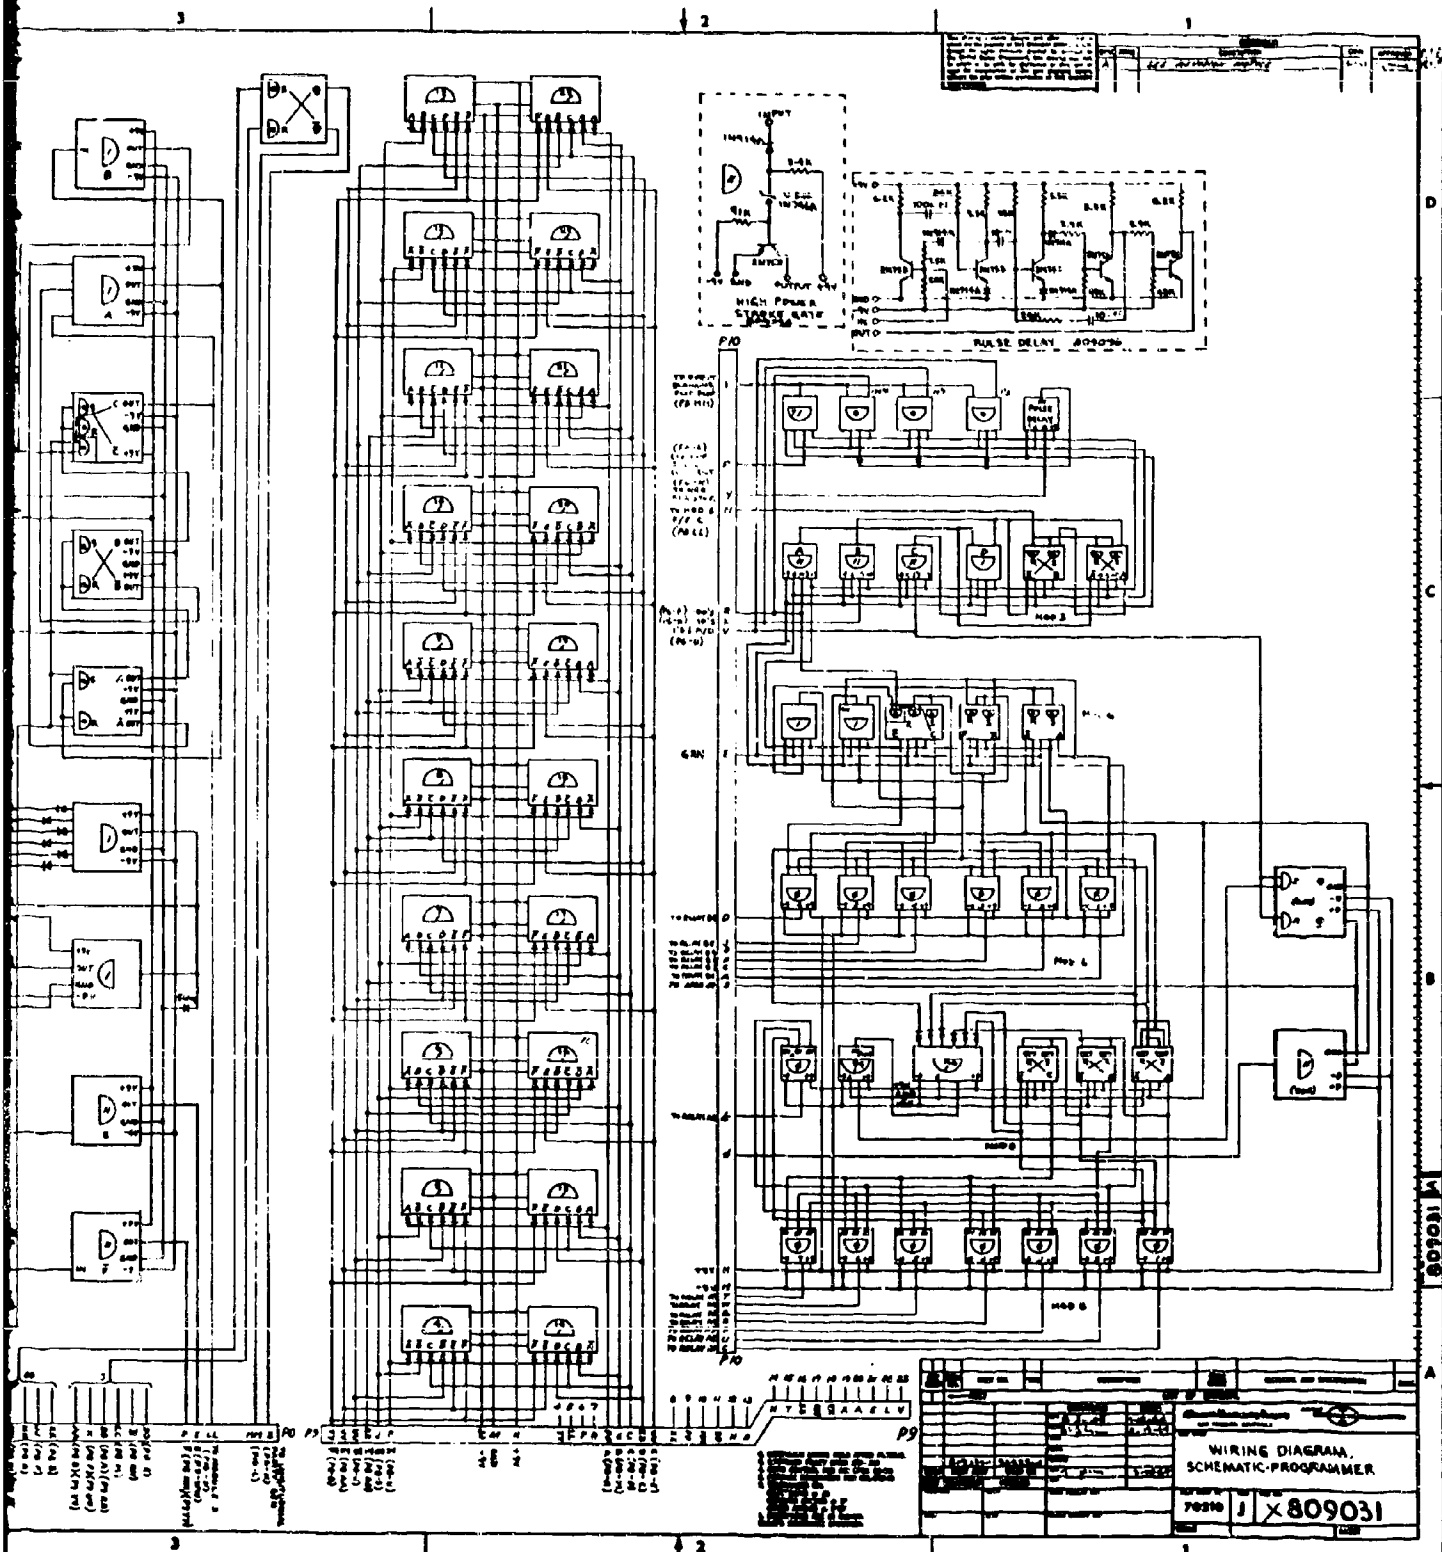


C


Schematic 898-308 for the Data Recorder System  
EMR-2, P/N 538956, is available from Elgin  
Research and Development, Division of Elgin  
National Watch Company, Elgin, Illinois,  
Drawing 898-308 Project 20898.

**APPENDIX III**

**CIRCUIT SCHEMATICS FOR F-105D AND F-4C  
SYSTEM GROUND CALIBRATOR**

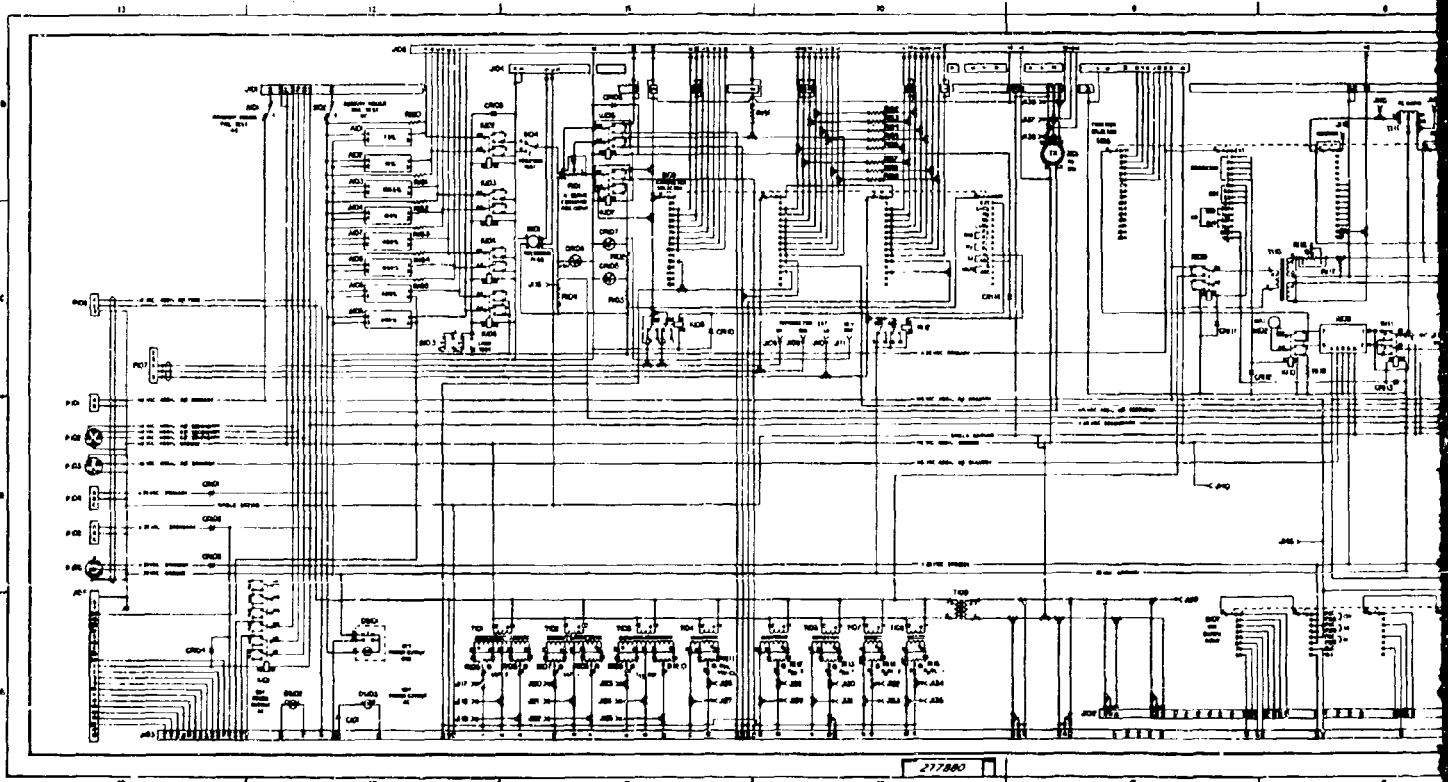

A

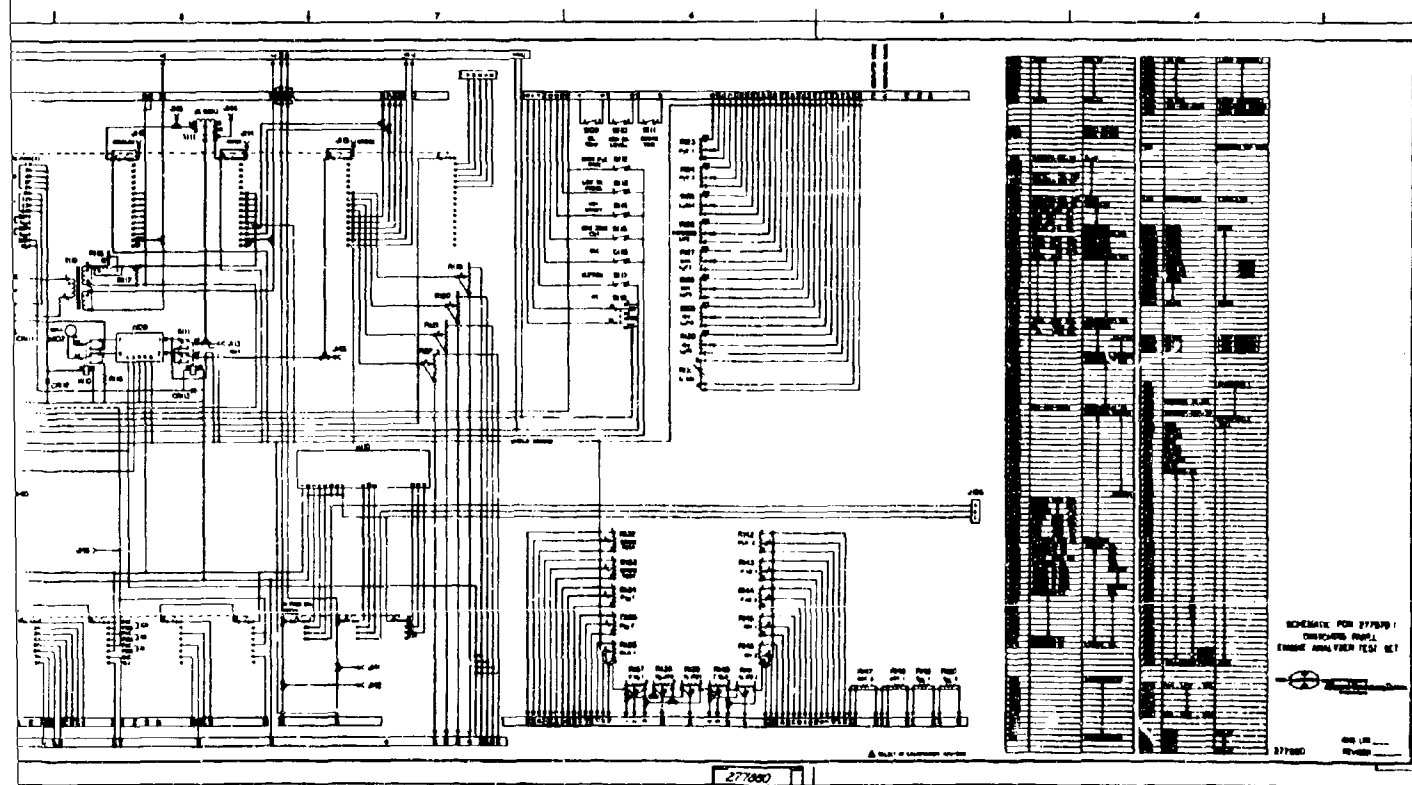

13

UNCLASSIFIED

Security Classification

DOCUMENT CONTROL DATA - R&D		
(Security classification of title, body of abstract and indexing annotation must be entered when the overall report is classified)		
1. ORIGINATING ACTIVITY (Corporate author)		2a. REPORT SECURITY CLASSIFICATION
AirResearch Mfg. Company, a Division of The Garrett Corporation, 2525 W. 190th Street, Torrance, Calif.		Unclassified
		2b. GROUP
		NA
3. REPORT TITLE		
TURBOJET ENGINE ANALYZER SYSTEM		
4. DESCRIPTIVE NOTES (Type of report and inclusive dates)		
Final Report May 1963-July 1965		
5. AUTHOR(S) (Last name, first name, initial)		
HARRIS, WHITE J.		
6. REPORT DATE	7a. TOTAL NO. OF PAGES	7b. NO. OF REFS
June 1969	153	None
8a. CONTRACT OR GRANT NO.	9a. ORIGINATOR'S REPORT NUMBER(S)	
AF 33(657)11503	None	
a. PROJECT NO. 3147		
c. Task No. 314701	9b. OTHER REPORT NO(S) (Any other numbers that may be assigned to this report)	
d. Item No. 10	SEG-TR-67-44	
10. AVAILABILITY/LIMITATION NOTES This document is subject to special export controls, and each transmittal to foreign governments or foreign nationals may be made only with prior approval of Deputy of Engineering, Directorate of Propulsion & Power Subsystem Engineering ASNJD, Wright-Patterson Air Force Base, Ohio, 45433.		
11. SUPPLEMENTARY NOTES	12. SPONSORING MILITARY ACTIVITY	
None	Systems Engineering Group Aeronautical Systems Division AF Systems Command, Wright-Patterson AFB, Ohio	
13. ABSTRACT		
<p>This report describes Turbojet Engine Analyzer System as developed for application to J75-19W and J79-15 engines. Included are descriptions and design details of each major system component. The theory of operation, the modular breakdown, the self-test provisions, and the adjustments of the components are presented. Similar material is included on the System Ground Calibration, a piece of ground support equipment.</p> <p>The system is designed to monitor, analyze, and assess complete turbojet engine performance during ground and flight operations for the purpose of detecting required maintenance and diagnosing incipient or actual failures.</p> <p>This abstract is subject to special export controls, and each transmittal to foreign governments or foreign nationals may be made only with prior approval of Deputy of Engineering, Directorate of Propulsion &amp; Power Subsystem Engineering, ASNJD, Wright-Patterson Air Force Base, Ohio.</p>		

DD FORM 1473

1 JAN 64

UNCLASSIFIED

Security Classification

UNCLASSIFIED

Security Classification

14. KEY WORDS	LINK A		LINK B		LINK C	
	ROLE	WT	ROLE	WT	ROLE	WT
Engine Analyzer						
Jet Engine Analyzer						
Engine Performance Computation						
Airborne Data Acquisition						
Engine Data Processing						

## INSTRUCTIONS

1. **ORIGINATING ACTIVITY:** Enter the name and address of the contractor, subcontractor, grantee, Department of Defense activity or other organization (corporate author) issuing the report.

2a. **REPORT SECURITY CLASSIFICATION:** Enter the overall security classification of the report. Indicate whether "Restricted Data" is included. Marking is to be in accordance with appropriate security regulations.

2b. **GROUP:** Automatic downgrading is specified in DoD Directive 5200.10 and Armed Forces Industrial Manual. Enter the group number. Also, when applicable, show that optional markings have been used for Group 3 and Group 4 as authorized.

3. **REPORT TITLE:** Enter the complete report title in all capital letters. Titles in all cases should be unclassified. If a meaningful title cannot be selected without classification, show title classification in all capitals in parenthesis immediately following the title.

4. **DESCRIPTIVE NOTES:** If appropriate, enter the type of report, e.g., interim, progress, summary, annual, or final. Give the inclusive dates when a specific reporting period is covered.

5. **AUTHOR(S):** Enter the name(s) of author(s) as shown on or in the report. Enter last name, first name, middle initial. If military, show rank and branch of service. The name of the principal author is an absolute minimum requirement.

6. **REPORT DATE:** Enter the date of the report as day, month, year; or month, year. If more than one date appears on the report, use date of publication.

7a. **TOTAL NUMBER OF PAGES:** The total page count should follow normal pagination procedures, i.e., enter the number of pages containing information.

7b. **NUMBER OF REFERENCES:** Enter the total number of references cited in the report.

8a. **CONTRACT OR GRANT NUMBER:** If appropriate, enter the applicable number of the contract or grant under which the report was written.

8b, 8c, & 8d. **PROJECT NUMBER:** Enter the appropriate military department identification, such as project number, subproject number, system numbers, task number, etc.

9a. **ORIGINATOR'S REPORT NUMBER(S):** Enter the official report number by which the document will be identified and controlled by the originating activity. This number must be unique to this report.

9b. **OTHER REPORT NUMBER(S):** If the report has been assigned any other report numbers (either by the originator or by the sponsor), also enter this number(s).

10. **AVAILABILITY/LIMITATION NOTICES:** Enter any limitations on further dissemination of the report, other than those

imposed by security classification, using standard statements such as:

- (1) "Qualified requesters may obtain copies of this report from DDC."
- (2) "Foreign announcement and dissemination of this report by DDC is not authorized."
- (3) "U. S. Government agencies may obtain copies of this report directly from DDC. Other qualified DDC users shall request through \_\_\_\_\_."
- (4) "U. S. military agencies may obtain copies of this report directly from DDC. Other qualified users shall request through \_\_\_\_\_."
- (5) "All distribution of this report is controlled. Qualified DDC users shall request through \_\_\_\_\_."

If the report has been furnished to the Office of Technical Services, Department of Commerce, for sale to the public, indicate this fact and enter the price, if known.

11. **SUPPLEMENTARY NOTES:** Use for additional explanatory notes.

12. **SPONSORING MILITARY ACTIVITY:** Enter the name of the departmental project office or laboratory sponsoring (paying for) the research and development. Include address.

13. **ABSTRACT:** Enter an abstract giving a brief and factual summary of the document indicative of the report, even though it may also appear elsewhere in the body of the technical report. If additional space is required, a continuation sheet shall be attached.

It is highly desirable that the abstract of classified reports be unclassified. Each paragraph of the abstract shall end with an indication of the military security classification of the information in the paragraph, denoted as (TS), (S), (C), or (U).

There is no limitation on the length of the abstract. However, the suggested length is from 150 to 225 words.

14. **KEY WORDS:** Key words are technically meaningful terms or short phrases that characterize a report and may be used as index entries for cataloging the report. Key words must be selected so that no security classification is required. Identifiers, such as equipment model designation, trade name, military project code name, geographic location, may be used as key words but will be followed by an indication of technical content. The assignment of links, rules, and weights is optional.

UNCLASSIFIED

Security Classification